

## **Fuji FVR - E9S**

Pr 01	Frequency Setting	set 1
Pr 02	Operation method	set 1
Pr 03	Maximum Frequency	set ??? Hz (depend on motor)
Pr 04	Base frequency 1	set 60Hz
Pr 05	Rate voltage (output)	set 220 V
Pr 06	Acceleration time 1	set 3
Pr 07	Deceleration time 1	set 3
Pr 08	Torque boost 1	set 0
Pr 09	FMA voltage adjustment	set 99
Pr 10	Motor poles	set 4
Pr 16	Electronic Thermal overload relay 1	set ???Amp (depend on motor)
Pr 36	Frequency limiter / High	set ???Hz (depend on motor)
Pr 71	Motor 1 / rated current	set ??? Amp (depend on motor)