




## How to remove spindle R8 / 30 taper

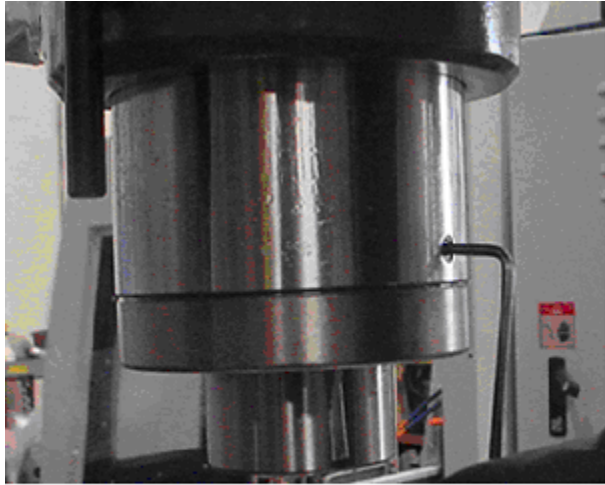

Move Spindle down and Lock. Remove set screw

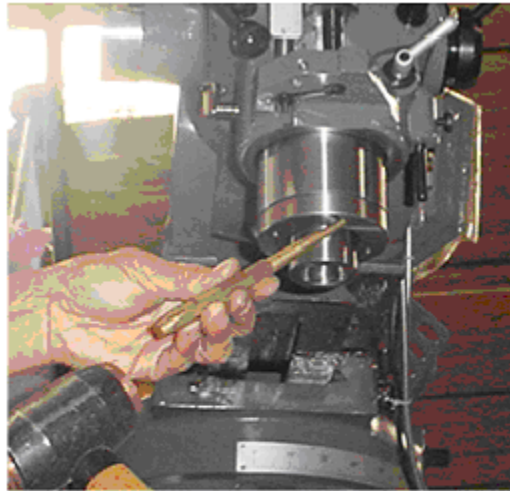

Turn clock wise to remove  
Nose cap (left hand thread)

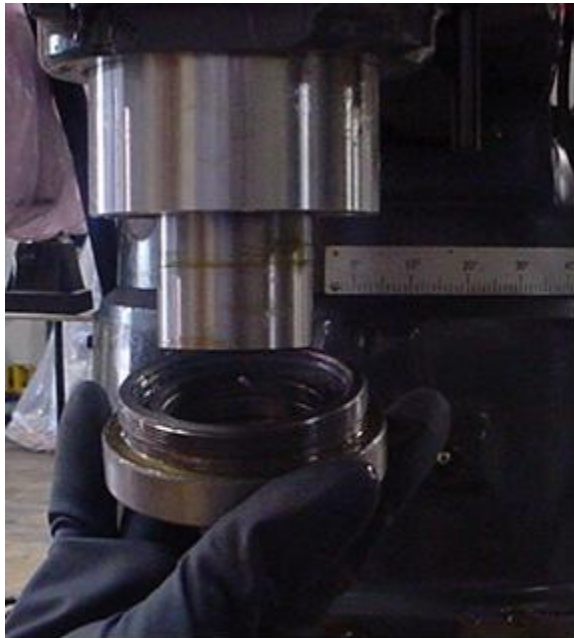

Remove nose cap



One person hold spindle R-8. Another one use brass bar and hammer to hit spindle down.