

How to change plc tool changer to none tool change

Press Blank Blue key → soft key → press ► → Opt. Maker → enter password: MIRL and input.
Changing turret type 1 to 0 and input.