

E320 - E216 - B series machine

For all machine E320, E216 and B series, we ship out with skid like picture below.




1. Use forklift to remove the skid

Remove skid from Machine



2. Use crane: Open the Y axis cover and move Y axis to the end of travel. Look at the pictures below

Use strap to hook up to 2 eye bolt

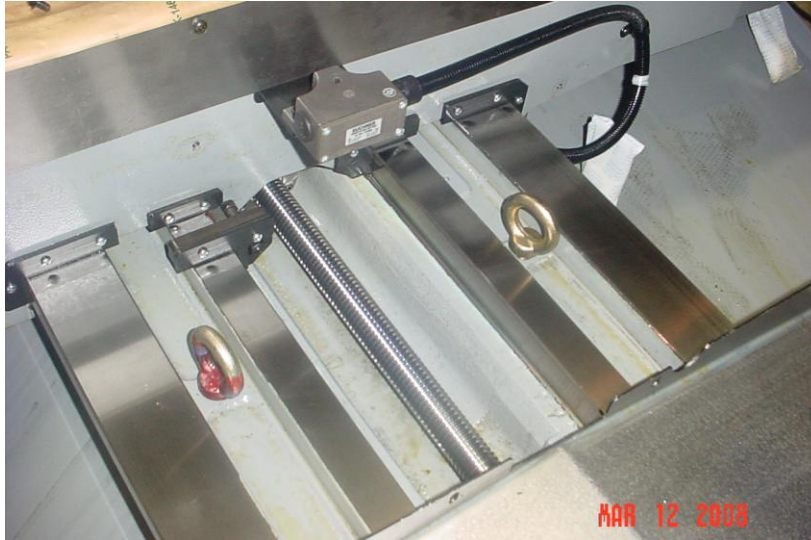

Reinforced cable go through that hole (picture) and another side

