

Milling Manual Machine

Unload and remove skid from knee mill manual machine

Load and unload

Hoist with reinforced cable and eye bolt to remove skid from machine



Use forklift to remove skid from machine



Keep the work table and saddle in the proper position to keep the machine balance. Do not hoist the machine too high, the best position is to keep the machine base approximately two inches from the ground