Preface

Thank you for choosing DELTA's high-performance VFD-B Series. The VFD-B Series is manufactured with high-quality components and materials and incorporates the latest microprocessor technology available.

This manual is to be used for the installation, parameter setting, troubleshooting, and daily maintenance of the AC motor drive. To guarantee safe operation of the equipment, read the following safety guidelines before connecting power to the AC motor drive. Keep this operating manual at hand and distribute to all users for reference.

To ensure the safety of operators and equipment, only qualified personnel familiar with AC motor drive are to do installation, start-up and maintenance. Always read this manual thoroughly before using VFD-B series AC Motor Drive, especially the WARNING, DANGER and CAUTION notes. Failure to comply may result in personal injury and equipment damage. If you have any questions, please contact your dealer.

PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



- 1. AC input power must be disconnected before any wiring to the AC motor drive is made.
- A charge may still remain in the DC-link capacitors with hazardous voltages, even if the power
 has been turned off. To prevent personal injury, please ensure that power has turned off before
 opening the AC motor drive and wait ten minutes for the capacitors to discharge to safe voltage
 levels.
- 3. Never reassemble internal components or wiring.
- 4. The AC motor drive may be destroyed beyond repair if incorrect cables are connected to the input/output terminals. Never connect the AC motor drive output terminals U/T1, V/T2, and W/T3 directly to the AC mains circuit power supply.
- Ground the VFD-B using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed. Refer to the Basic Wiring Diagram.
- VFD-B series is used only to control variable speed of 3-phase induction motors, NOT for 1phase motors or other purpose.
- 7. VFD-B series shall NOT be used for life support equipment or any life safety situation.



- DO NOT use Hi-pot test for internal components. The semi-conductor used in AC motor drive easily damage by high-voltage.
- There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. To prevent damage to these components, do not touch these components or the circuit boards with metal objects or your bare hands.
- 3. Only qualified persons are allowed to install, wire and maintain AC motor drives.



- 1. Some parameters settings can cause the motor to run immediately after applying power.
- DO NOT install the AC motor drive in a place subjected to high temperature, direct sunlight, high humidity, excessive vibration, corrosive gases or liquids, or airborne dust or metallic particles.
- Only use AC motor drives within specification. Failure to comply may result in fire, explosion or electric shock
- To prevent personal injury, please keep children and unqualified people away from the equipment.
- 5. When the motor cable between AC motor drive and motor is too long, the layer insulation of the motor may be damaged. Please use a frequency inverter duty motor or add an AC output reactor to prevent damage to the motor. Refer to appendix B Reactor for details.
- 6. The rated voltage for AC motor drive must be \leq 240V (\leq 480V for 460V models, \leq 600V for 575V models) and the mains supply current capacity must be \leq 5000A RMS (\leq 10000A RMS for the \geq 40hp (30kW) models).

Table of Contents

Preface	i
Table of Contents	iii
Chapter 1 Introduction	1-1
1.1 Receiving and Inspection	1-1
1.1.1 Nameplate Information	1-1
1.1.2 Model Explanation	1-1
1.1.3 Series Number Explanation	1-2
1.1.4 Drive Frames	1-2
1.2 Appearances	1-2
1.3 Preparation for Installation and Wiring	1-4
1.3.1 Remove Keypad	1-4
1.3.2 Remove Front Cover	1-6
1.4 Lifting	1-7
1.5 Storage	1-8
Chapter 2 Installation and Wiring	2-1
2.1 Ambient Conditions	2-1
2.2 Installation	2-1
2.3 Dimensions	2-3
2.4 Wiring	2-12
2.4.1 Basic Wiring	2-13

	2.4.2 External Wiring	2-18
	2.4.3 Main Terminals Connections	2-19
	2.4.4 Control Terminals	2-21
	2.4.5 Main Circuit Terminals	2-26
C	hapter 3 Start Up	3-1
	3.1 Preparations before Start-up	3-1
	3.2 Operation Method	3-2
	3.3 Trial Run	3-2
C	hapter 4 Digital Keypad Operation	4-1
	4.1 Description of the Digital Keypad VFD-PU01	4-1
	4.2 How to Operate the Digital Keypad VFD-PU01	4-3
C	hapter 5 Parameters	5-1
	5.1 Summary of Parameter Settings	5-2
	5.2 Parameter Settings for Applications	5-18
	5.3 Description of Parameter Settings	5-24
C	hapter 6 Fault Code Information	6-1
	6.1 Common Problems and Solutions	6-1
	6.2 Reset	6-4
C	hapter 7 Troubleshooting	7-1
	7.1 Over Current (OC)	7-1
	7.2 Ground Fault	7-2
	7.3 Over Voltage (OV)	7-2
	7.4 Low Voltage (Lv)	7-3
	7.5 Over Heat (OH)	7-4
	7.6 Overload	7_4

7.7 Display of PU01 is Abnormal7-5	
7.8 Phase Loss (PHL)	
7.9 Motor cannot Run	
7.10 Motor Speed cannot be Changed7-7	
7.11 Motor Stalls during Acceleration	
7.12 The Motor does not Run as Expected7-8	
7.13 Electromagnetic/Induction Noise	
7.14 Environmental Condition	
7.15 Affecting Other Machines	
Chapter 8 Maintenance and Inspections8-1	
Appendix A Specifications	
Appendix B Accessories B-1	
B.1 All Braking Resistors & Braking Units Used in AC Motor DrivesB-1	
B.1.1 Dimensions and Weights for Braking ResistorsB-3	
B.1.2 Specifications for Braking Unit	
B.1.3 Dimensions for Braking Unit	
B.2 AMD - EMI Filter Cross ReferenceB-7	
B.2 AMD - EMI Filter Cross Reference	
B.2.1 Dimensions	
B.2.1 Dimensions	
B.2.1 Dimensions B-11 B.3 PG Card (for Encoder) B-19 B.3.1 PG02 Installation B-19	
B.2.1 Dimensions B-11 B.3 PG Card (for Encoder) B-19 B.3.1 PG02 Installation B-19 B.3.2 PG03 B-24	

B.6.1 AC Input Reactor Recommended Value	B-30
B.6.2 AC Output Reactor Recommended Value	B-31
B.6.3 Applications for AC Reactor	B-33
B.7 Zero Phase Reactor (RF220X00A)	B-35
B.8 DC Choke Recommended Values	B-36
B.9 Non-fuse Circuit Breaker Chart	B-38
B.10 Fuse Specification Chart	B-39
B.11 PU06	B-40
B.11.1 Description of the Digital keypad VFD-PU06	B-40
B.11.2 Explanation of Display Message	B-40
B.11.3 Operation Flow Chart	B-41
Appendix C How to Select the Right AC Motor Drive	C-1
C.1 Capacity Formulas	C-2
C.2 General Precaution	C-4
C.3 How to Choose a Suitable Motor	C-5

Chapter 1 Introduction


1.1 Receiving and Inspection

This VFD-B AC motor drive has gone through rigorous quality control tests at the factory before shipment. After receiving the AC motor drive, please check for the following:


- Check to make sure that the package includes an AC motor drive, the User Manual/Quick Start and CD, dust covers and rubber bushings.
- Inspect the unit to assure it was not damaged during shipment.
- Make sure that the part number indicated on the nameplate corresponds with the part number of your order.

1.1.1 Nameplate Information


Example for 1HP/0.75kW 3-phase 230V AC motor drive

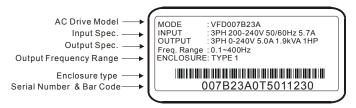

1.1.2 Model Explanation

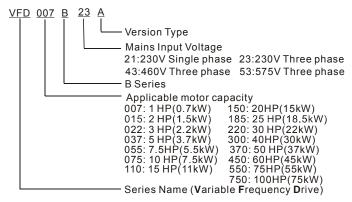

1.1.3 Series Number Explanation

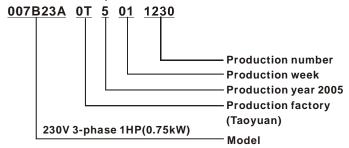

If the nameplate information does not correspond to your purchase order or if there are any problems, please contact your distributor.

1.1.4 Drive Frames

Frame	Power range	Models
Α	1hp (0.75kW)	VFD007B23A/43A/53A
A1	1-2hp (0.75-1.5kW)	VFD007B21A, VFD015B21A/23A/43A/53A
A2	2-3hp (1.5-2.2kW)	VFD015B21B/23B, VFD022B23B/43B/53A
В	3-5hp (2.2-3.7kW)	VFD022B21A, VFD037B23A/43A/53A
0 75.451 (5.5.441)	7.5.456- (5.5.441)	VFD055B23A/43A/53A, VFD075B23A/43A/53A,
С	7.5-15hp (5.5-11kW)	VFD110B23A/43A/53A
Б	20 20hn (45 22k/M)	VFD150B23A/43A/53A, VFD185B23A/43A/53A,
D	D 20-30hp (15-22kW) VFD220B23A/43A/53A	VFD220B23A/43A/53A
_	40 00h (20 45l-)A()	VFD300B43A/53A, VFD370B43A/53A,
E 40-60hp (30-45kV	40-60np (30-45kvv)	VFD450B43A/53A
- 4	40 4001 - (00 75114)	VFD300B23A, VFD370B23A, VFD550B43C/53A,
E1	40-100hp (30-75kW)	VFD750B43C/53A
F	75-100hp (55-75kW)	VFD550B43A, VFD750B43A


Please refer to Chapter 2.3 for exact dimensions.

1.2 Appearances

(Refer to chapter 2.3 for exact dimensions)


1-3HP/0.75-2.2kW (Frame A, A1, A2)

3-5HP/2.2-3.7kW (Frame B)

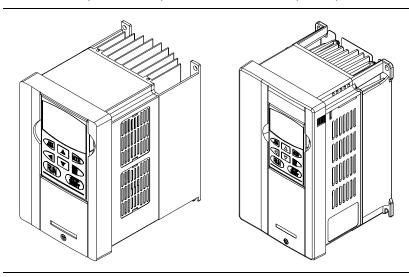


7.5-15HP/5.5-11kW (Frame C)

20-30HP/15-22kW (Frame D)

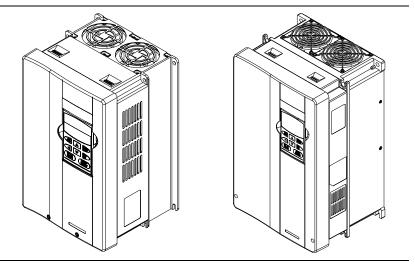

40-100HP/30-75kW (Frame E, E1)

75-100HP/55-75kW (Frame F)

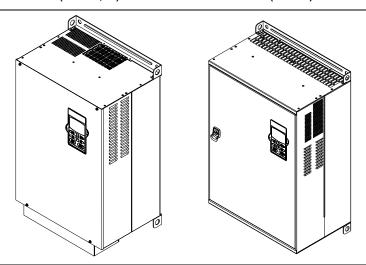


1.3 Preparation for Installation and Wiring


1.3.1 Remove Keypad

1-3HP/0.75-2.2kW (Frame A, A1, A2)

3-5HP/2.2-3.7kW (Frame B)

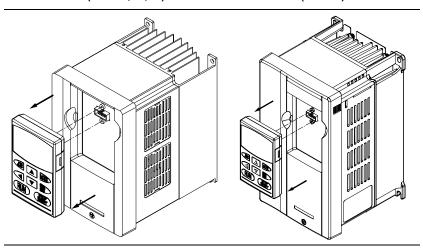


20-30HP/15-22kW (Frame D)

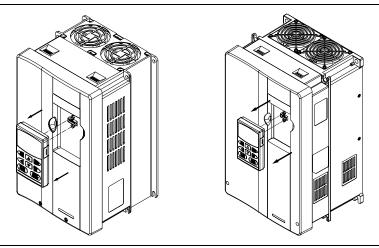

40-100HP/30-75kW (Frame E, E1)


75-100HP/55-75kW (Frame F)

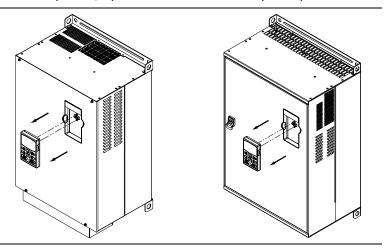

1.3.2 Remove Front Cover


1-3HP/0.75-2.2kW (Frame A, A1, A2)


3-5HP/2.2-3.7kW (Frame B)

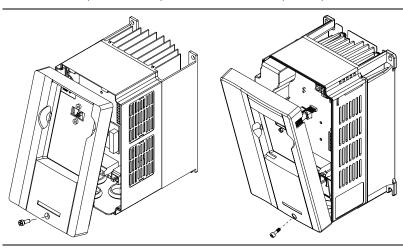

7.5-15HP/5.5-11kW (Frame C)

20-30HP/15-22kW (Frame D)

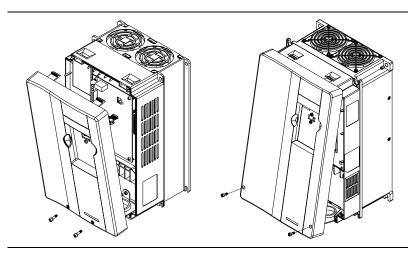


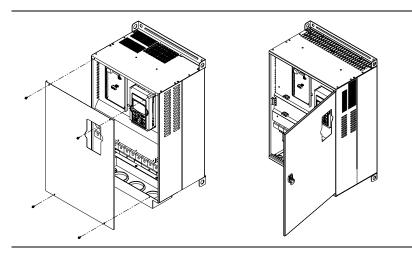

1.4 Lifting


Please carry only fully assembled AC motor drives as shown in the following.

For 40-100HP (Frame E, E1 and F)

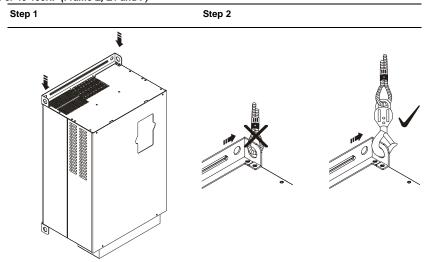

Step 3

Step 4

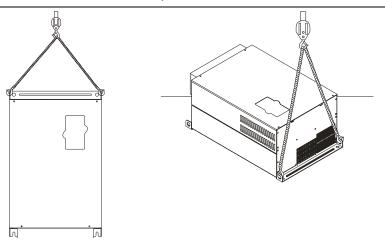

1.5 Storage

The AC motor drive should be kept in the shipping carton or crate before installation. In order to retain the warranty coverage, the AC motor drive should be stored properly when it is not to be used for an extended period of time. Storage conditions are:

Store in a clean and dry location free from direct sunlight or corrosive fumes.

Store within an ambient temperature range of -20 °C to +60 °C.

Store within a relative humidity range of 0% to 90% and non-condensing environment.

Store within an air pressure range of 86 kPA to 106kPA.



- DO NOT store in an area with rapid changes in temperature. It may cause condensation and frost.
- DO NOT place on the ground directly. It should be stored properly. Moreover, if the surrounding environment is humid, you should put exsiccator in the package.
- 3. If the AC motor drive is stored for more than 3 months, the temperature should not be higher than 30 °C. Storage longer than one year is not recommended, it could result in the degradation of the electrolytic capacitors.
- 4. When the AC motor drive is not used for longer time after installation on building sites or places with humidity and dust, it's best to move the AC motor drive to an environment as stated above.

Chapter 2 Installation and Wiring

2.1 Ambient Conditions

Install the AC motor drive in an environment with the following conditions:

Operation Air Temperature: -10 ~ +40°C (14 ~ 104°F) for UL & cUL

-10 ~ +50°C (14 ~ 122°F) without dust cover.

Relative Humidity: <90%, no condensation allowed

Atmosphere pressure: 86 ~ 106 kPa

Installation Site Altitude: <1000m Vibration: <20Hz: 9.80 m/s² (1G) max

 $20 \sim 50$ Hz: 5.88 m/s² (0.6G) max

Storage Temperature: -20°C ~ +60°C (-4°F ~ 140°

Temperature: -20°C ~ +60°C (-4°F ~ 140°F) Relative Humidity: <90%, no condensation allowed

Atmosphere pressure: 86 ~ 106 kPa

Vibration: <20Hz: 9.80 m/s² (1G) max 20 ~ 50Hz: 5.88 m/s² (0.6G) max

Pollution Degree 2: good for a factory type environment.



Transportation


- Operating, storing or transporting the AC motor drive outside these conditions may cause damage to the AC motor drive.
- 2. Failure to observe these precautions may void the warranty!


2.2 Installation

- Mount the AC motor drive vertically on a flat vertical surface object by screws. Other directions are not allowed.
- The AC motor drive will generate heat during operation. Allow sufficient space around the unit for heat dissipation.
- The heat sink temperature may rise to 90°C when running. The material on which the AC motor drive is mounted must be noncombustible and be able to withstand this high temperature.
- 4. When AC motor drive is installed in a confined space (e.g. cabinet), the surrounding temperature must be within 10 ~ 40°C with good ventilation. DO NOT install the AC motor drive in a space with bad ventilation.

- 5. When installing multiple AC more drives in the same cabinet, they should be adjacent in a row with enough space in-between. When installing one AC motor drive below another one, use a metal separation between the AC motor drives to prevent mutual heating.
- Prevent fiber particles, scraps of paper, saw dust, metal particles, etc. from adhering to the heatsink

Minimum Mounting Clearances

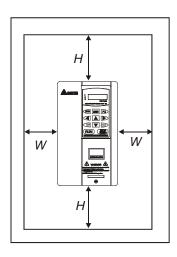

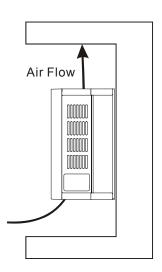



HP	W	Н
nr nr	mm (inch)	mm (inch)
1-5HP	50 (2)	150 (6)
7.5-20HP	75 (3)	175 (7)
25-75HP	75 (3)	200 (8)
100HP and above	75 (3)	250 (10)


2.3 Dimensions


(Dimensions are in millimeter and [inch])

Frame A: VFD007B23A/43A/53A

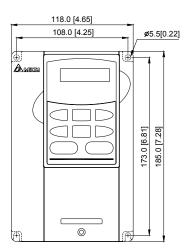


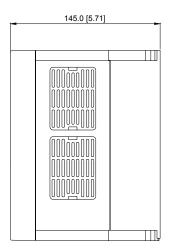


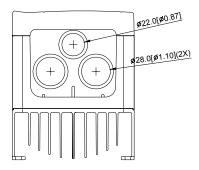


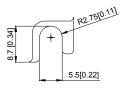



Frame A1: VFD007B21A, VFD015B21A/23A/43A/53A

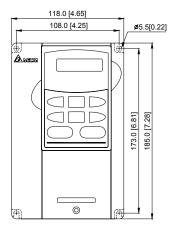


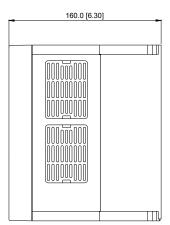


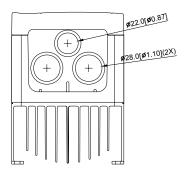


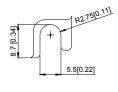


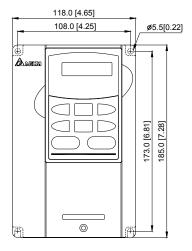

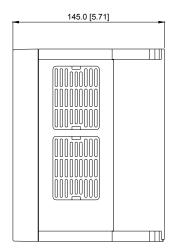


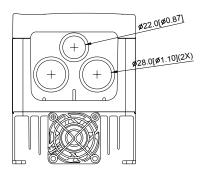

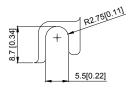


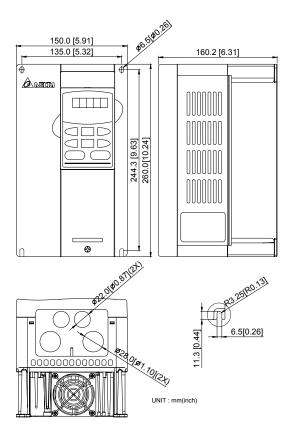


Frame C: VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A

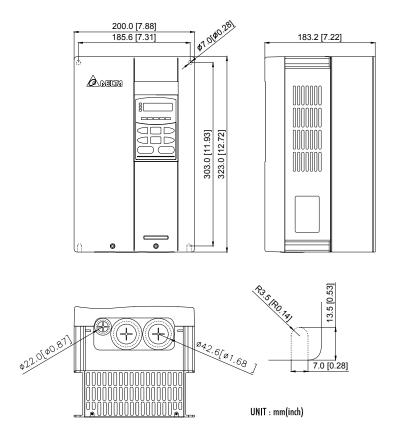


Frame D: VFD150B23A/43A/53A, VFD185B23A/43A/53A, VFD220B23A/43A/53A

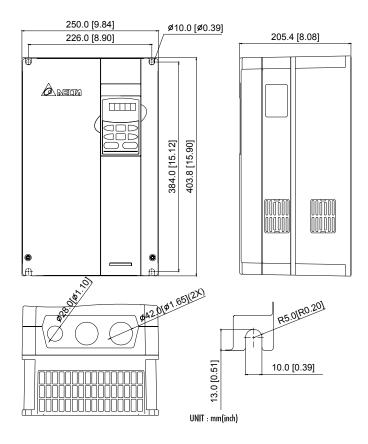


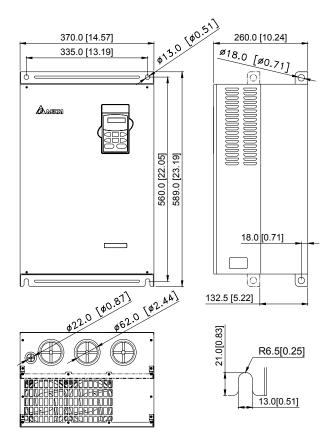


Frame E1: VFD300B23A, VFD370B23A, VFD550B43C/53A, VFD750B43C/53A

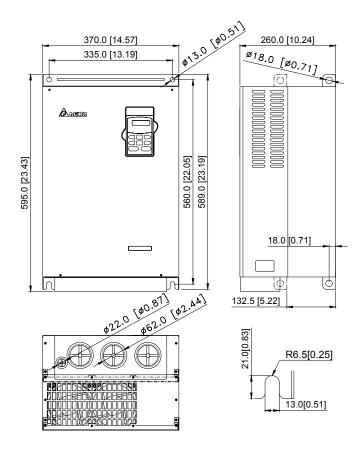

Frame F: VFD550B43A, VFD750B43A

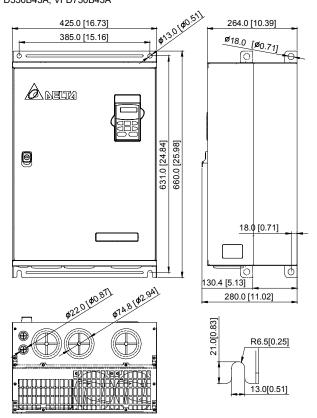

VFD-PU01

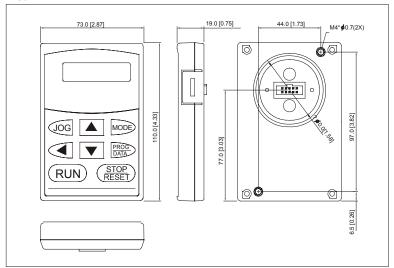

2.4 Wiring

After removing the front cover, check if the power and control terminals are clear. Be sure to observe the following precautions when wiring.

■ General Wiring Information

Applicable Codes

All VFD-B series are Underwriters Laboratories, Inc. (UL) and Canadian Underwriters Laboratories (cUL) listed, and therefore comply with the requirements of the National Electrical Code (NEC) and the Canadian Electrical Code (CEC).

Installation intended to meet the UL and cUL requirements must follow the instructions provided in "Wiring Notes" as a minimum standard. Follow all local codes that exceed UL and cUL requirements. Refer to the technical data label affixed to the AC motor drive and the motor nameplate for electrical data.

The "Line Fuse Specification" in Appendix B, lists the recommended fuse part number for each B-Series part number. These fuses (or equivalent) must be used on all installations where compliance with U.L. standards is a required.

2.4.1 Basic Wiring

- Make sure that power is only applied to the R/L1, S/L2, T/L3 terminals. Failure to comply may result in damage to the equipment. The voltage and current should lie within the range as indicated on the nameplate.
- Check following items after finishing the wiring:
 - 1. Are all connections correct?
 - 2 No loose wires?
 - 3. No short-circuits between terminals or to ground?

A charge may still remain in the DC bus capacitors with hazardous voltages even if the power has been turned off. To prevent personal injury, please ensure that the power is turned off and wait ten minutes for the capacitors to discharge to safe voltage levels before opening the AC motor drive



- All the units must be grounded directly to a common ground terminal to prevent electric shock, fire and interference.
- Only qualified personnel familiar with AC motor drives is allowed to perform installation, wiring and commissioning.
- 3. Make sure that the power is off before doing any wiring to prevent electric shocks.

Basic Wiring Diagrams

Users must connect wires according to the circuit diagrams on the following pages. Do not plug a modem or telephone line to the RS-485 communication port or permanent damage may result. Terminals 1 & 2 are the power supply for the optional copy keypad PU06 only and should not be used for RS-485 communication.

Chapter 2 Installation and Wiring | VFD-B Series Figure 1 for models of VFD-B Series VFD007B21A/23A/43A/53A. VFD015B21A/21B/23A/23B/43A/53A. VFD022B23B/43B/53A

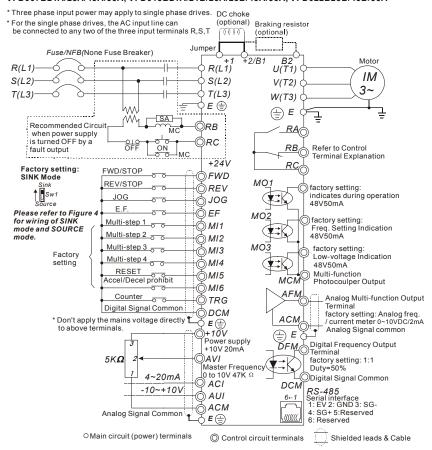


Figure 2 for models of VFD-B Series VFD022B21A, VFD037B23A/43A/53A

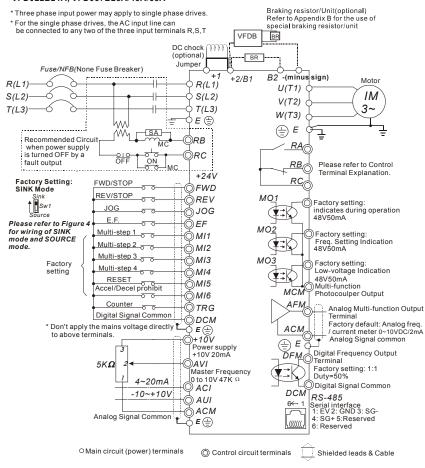


Figure 3 for models of VFD-B Series

VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A, VFD150B23A/43A/53A, VFD150B23A/43A/53A, VFD150B23A/43A/53A, VFD370B23A/43A/53A, VFD370B23A/43A/53A, VFD370B23A/43A/53A, VFD350B43A/43C/53A, VFD350B43A/53C/53A, VFD350B43A/53A, VFD350B43A, VFD350B43A/53A, VFD350B43A, VFD350B43A, VFD350B4A, VFD350B4A, VFD350B4A, VFD350B4A, VFD350B4A, VFD350B4A, VFD350B4A, VFD350B4A

* Three phase input power may apply to single phase drives.




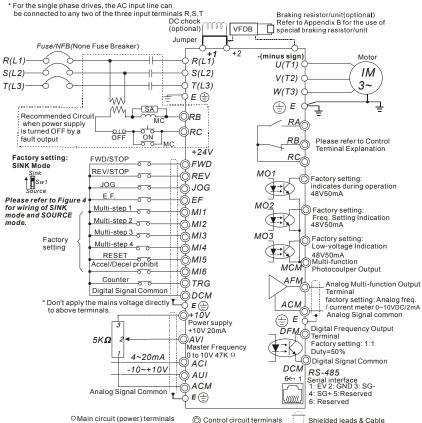


Figure 4 Wiring for SINK mode and SOURCE mode

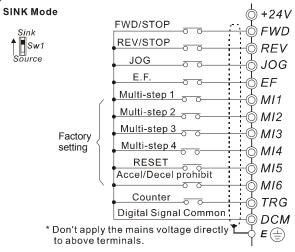

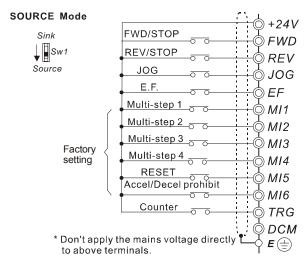

2.4.2 External Wiring

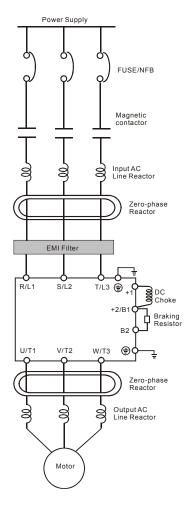

Items	Explanations
Power supply	Please follow the specific power supply requirements shown in Appendix A.
Fuse/NFB (Optional)	There may be an inrush current during power up. Please check the chart of Appendix B and select the correct fuse with rated current. Use of an NFB is optional.
Magnetic contactor (Optional)	Please do not use a Magnetic contactor as the I/O switch of the AC motor drive, as it will reduce the operating life cycle of the AC drive.
Input AC Line Reactor (Optional)	Used to improve the input power factor, to reduce harmonics and provide protection from AC line disturbances₌ (surges, switching spikes, short interruptions, etc.). AC line reactor should be installed when the power supply capacity is 500kVA or more and exceeds 6 times the inverter capacity, or the mains wiring distance ≤ 10m.
Zero-phase Reactor (Ferrite Core Common Choke) (Optional)	Zero phase reactors are used to reduce radio noise especially when audio equipment is installed near the inverter. Effective for noise reduction on both the input and output sides. Attenuation quality is good for a wide range from AM band to 10MHz. Appendix B specifies the zero phase reactor. (RF220X00A)
EMI filter (Optional)	To reduce electromagnetic interference, please refer to Appendix B for more details.
Braking Resistor (Optional)	Used to reduce the deceleration time of the motor. Please refer to the chart in Appendix B for specific Braking Resistors.
Output AC Line Reactor (Optional)	Motor surge voltage amplitude depends on motor cable length. For applications with long motor cable (>20m), it is necessary to install a reactor at the inverter output side.

2.4.3 Main Terminals Connections

Terminal Symbol		Explanation of Terminal Function
R, S, T	R/L1, S/L2, T/L3	AC line input terminals (1-phase/3-phase)
U, V, W	U/T1, V/T2, W/T3	AC drive output terminals for connecting 3-phase induction motor
P1, P2	+1, +2	Connections for DC Choke (optional)
P-B, P2/B1~B2	+2/B1~B2	Connections for Braking Resistor (optional)
P2~N, P2/B1~N	+2~(-), +2/B1~(-)	Connections for External Braking Unit (VFDB series)
(-	<u></u>	Earth connection, please comply with local regulations.

Mains power terminals (R/L1, S/L2, T/L3)

- Connect these terminals (R/L1, S/L2, T/L3) via a non-fuse breaker or earth leakage breaker to 3-phase AC power (some models to 1-phase AC power) for circuit protection. It is unnecessary to consider phase-sequence.
- It is recommended to add a magnetic contactor (MC) in the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of AC motor drives. Both ends of the MC should have an R-C surge absorber.
- Do NOT run/stop AC motor drives by turning the power ON/OFF. Run/stop AC motor drives by RUN/STOP command via control terminals or keypad. If you still need to run/stop AC drives by turning power ON/OFF, it is recommended to do so only ONCE per hour.
- Do NOT connect 3-phase models to a 1-phase power source.


Control circuit terminals (U, V, W)

When the AC drive output terminals U/T1, V/T2, and W/T3 are connected to the motor terminals U/T1, V/T2, and W/T3, respectively, the motor will rotate counterclockwise (as viewed on the shaft end of the motor) when a forward operation command is received. To permanently reverse the direction of motor rotation, switch over any of the two motor leads.




- DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- With long motor cables, high capacitive switching current peaks can cause over-current, high leakage current or lower current readout accuracy. To prevent this, the motor cable should be less than 20m for 3.7kW models and below. And the cable should be less than 50m for 5.5kW models and above. For longer motor cables use an AC output reactor.
- Use well-insulated motor, suitable for inverter operation.


Terminals [+1, +2] for connecting DC reactor

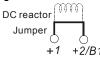

To improve power factor and reduce harmonics connect a DC reactor between terminals [+1,
 +2]. Please remove the jumper before connecting the DC reactor.

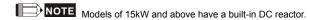

Terminals [+2/B1, B2] for connecting brake resistor and terminals [+1, +2/B1] for connecting external brake unit

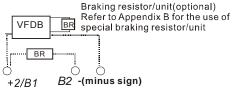


- Connect a brake resistor or brake unit in applications with frequent deceleration ramps, short deceleration time, too low braking torque or requiring increased braking torque.
- If the AC motor drive has a built-in brake chopper (all models of 11kW and below), connect the external brake resistor to the terminals [+2/B1, B2].
- Models of 15kW and above don't have a built-in brake chopper. Please connect an external optional brake unit (VFDB-series) and brake resistor. Refer to VFDB series user manual for details.
- Connect the terminals [+(P), -(N)] of the brake unit to the AC motor drive terminals [+2(+2/B1), (-)]. The length of wiring should be less than 5m with twisted cable.
- When not used, please leave the terminals [+2/B1, -] open.



1. Short-circuiting [B2] or [-] to [+2/B1] can damage the AC motor drive.


Grounding terminals (⊕)

- Make sure that the leads are connected correctly and the AC drive is properly grounded.
 (Ground resistance should not exceed 0.1 Ω.)
- Use ground leads that comply with local regulations and keep them as short as possible.
- Multiple VFD-B units can be installed in one location. All the units should be grounded directly to a common ground terminal, as shown in the figure below. Ensure there are no ground loops.

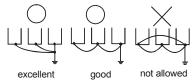

2.4.4 Control Terminals

Circuit diagram for digital inputs (SINK current 16mA.)

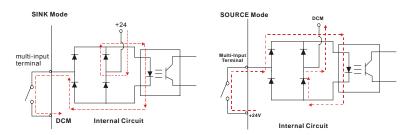

Terminal symbols and functions

Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM
FWD	Forward-Stop command	ON: Run in FWD direction OFF: Stop acc. to Stop Method
REV	Reverse-Stop command	ON: Run in REV direction OFF: Stop acc. to Stop Method
JOG	Jog command	ON: JOG operation OFF: Stop acc. to Stop Method

Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM
EF	External fault	ON: External Fault. Display "EF" and stop acc. To Stop Method. OFF: No fault
TRG	External counter input	ON: At every pulse counter is advanced by 1.
MI1	Multi-function Input 1	
MI2	Multi-function Input 2	
MI3	Multi-function Input 3	Refer to Pr.04-04 to Pr.04-09 for programming
MI4	Multi-function Input 4	the Multi-function Inputs.
MI5	Multi-function Input 5	
MI6	Multi-function Input 6	
DFM	Open Collector Output) DFM-DCM Max: 48V 50mA 50mA 100%	Pulse voltage output monitor signal, proportional to output frequency Duty-cycle: 50% Ratio: Pr.03-07 Min. load: 10ΚΩ Max. current: 50mA Max. voltage: 48VDC.
+24V	DC Voltage Source	+24VDC, 20mA used for SOURCE mode.
DCM	Digital Signal Common	Common for digital inputs and used for SINK mode.
RA	Multi-function Relay output (N.O.) a	Resistive Load: 5A(N.O.)/3A(N.C.) 240VAC
RB	Multi-function Relay output (N.C.) b	5A(N.O.)/3A(N.C.) 24VDC Inductive Load: 1.5A(N.O.)/0.5A(N.C.) 240VAC
RC	Multi-function Relay common	1.5A(N.O.)/0.5A(N.C.) 24VDC Refer to Pr.03-00 for programming
MO1	Multi-function Output 1 (Photocoupler)	Maximum 48VDC, 50mA Refer to Pr.03-01 to Pr.03-03 for programming
MO2	Multi-function Output 2 (Photocoupler)	

Terminal	Terminal Function	Factory Settings (SINK)		
Symbol	reiminai Function	ON: Con	nect to DCM	
MO3	Multi-function Output 3 (Photocoupler)	MO1~MO3-DCM MO1~ Internal Circ	MCM	
MCM	Multi-function output common	Common for Multi-func	tion Outputs	
+10V	Potentiometer power supply	+10VDC 20mA		
AVI	Analog voltage Input AVI circuit AVI ACM internal circuit	Impedance: Resolution: Range: Selection: Set-up:	47kΩ 10 bits 0 ~ 10VDC = 0 ~ Max. Output Frequency (Pr.01-00) Pr.02-00, Pr.02-13, Pr.10-00 Pr.04-00 ~ Pr.04-03	
ACI	Analog current Input ACI circuit ACI ACI circuit	Impedance: Resolution: Range: Selection: Set-up:	250Ω 10 bits 4 ~ 20mA = 0 ~ Max. Output Frequency (Pr.01-00) Pr.02-00, Pr.02-13, Pr.10-00 Pr.04-11 ~ Pr.04-14	
AUI	Auxiliary analog voltage input +10 -10V AUI circuit AUI circuit internal circuit	Impedance: Resolution: Range: Selection: Set-up:	47kΩ 10 bits -10 ~ +10VDC = 0 ~ Max. Output Frequency (Pr.01-00) Pr.02-00, Pr.02-13, Pr.10-00 Pr.04-15 ~ Pr.04-18	


Chapter 2 Installation and Wiring | VFD-B Series

Terminal Symbol	Terminal Function	Factory Settings (SINK) ON: Connect to DCM	
AFM	Analog output meter ACM circuit AFM 0-10V potentiometer Max. 2mA	0 to 10V, 2mA Impedance: 470Ω Output current 2mA max Resolution: 8 bits Range: 0 ~ 10VDC Function: Pr.03-05	
ACM	Analog control signal (common)	Common for AVI, ACI, AUI, AFM	

Control signal wiring size: 18 AWG (0.75 mm²) with shielded wire.

Analog input terminals (AVI, ACI, AUI, ACM)

- Analog input signals are easily affected by external noise. Use shielded wiring and keep it as short as possible (<20m) with proper grounding. If the noise is inductive, connecting the shield to terminal ACM can bring improvement.
- If the analog input signals are affected by noise from the AC motor drive, please connect a capacitor and ferrite core as indicated in the following diagrams:

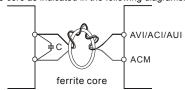

wind each wires 3 times or more around the core

Digital inputs (FWD, REV, JOG, EF, TRG, MI1~MI6, DCM)

When using contacts or switches to control the digital inputs, please use high quality components to avoid contact bounce.

Digital outputs (MO1, MO2, MO3, MCM)

- Make sure to connect the digital outputs to the right polarity, see wiring diagrams.
- When connecting a relay to the digital outputs, connect a surge absorber or fly-back diode across the coil and check the polarity.

General

- Keep control wiring as far as possible from the power wiring and in separate conduits to avoid interference. If necessary let them cross only at 90° angle.
- The AC motor drive control wiring should be properly installed and not touch any live power wiring or terminals.




- If a filter is required for reducing EMI (Electro Magnetic Interference), install it as close as possible to AC drive. EMI can also be reduced by lowering the Carrier Frequency.
- When using a GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200mA, and not less than 0.1-second detection time to avoid nuisance tripping.



Damaged insulation of wiring may cause personal injury or damage to circuits/equipment if it comes in contact with high voltage.

2.4.5 Main Circuit Terminals

Frame A, A1, A2: VFD007B21A/23A/43A/53A, VFD015B21A/21B//23A/23B/43A/53A, VFD022B23B/43B/53A

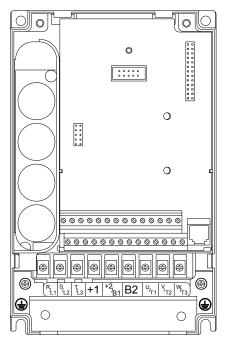

Control Terminal

Torque: 4Kgf-cm (3 in-lbf)

Wire: 12-24 AWG (3.3-0.2 mm²)


Power Terminal

Torque: 18 kgf-cm (15.6 in-lbf)

Wire Gauge: 10-18 AWG (5.3-0.8 mm²) stranded wire, 12-18 AWG (3.3-0.8 mm²) solid wire

Wire Type: Copper only, 75°C

Frame B: VFD022B21A, VFD037B23A/43A/53A

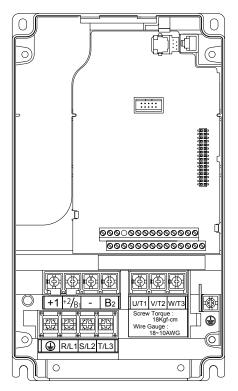


Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2mm²)

Power Terminal

Torque: 18 kgf-cm (15.6 in-lbf)

Wire Gauge: 10-18 AWG (5.3-0.8mm²) Wire Type: Stranded copper only, 75°C

Frame C: VFD055B23A/43A/53A, VFD075B23A/43A/53A, VFD110B23A/43A/53A

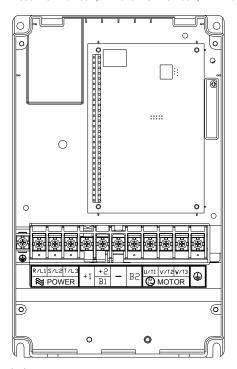

Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2mm²)


Power Terminal

Torque: 30Kgf-cm (26 in-lbf) Wire: 8-12 AWG (8.4-3.3mm²)

Wire Type: Stranded Copper only, 75°C

NOTE To connect 6 AWG (13.3 mm²) wires, use Recognized Ring Terminals

Frame D: VFD150B23A/43A/53A, VFD185B23A/43A/53A, VFD220B23A/43A/53A

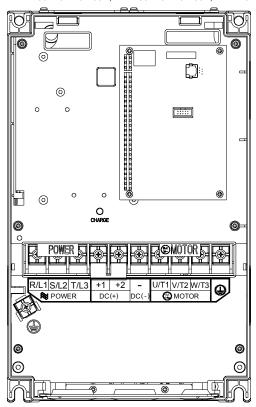

Torque: 4Kgf-cm (3 in-lbf) Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal


Torque: 30Kgf-cm (26 in-lbf) Wire: 2-8 AWG (33.6-8.4 mm²)

Wire Type: Stranded Copper only, 75°C

NOTE To connect 6 AWG (13.3 mm²) wires, use Recognized Ring Terminals

Chapter 2 Installation and Wiring | VFD-B Series

Frame E1: VFD300B23A, VFD370B23A, VFD550B43C, VFD750B43C, VFD550B53A, VFD750B53A

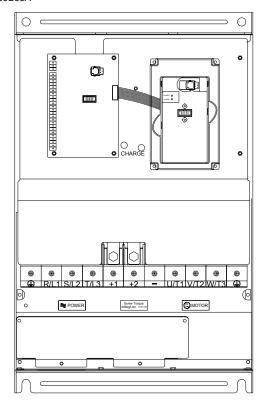

Control Terminal

Torque: 4Kgf-cm (3 in-lbf)


Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal

Torque: 200kgf-cm (173 in-lbf)

Wire Gauge: 1/0 - 3/0 AWG (67.4-85 mm²) Wire Type: Stranded copper only, 75°C

Frame E: VFD300B43A, VFD370B43A, VFD450B43A, VFD300B53A, VFD370B53A, VFD450B53A

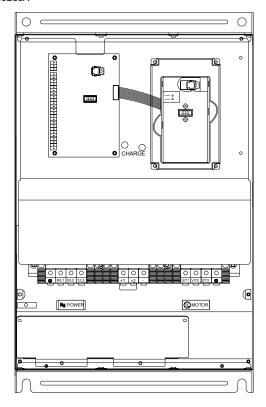


Torque: 4Kgf-cm (3 in-lbf)

Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal

Torque: 58.7kgf-cm (50.9 in-lbf) max. Wire Gauge: 2-6AWG (33.6-13.3 mm²) Wire Type: Stranded copper only, 75°C

Frame F: VFD550B43A, VFD750B43A

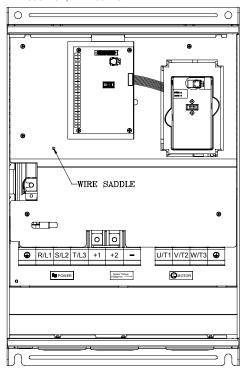

Torque: 4Kgf-cm (3 in-lbf)

Wire: 12-24 AWG (3.3-0.2 mm²)

Power Terminal

Torque: 200 kgf-cm (173 in-lbf)

Wire: VFD550B43A : 2/0 AWG (67.4 mm²) VFD750B43A: 3/0 AWG (85 mm²)

Wire Type: Stranded copper only, 75°C

Chapter 3 Start Up

3.1 Preparations before Start-up

Carefully check the following items before proceeding.

- Make sure that the wiring is correct. In particular, check that the output terminals U, V, W. are NOT connected to power and that the drive is well grounded.
- Verify that there are no short-circuits between terminals and from terminals to ground or mains power.
- Check for loose terminals, connectors or screws.
- Verify that no other equipment is connected to the AC motor
- Make sure that all switches are OFF before applying power to ensure that the AC motor drive doesn't start running and there is no abnormal operation after applying power.
- Make sure that the front cover is well installed before applying power.
- Do NOT operate the AC motor drive with humid hands.
- Check following items after applying power:
 - The keypad should light up as follows (normal status with no error)



When power is ON, LEDs "F", "STOP" and "FWD" should light up. The display will show "60.00" with the least signification "0" flashing.

 If the drive has built-in fan (2.2kW and above) it should run. The factory setting of Fan Control Pr.03-12=00 (Fan always on).

3.2 Operation Method

Refer to 4.2 How to operate the digital keypad VFD-PU01 and chapter 5 parameters for setting. Please choose a suitable method depending on application and operation rule. The operation is usually used as shown in the following table.

Operation Method	Frequency Source	Operation Command Source	
PU01 keypad			RUN STOP RESET
Operate from external signal	MI1 MI2 DCM AVI, ACI, AUI	Parameter setting: 04-04=11 04-05=12	External terminals input: FWD-DCM REV-DCM

3.3 Trial Run

After finishing checking the items in "3.1 preparation before start-up", you can perform a trial run. The factory setting of operation source is from keypad (Pr.02-01=00).

- 1. After applying power, verify that LED "F" is on and the display shows 60.00Hz.
- Setting frequency to about 5Hz by using key.
- 3. Pressing RUN key for forward running. And if you want to change to reverse running, you should press key in page. And if you want to decelerate to stop, please press key.
- 4. Check following items:
 - Check if the motor direction of rotation is correct.
 - Check if the motor runs steadily without abnormal noise and vibration.
 - Check if acceleration and deceleration are smooth.

If the results of trial run are normal, please start formal run.




- Please stop running immediately if any fault occurs and refer to troubleshooting for solving the problem.
- Please do NOT touch output terminals U, V, W when power is still applied to L1/R, L2/S, L3/T
 even when the AC motor drive has stopped. The DC-link capacitors may still be charged to
 hazardous voltage levels, even if the power has been turned off.
- To avoid damage to components, do not touch them or the circuit boards with metal objects or your bare hands.

Chapter 3 Start Up | VFD-B Series

This page intentionally left blank.

Chapter 4 Digital Keypad Operation

4.1 Description of the Digital Keypad VFD-PU01

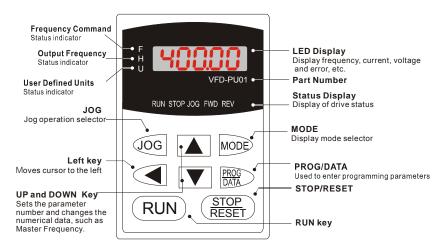


Display Message	Descriptions
[*] 8000	Displays the AC drive Master Frequency.
* S000	Displays the actual output frequency present at terminals U/T1, V/T2, and W/T3.
. 1800.0	User defined unit (where U = F x Pr.00-05)
R 5.0	Displays the output current present at terminals U/T1, V/T2, and W/T3.
-Frd-	Displays the AC motor drive forward run status.

Chapter 4 Digital Keypad Operation | VFD-B Series

Display Message	Descriptions
50-	Displays the AC motor drive reverse run status.
c 20	The counter value (C).
88-88	Displays the selected parameter.
18	Displays the actual stored value of the selected parameter.
EF	External Fault.
	Display "End" for approximately 1 second if input has been accepted by
-End-	pressing PAGE key. After a parameter value has been set, the new value is automatically stored in memory. To modify an entry, use the and keys.
-8	Display "Err", if the input is invalid.

4.2 How to Operate the Digital Keypad VFD-PU01

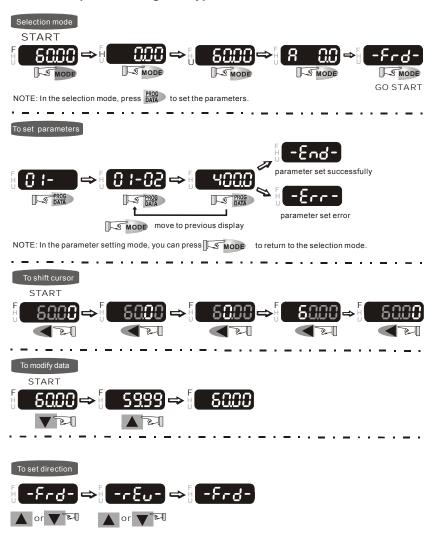

Chapter 4 Digital Keypad Operation | VFD-B Series

This page intentionally left blank.

Chapter 5 Parameters

The VFD-B parameters are divided into 12 groups by property for easy setting. In most applications, the user can finish all parameter settings before start-up without the need for re-adjustment during operation.

The 12 groups are as follows:

Group 0: User Parameters

Group 1: Basic Parameters

Group 2: Operation Method Parameters

Group 3: Output Function Parameters

Group 4: Input Function Parameters

Group 5: Multi-Step Speed and PLC Parameters

Group 6: Protection Parameters

Group 7: Motor Parameters

Group 8: Special Parameters

Group 9: Communication Parameters

Group 10: PID Control Parameters

Group 11: Fan & Pump Control Parameters

5.1 Summary of Parameter Settings

★: The parameter can be set during operation.

Group 0 User Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
00-00	Identity Code of the AC motor drive	Read-only	##	
00-01	Rated Current Display of the AC motor drive	Read-only	#.#	
00-02	Parameter Reset	08: Keypad lock 09: All parameters are reset to factory settings (50Hz, 220V/380V/575V) 10: All parameters are reset to factory settings (60Hz, 220V/440V/575V)	00	
№ 00-03	Start-up Display Selection	Oo: Display the frequency command value (LED F) O1: Display the actual output frequency (LED H) O2: Display the content of user-defined unit (LED U) O3: Multifunction display, see Pr.00-04 O4: FWD/REV command	00	
№ 00-04	Content of Multi Function Display	O0: Display output current (A) O1: Display counter value (C) O2: Display process operation (1.tt) O3: Display DC-BUS voltage (\$\overline{u}\$) O4: Display output voltage (E) O5: Output power factor angle (n) O6: Display output power (P) O7: Display actual motor speed (HU) O8: Display the estimated value of torque as it relates to current (t) O9: Display PG numbers/10ms (G) 10: Display AVI (U1.) (%) 11: Display AVI (U1.) (%) 12: Display AUI (U3.) (%) 13: Display AUI (U3.) (%) 14: Display the temperature of heat sink (°C)	00	
№ 00-05	User-Defined Coefficient K	0.01 to 160.00	1.00	
00-06	Software Version	Read-only	#.##	
00-07	Password Input	00 to 65535	00	
00-08	Password Set	00 to 65535	00	
00-09	Control Method	00: V/f Control 01: V/f + PG Control 02: Vector Control 03: Vector + PG Control	00	

Parameter	Explanation	Settings		Customer
00-10	Reserved		octing	l

Group 1 Basic Parameters

Parameter	•	Settings	Factory Setting	Customer
01-00	Maximum Output Frequency (Fmax)	50.00 to 400.00 Hz	60.00	
01-01	Maximum Voltage Frequency (Fbase)	0.10 to 400.00 Hz	60.00	
	Maximum Output	230V series: 0.1V to 255.0V	220.0	
01-02	Voltage (Vmax)	460V series: 0.1V to 510.0V	440.0	
	voitage (vinax)	575V series: 0.1V to 637.0V	575.0	
01-03	Mid-Point Frequency (Fmid)	0.10 to 400.00 Hz	0.50	
	Mid-Point Voltage	230V series: 0.1V to 255.0V	1.7	
01-04	(Vmid)	460V series: 0.1V to 510.0V	3.4	
	` ′	575V series: 0.1V to 637.0V	4.8	
01-05	Minimum Output Frequency (Fmin)	0.10 to 400.00 Hz	0.50	
	Minimum Output	230V series: 0.1V to 255.0V	1.7	
01-06	Minimum Output Voltage (Vmin)	460V series: 0.1V to 510.0V	3.4	
	voitage (viiiii)	575V series: 0.1V to 637.0V	4.8	
01-07	Output Frequency Upper Limit	1 to 120%	100	
01-08	Output Frequency Lower Limit	0 to100 %	0	
№ 01-09	Accel Time 1	0.01 to 3600.0 sec	10.0	
№ 01-10	Decel Time 1	0.01 to 3600.0 sec	10.0	
№ 01-11	Accel Time 2	0.01 to 3600.0 sec	10.0	
№ 01-12	Decel Time 2	0.01 to 3600.0 sec	10.0	
		y setting for models of 30hp (22kW) and above	is 60sec.	
№ 01-13	Jog Acceleration Time	0.1 to 3600.0 sec	1.0	
№ 01-14	Jog Frequency	0.10 Hz to 400.00 Hz	6.00	
		00: Linear Accel/Decel		
	Auto acceleration /	01: Auto Accel, Linear Decel		
₩ 01-15	deceleration (refer to	02: Linear Accel, Auto Decel	00	
A 01-13	Accel/Decel time	03: Auto Accel/Decel (Set by load)	00	
	setting)	04: Auto Accel/Decel (set by Accel/Decel Time setting)		
01-16	Acceleration S- Curve	00 to 07	00	
01-17	Deceleration S- Curve	00 to 07	00	
№ 01-18	Accel Time 3	0.01 to 3600.0 sec	10.0	
⊮ 01-19	Decel Time 3	0.01 to 3600.0 sec	10.0	
 ∕ 01-20	Accel Time 4	0.01 to 3600.0 sec	10.0	

Parameter	Explanation	Settings	Factory Setting	Customer	
№ 01-21	Decel Time 4	0.01 to 3600.0 sec	10.0		
	01-18 ~ 01-21: Factory setting for models of 30hp (22kW) and above is 60sec.				
⊮ 01-22	Jog Deceleration Time	0.1 to 3600.0 sec	1.0		
01-23	Accel/Decel Time Unit	00: Unit: 1 sec 01: Unit: 0.1 sec 02: Unit: 0.01 sec	01		

Group 2 Operation Method Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
₩ 02-00	Source of First Master Frequency Command	O0: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. O1: 0 to +10V from AVI O2: 4 to 20mA from ACI O3: -10 to +10Vdc from AUI O4: RS-485 serial communication (RJ-11). Last used frequency saved. O5: RS-485 serial communication (RJ-11). Last used frequency not saved. O6: Combined use of master and auxiliary frequency command	00	
		(See Pr. 02-10 to 02-12) 00: Digital keypad (PU01)		
№ 02-01	Source of First Operation Command	 O1: External terminals. Keypad STOP/RESET enabled. O2: External terminals. Keypad STOP/RESET disabled. O3: RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled. O4: RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled. 	00	
02-02	Stop Method	00: STOP: ramp to stop; E.F.: coast to stop 01: STOP: coast to stop; E.F.: coast to stop 02: STOP: ramp to stop; E.F.: ramp to stop 03: STOP: coast to stop; E.F.: ramp to stop	00	
		230V&460V:1-5hp/0.75-3.7kW: 1-15kHz	15	
		7.5-25hp/5.5-18.5kW: 01-15kHz	09	
00.00	PWM Carrier	30-60hp/22-45kW: 01-09kHz	06	
02-03	Frequency Selections	75-100hp/55-75kW: 01-06kHz	06	
	23.2380110	575V: 1-15hp/0.75-11kW: 01-10 kHz	06	
	_	20-60hp/15-45kW: 01-08 kHz 75-100hp/55-75kW: 01-06kHz	06 06	

Parameter	Explanation	Settings	Factory	Customer
- drameter	Explanation	•	Setting	Oustonici
20.04	Motor Direction Control	00: Enable forward/reverse operation		
02-04		01: Disable reverse operation	00	
		02: Disabled forward operation		
00.05	2-wire/3-wire	00: 2-wire: FWD/STOP, REV/STOP	00	
02-05	Operation Control Modes	01: 2-wire: FWD/REV, RUN/STOP	00	
02-06	Line Start Lockout Loss of ACI Signal (4-20mA)	 02: 3-wire operation 00: Disable. Operation status is not changed even if operation command source Pr.02-01 and/or Pr.02-14 is changed. 01: Enable. Operation status is not changed even if operation command source Pr.02-01 and/or Pr.02-14 is changed. 02: Disable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed. 03: Enable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed. 00: Decelerate to 0 Hz 01: Coast to stop and display "EF" 02: Continue operation by last frequency 	00	
№ 02-08	Up/Down Mode	command 00: Based on accel/decel time 01: Constant speed 02: Based on accel/decel time, but frequency	00	
№ 02-09	Accel/Decel Rate of Change of UP/DOWN Operation with Constant Speed	command will be 0 when stopped. 0.01~1.00 Hz/msec	0.01	
₩ 02-10	Source of the Master Frequency Command	O0: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. O1: 0 to +10V from AVI O2: 4 to 20mA from ACI O3: -10 to +10Vdc from AUI O4: RS-485 serial communication (RJ-11). Last used frequency saved.	00	
⊮ 02-11	Source of the Auxiliary Frequency Command	Do: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. 1: 0 to +10V from AVI 2: 4 to 20mA from ACI 3: -10 to +10Vdc from AUI 4: RS-485 serial communication (RJ-11). Last used frequency saved.	00	
₩ 02-12	Combination of the Master and Auxiliary Frequency Command	00: Master frequency + auxiliary frequency 01: Master frequency - auxiliary frequency	00	

Parameter	Explanation	Settings	Factory Setting	Customer
₩ 02-13	Source of Second Frequency Command	O0: Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved. O1: 0 to +10V from AVI O2: 4 to 20mA from ACI O3: -10 to +10Vdc from AUI O4: RS-485 serial communication (RJ-11). Last used frequency saved O5: RS-485 serial communication (RJ-11). Last used frequency not saved. O6: Combined use of master and auxiliary frequency command (See Pr. 02-10 to 02-12)	00	
№ 02-14	Source of Second Operation Command	 00: Digital keypad (PU01) 01: External terminals. Keypad STOP/RESET enabled. 02: External terminals. Keypad STOP/RESET disabled. 03: RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled. 04: RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled. 	00	
№ 02-15	Keyboard Frequency Command	0.00 ~ 400.00Hz	60.00	

Group 3 Output Function Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
	Multi Function	00: No function	08	
03-00	Multi-Function Output Relay (RA1,	01: AC drive operational		
	RB1, RC1)	02: Master frequency attained		
		03: Zero speed		
	Multi-Function	04: Over torque detection	01	
03-01	Output Terminal	05: Base-Block (B.B.) indication		
03-01	MO1	06: Low-voltage indication		
		07: Operation mode indication		
		08: Fault indication		
03-02	Multi-Function Output Terminal	09: Desired frequency attained 1	02	
03-02	MO2	10: PLC program running		
		11: PLC program step completed		
03-03	Multi-Function	12: PLC program completed	20	
	Output Terminal MO3	13: PLC program operation paused		
	IVIOS	14: Terminal count value attained		
		15: Preliminary count value attained		
		16: Auxiliary motor No.1		
		17: Auxiliary motor No.2		

Parameter	Explanation	Settings	Factory Setting	Customer
		18: Auxiliary motor No.3 19: Heat sink overheat warning 20: AC motor drive ready 21: Emergency stop indication 22: Desired frequency attained 2 23: Software braking signal		
		 24: Zero speed output signal 25: Under-current detection 26: Operation indication (H>=Fmin) 27: Feedback signal error 28: User-defined low-voltage detection 29: Brake control (Desired frequency attained 3) 		
03-04	Desired Frequency Attained 1	0.00 to 400.00 Hz	0.00	
03-05	Analog Output Signal	00: Analog frequency meter 01: Analog current meter 02: Output voltage 03: Output frequency command 04: Output motor speed 05: Load power factor (cos90° to Cos0°)	00	
№ 03-06	Analog Output Gain	01 to 200%	100	
№ 03-07	Digital Output Multiplying Factor	01 to 20	01	
№ 03-08	Terminal Count Value	00 to 65500	00	
⊮ 03-09	Preliminary Count Value	00 to 65500	00	
03-10	Desired Frequency Attained 2	0.00 to 400.00 Hz	0.00	
03-11	EF Active When Preliminary Count Value Attained	O0: Preliminary count value attained, no EF display O1: Preliminary count value attained, EF active	00	
03-12	Fan Control	 00: Fan always ON 01: 1 minute after AC motor drive stops, fan will be OFF 02: AC motor drive runs and fan ON, AC motor drive stops and fan OFF 03: Fan ON to run when preliminary heatsink temperature attained 	00	
03-13	Brake Release Frequency	0.00 to 400.00Hz	0.00	
03-14	Brake Engage Frequency	0.00 to 400.00Hz	0.00	

Chapter 5 Parameters | VFD-B Series Group 4 Input Function Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
№ 04-00	AVI Analog Input Bias	0.00~200.00 %	0.00	
04-01	AVI Bias Polarity	00: Positive bias 01: Negative bias	00	
№ 04-02	AVI Input Gain	1 to 200 %	100	
04-03	AVI Negative Bias, Reverse Motion Enable/Disable	00: No AVI negative bias command 01: Negative bias: REV motion enabled 02: Negative bias: REV motion disabled	00	
04-04	Multi-Function Input Terminal 1 (MI1)	00: No function 01: Multi-Step speed command 1 02: Multi-Step speed command 2	01	
04-05	Multi-Function Input Terminal 2 (MI2)	03: Multi-Step speed command 3 04: Multi-Step speed command 4 05: External reset (N.O.) 06: Accel/Decel inhibit 07: Accel/Decel time selection command 1 08: Accel/Decel time selection command 2	02	
04-06	Multi-Function Input Terminal 3 (MI3)	09: External base block (N.O.) 10: External base block (N.C.) 11: Up: Increment master frequency	03	
04-07	Multi-Function Input Terminal 4 (MI4)	12: Down: Decrement master frequency13: Counter reset14: Run PLC program15: Pause PLC program	04	
04-08	Multi-Function Input Terminal 5 (MI5)	16: Auxiliary motor No.1 output disable 17: Auxiliary motor No.2 output disable 18: Auxiliary motor No.3 output disable 19: Emergency stop (N.O.)	05	
04-09	Multi-Function Input Terminal 6 (MI6)	20: Emergency stop (N.C.) 21: Master frequency selection AVI/ACI 22: Master frequency selection AVI/AUI 23: Operation command selection (keypad/external terminals) 24: Auto accel/decel mode disable 25: Forced stop (N.C.) 26: Forced stop (N.O.) 27: Parameter lock enable (N.O.) 28: PID function disabled 29: Jog FWD/REV command 30: External reset (N.C.)	06	

Parameter	Explanation	Settings	Factory Setting	Customer
		31: Source of second frequency command enabled		
		32: Source of second operation command enabled		
		33: One shot PLC		
		34: Proximity sensor input for simple Index function		
		35: Output shutoff stop (NO)		
		36: Output shutoff stop (NC)		
04-10	Digital Terminal Input Debouncing Time	1 to 20 (*2ms)	01	
₩ 04-11	ACI Analog Input Bias	0.00~200.00 %	0.00	
04.40	ACI Dias Dalasits	00: Positive bias	00	
04-12	ACI Bias Polarity	01: Negative bias	00	
 ∕ 04-13	ACI Input Gain	01 to 200 %	100	
	ACI Negative Bias,	00: No ACI negative bias command		
04-14	Reverse Motion Enable/Disable	01: Negative bias: REV motion enabled	00	
		02: Negative bias: REV motion disabled		
⊮ 04-15	AUI Analog Input Bias	0.00~200.00 %	0.00	
04.40	ALII Din a Daladi	00: Positive bias	00	
04-16	AUI Bias Polarity	01: Negative bias	00	
№ 04-17	AUI Input Gain	01 to 200 %	100	
04-18	AUI Negative Bias Reverse Motion Enable/Disable	00: No AUI negative bias command 01: Negative bias: REV motion enabled 02: Negative bias: REV motion disabled	00	
04-19	AVI Analog Input Delay	0.00 to 10.00 sec	0.05	
04-20	ACI Analog Input Delay	0.00 to 10.00 sec	0.05	
04-21	AUI Analog Input Delay	0.00 to 10.00 sec	0.05	
04-22	Analog Input Frequency	00: 0.01Hz	01	
	Resolution	01: 0.1Hz	J .	
04-23	Gear Ratio for Simple Index Function	4 ~ 1000	200	
04-24	Index Angle for Simple Index Function	0.0 ~360.0°	180.0	
 ∕ 04-25	Deceleration Time for Simple Index Function	0.00 ~100.00 sec	0.00	

Group 5 Multi-Step Speed and PLC Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
№ 05-00	1 st Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-01	2 nd Step Speed Frequency	0.00 to 400.00 Hz	0.00	
★ 05-02	3 rd Step Speed Frequency	0.00 to 400.00 Hz	0.00	
★ 05-03	4 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-04	5 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
★ 05-05	6 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
★ 05-06	7 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-07	8 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
★ 05-08	9 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-09	10 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-10	11 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-11	12 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-12	13 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-13	14 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
№ 05-14	15 th Step Speed Frequency	0.00 to 400.00 Hz	0.00	
		O0: Disable PLC operation State one program cycle C2: Continuously execute program cycles		
05-15	PLC Mode	Service one program cycle step by step Continuously execute program cycles step by step	00	
05-16	PLC Forward/ Reverse Motion	00 to 32767 (00: FWD, 01: REV)	00	
05-17	Time Duration of 1st Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-18	Time Duration of 2nd Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-19	Time Duration of 3rd Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-20	Time Duration of 4th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-21	Time Duration of 5th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	

Parameter	Explanation	Settings	Factory Setting	Customer
05-22	Time Duration of 6th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-23	Time Duration of 7th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-24	Time Duration of 8th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-25	Time Duration of 9th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-26	Time Duration of 10th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-27	Time Duration of 11th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-28	Time Duration of 12th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-29	Time Duration of 13th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-30	Time Duration of 14th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-31	Time Duration of 15th Step Speed	00 to 65500 sec or 00 to 6550.0 sec	00	
05-32	Time Unit Settings	00: 1 sec 01: 0.1 sec	00	
05-33	The Amplitude of Wobble Vibration	0.00~400.00 Hz	0.00	
05-34	Wobble Skip Frequency	0.00~400.00 Hz	0.00	

Group 6 Protection Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
06-00	Over-Voltage Stall Prevention	230V series: 330.0V to 410.0V 460V series: 660.0V to 820.0V 575V series: 825.0V to1025.0V 00: Disable over-voltage stall prevention	390.0V 780.0V 975.0V	
06-01	Over-Current Stall Prevention during Accel	20 to 250%	170	
06-02	Over-Current Stall Prevention during Operation	20 to 250%	170	
06-03	Over-Torque Detection Mode (OL2)	 00: Disabled 01: Enabled during constant speed operation. After the over-torque is detected, keep running until OL1 or OL occurs. 02: Enabled during constant speed operation. After the over-torque is detected, stop running. 	00	

Parameter	Explanation	Settings	Factory Setting	Customer
06-03	Over-Torque Detection Mode (OL2)	03: Enabled during accel. After the overtorque is detected, keep running until OL1 or OL occurs.04: Enabled during accel. After the overtorque is detected, stop running.		
06-04	Over-Torque Detection Level	10 to 200%	150	
06-05	Over-Torque Detection Time	0.1 to 60.0 sec	0.1	
06-06	Electronic Thermal Overload Relay Selection	Standard motor (self cooled by fan) Special motor (forced external cooling) Disabled	02	
06-07	Electronic Thermal Characteristic	30 to 600 sec	60	
06-08	Present Fault Record	00: No fault 01: Over current (oc) 02: Over voltage (ov) 03: Over heat (oH) 04: Over load (oL) 05: Over load (oL1) 06: External fault (EF) 07: IGBT protection (occ)		
06-09	Second Most Recent Fault Record	08: CPU failure (cF3) 09: Hardware protection failure (HPF) 10: Excess current during acceleration (ocA) 11: Excess current during deceleration (ocd) 12: Excess current during steady state (ocn) 13: Ground fault (GFF) 14: Reserved	00	
06-10	Third Most Recent Fault Record	15: CF1 16: CF2 17: Reserved 18: Motor over-load (oL2) 19: Auto Acel/Decel failure (CFA) 20: SW/Password protection (codE)		
06-11	Fourth Most Recent Fault Record	 21: External Emergency Stop (EF1) 22: Phase-Loss (PHL) 23: Preliminary count value attained, EF active (cEF) 24: Under-current (Lc) 25: Analog feedback signal error (AnLEr) 26: PG feedback signal error (PGErr) 		

Parameter	Explanation	Settings	Factory Setting	Customer
06-12	Under-Current Detection Level	00~100% (00: Disabled)	00	
06-13	Under-Current Detection Time	0.1~ 3600.0 sec	10.0	
06-14	Under-Current Detection Mode	00: Warn and keep operating 01: Warn and ramp to stop 02: Warn and coast to stop 03: Warn, after coast to stop, restart (delay 06-15 setting time)	00	
06-15	Under-Current Detection Restart Delay Time (Lv)	1~600 Min.	10	
06-16	User-Defined Low- Voltage Detection Level	00: Disabled 230V: 220 to 300VDC 460V: 440 to 600VDC 575V: 520 to 780VDC	00	
06-17	User-Defined Low- Voltage Detection Time	0.1~ 3600.0 sec	0.5	
06-18	Reserved			

Group 7 Motor Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
₩ 07-00	Motor Rated Current	30 to 120%	100	
⊮ 07-01	Motor No-Load Current	01 to 90%	40	
⊮ 07-02	Torque Compensation	0.0 to 10.0	0.0	
₩ 07-03	Slip Compensation (Used without PG)	0.00 to 3.00	0.00	
07-04	Number of Motor Poles	02 to 10	04	
07-05	Motor Parameters Auto Tuning	00: Disable 01: Auto tuning R1 02: Auto tuning R1 + no-load test	00	
07-06	Motor Line-to-line Resistance R1	00~65535 mΩ	00	
07-07	Reserved			
07-08	Motor Rated Slip	0.00 to 20.00 Hz	3.00	
07-09	Slip Compensation Limit	0 to 250%	200	
07-10	Reserved	_		
07-11	Reserved	_		•

Parameter	Explanation	Settings	Factory Setting	Customer
07-12	Torque Compensation Time Constant	0.01 ~10.00 Sec	0.05	
07-13	Slip Compensation Time Constant	0.05 ~10.00 sec	0.10	
07-14	Accumulative Motor Operation Time (Min.)	00 to 1439 Min.	00	
07-15	Accumulative Motor Operation Time (Day)	00 to 65535 Day	00	

Group 8 Special Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
08-00	DC Braking Current Level	00 to 100%	00	
08-01	DC Braking Time during Start-Up	0.0 to 60.0 sec	0.0	
08-02	DC Braking Time during Stopping	0.0 to 60.0 sec	0.0	
08-03	Start-Point for DC Braking	0.00 to 400.00Hz	0.00	
08-04	Momentary Power Loss Operation Selection	O0: Operation stops after momentary power loss O1: Operation continues after momentary power loss, speed search starts with the Master Frequency reference value O2: Operation continues after momentary power loss, speed search starts with the minimum frequency	00	
08-05	Maximum Allowable Power Loss Time	0.1 to 5.0 sec	2.0	
08-06	B.B. Time for Speed Search	0.1 to 5.0 sec	0.5	
08-07	Current Limit for Speed Search	30 to 200%	150	
08-08	Skip Frequency 1 Upper Limit	0.00 to 400.00 Hz	0.00	
08-09	Skip Frequency 1 Lower Limit	0.00 to 400.00 Hz	0.00	
08-10	Skip Frequency 2 Upper Limit	0.00 to 400.00 Hz	0.00	
08-11	Skip Frequency 2 Lower Limit	0.00 to 400.00 Hz	0.00	
08-12	Skip Frequency 3 Upper Limit	0.00 to 400.00 Hz	0.00	
08-13	Skip Frequency 3 Lower Limit	0.00 to 400.00 Hz	0.00	

Parameter	Explanation	Settings	Factory Setting	Customer
08-14	Auto Restart After Fault	00 to 10 (00=disable)	00	
08-15	Auto Energy Saving	00: Disable 01: Enable	00	
08-16	AVR Function	00: AVR function enable01: AVR function disable02: AVR function disable for decel.	00	
08-17	Software Braking Level	230V series: 370 to 430V 460V series: 740 to 860V 575V series: 925 to1075V	380 760 950	
08-18	Base-block Speed Search	Speed search starts with last frequency command Starts with minimum output frequency	00	
08-19	Speed Search during Start-up	00: Speed search disable01: Speed search enable	00	
 ∕ 08-20	Speed Search Frequency during Start-up	00: Setting frequency 01: Maximum operation frequency (01-00)	00	
08-21	Auto Reset Time at Restart after Fault	00 to 60000 sec	600	
№ 08-22	Compensation Coefficient for Motor Instability	00~1000	00	

Group 9 Communication Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
№ 09-00	Communication Address	01 to 254	01	
№ 09-01	Transmission Speed	00: Baud rate 4800bps 01: Baud rate 9600bps 02: Baud rate 19200bps 03: Baud rate 38400bps	01	
№ 09-02	Transmission Fault Treatment	00: Warn and keep operating 01: Warn and ramp to stop 02: Warn and coast to stop 03: No warning and keep operating	03	
₩ 09-03	Time-out Detection	0.0 ~ 60.0 seconds 0.0: Disable	0.0	
№ 09-04	Communication Protocol	00: 7,N,2 (Modbus, ASCII) 01: 7,E,1 (Modbus, ASCII) 02: 7,O,1 (Modbus, ASCII) 03: 8,N,2 (Modbus, RTU) 04: 8,E,1 (Modbus, RTU) 05: 8,O,1 (Modbus, RTU)	00	

Parameter	Explanation	Settings	Factory Setting	Customer
09-05	Reserved			
09-06	Reserved			
⊮ 09-07	Response Delay Time	00 ~ 200 msec	00	

Group 10 PID Control Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
10-00	Input terminal for PID Feedback	O0: Inhibit PID operation O1: Negative PID feedback from external terminal (AVI) 0 to +10V O2: Negative PID feedback from external terminal (ACI) 4 to 20mA O3: Positive PID feedback from external terminal (AVI) 0 to +10V O4: Positive PID feedback from external terminal (AVI) 4 to 20mA	00	
10-01	Gain over PID Detection value	0.00 to 10.00	1.00	
⊮ 10-02	Proportional Gain (P)	0.0 to 10.0	1.0	
⊮ 10-03	Integral Gain (I)	0.00 to 100.00 sec (0.00=disable)	1.00	
⊮ 10-04	Derivative Control (D)	0.00 to 1.00 sec	0.00	
10-05	Upper Bound for Integral Control	00 to 100%	100	
10-06	Primary Delay Filter Time	0.0 to 2.5 sec	0.0	
10-07	PID Output Freq Limit	0 to 110%	100	
10-08	Feedback Signal Detection Time	0.0 to 3600.0 sec	60.0	
⊮ 10-09	Treatment of the Erroneous Feedback Signals	00: Warn and keep operation 01: Warn and RAMP to stop 02: Warn and COAST to stop	00	
10-10	PG Pulse Range	1 to 40000	600	
10-11	PG Input	00: Disable PG 01: Single phase 02: Forward / Counterclockwise rotation 03: Reverse / Clockwise rotation	00	
⊮ 10-12	ASR (Auto Speed Regulation) control (with PG only) (P)	0.0 to 10.0	1.0	

Parameter	Explanation	Settings	Factory Setting	Customer
⊮ 10-13	ASR (Auto Speed Regulation) control (with PG only) (I)	0.00 to 100.00 (0.00 disable)	1.00	
10-14	Speed Control Output Frequency Limit	0.00 to 100.00 Hz	10.00	
10-15	Sample time for refreshing the content of 210DH and 210EH	0.01~1.00 seconds	0.10	
10-16	Deviation Range of PID Feedback Signal Error	0.00~100.00%	100.00	

Group 11 Fan & Pump Control Parameters

Parameter	Explanation	Settings	Factory Setting	Customer
11-00	V/f Curve Selection	00: V/f curve determined by Pr.01-00 to Pr.01-06 01: 1.5 power curve 02: 1.7 power curve 03: Square curve 04: Cube curve	00	
11-01	Start-Up Frequency of the Auxiliary Motor	0.00 to 400.00 Hz	0.00	
11-02	Stop Frequency of the Auxiliary Motor	0.00 to 400.00 Hz	0.00	
11-03	Time Delay before Starting the Auxiliary Motor	0.0 to 3600.0 sec	0.0	
11-04	Time Delay before Stopping the Auxiliary Motor	0.0 to 3600.0 sec	0.0	
11-05	Sleep/Wake Up Detection Time	0.0 ~6550.0 sec	0.0	
11-06	Sleep Frequency	0.00~Fmax	0.00	
11-07	Wakeup Frequency	0.00~Fmax	0.00	

5.2 Parameter Settings for Applications

■ Speed Search

Applications	Purpose	Functions	Related Parameters
Windmill, winding machine, fan and all inertia load	Restart free- running motor	Before the free-running motor is completely stopped, it can be restarted without detecting motor speed. The AC motor drive will auto search motor speed and will accelerate when its speed is the same as the motor speed.	

■ DC Braking before Running

Applications	Purpose	Functions	Related Parameters
When e.g. windmills, fans and pumps rotate freely by wind or flow without applying power	standstill.	If the running direction of the free- running motor is not steady, please execute DC braking before start-up.	08-00 08-01

■ Motor power switch-over between AC motor drive and commercial power

- motor power switch over between Ao motor drive and commercial power					
Applications	Purpose	Functions	Related Parameters		
Windmills, pumps, extruders	Switching motor power between AC motor drive and commercial power	When switching motor power between AC motor drive and commercial power, it is unnecessary to stop motor or start by commercial power with heavy duty before switching to by AC motor drive control	03-00 03-01 03-02 03-03		

■ Energy Saving

Applications	Purpose	Functions	Related Parameters
Punching machines and precision machinery	Energy saving and less vibrations	Energy saving when the AC motor drive runs at constant speed, yet full power acceleration and deceleration For precision machinery it also helps to lower vibrations.	08-15

■ Multi-step Operation

Applications	Purpose	Functions	Related Parameters
Conveying machinery		To control 15-step speeds and duration by simple contact signal.	04-04~04-09 05-00~05-14

■ Switching acceleration and deceleration times

Applications	Purpose	Functions	Related Parameters
Auto turntable for conveying machinery	Switching acceleration and deceleration times by external signal	Switching multi-step acceleration/deceleration by external signal. When an AC motor drive drives two or more motors, it can reach high-speed but still start and stop smoothly.	01-09~01-12 01-18~01-21 04-04~04-09

■ Overheat Warning

Applications	Purpose	Functions	Related Parameters
Air conditioner	Safety measure	When AC motor drive overheats, it uses a thermal sensor to have overheat warning.	03-00~03-03 04-04~04-09

■ Two-wire/three-wire

Applications	Purpose	Functions	Related Parameters
	To run, stop,	FWD/STOP 58	02-05 04-04~04-09
General application	forward and reverse by external terminals	### REV.("OPEN": FWD) CCLOSE": REV) DCM	

■ Operation Command

Applications	Purpose	Functions	Related Parameters
General application	Selecting the source of control signal	Selection of AC motor drive control by external terminals, digital keypad or RS485.	03-01 04-04~04-09

■ Frequency Hold

Applications	Purpose	Functions	Related Parameters
General application	Acceleration/ deceleration pause	Hold output frequency during Acceleration/deceleration	04-04~04-09

Auto Restart after Fault

Applications	Purpose	Functions	Related Parameters
Air conditioners, remote pumps	For continuous and reliable operation without operator intervention	The AC motor drive can be restarted/reset automatically up to 10 times after a fault occurs.	08-14~08-21

■ Emergency Stop by DC Braking

Applications	Purpose	Functions	Related Parameters
High-speed rotors	Emergency stop without braking resistor	AC motor drive can use DC barking for emergency stop when quick stop is needed without braking resistor. When used often, take motor cooling into consideration.	

■ Over-torque Setting

= 0.0. 10.4.0.009			
Applications	Purpose	Functions	Related Parameters
Pumps, fans and extruders	To protect machines and to have continuous/ reliable operation	The over-torque detection level can be set. Once OC stall, OV stall and over-torque occurs, the output frequency will be adjusted automatically. It is suitable for machines like fans and pumps that require continuous operation.	06-00~06-05

■ Upper/Lower Limit Frequency

Applications	Purpose	Functions	Related Parameters
Pump and fan	Control the motor speed within upper/lower limit	When user cannot provide upper/lower limit, gain or bias from external signal, it can be set individually in AC motor drive.	01-07 01-08

■ Skip Frequency Setting

Applications	Purpose	Functions	Related Parameters
Pumps and fans	To prevent machine vibrations	The AC motor drive cannot run at constant speed in the skip frequency range. Three skip frequency ranges can be set.	08-00~08-13

■ Carrier Frequency Setting

Applications	Purpose	Functions	Related Parameters
General application	Low noise	The carrier frequency can be increased when required to reduce motor noise.	02-03

■ Keep Running when Frequency Command is Lost

Applications	Purpose	Functions	Related Parameters		
Air conditioners	For continuous operation	When the frequency command is lost by system malfunction, the AC motor drive can still run. Suitable for intelligent air conditioners.	02-07		

■ Display the Speed of Load

Applications	Purpose	Functions	Related Parameters	
General application	Display running status	Display motor speed(rpm) and machine speed(rpm) on keypad.	00-04 03-05	

■ Output Signal during Running

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	Signal available to stop braking when the AC motor drive is running. (This signal will disappear when the AC motor drive is free-running.)	03-00~03-03

■ Output Signal in Zero Speed

- Catput Olgilai ili 2010 Opoca											
Applications	Purpose	Functions	Related Parameters								
General application	Provide a signal for running status	When the output frequency is lower than the min. output frequency, a signal is given for external system or control wiring.	03-00~03-03								

Output Signal at Desired Frequency

Applications	Purpose	Functions	Related Parameters
General application	Provide a signal for running status	When the output frequency is at the desired frequency (by frequency command), a signal is given for external system or control wiring.	03-00~03-03

■ Output Signal for Base Block

Applications	Purpose	Functions	Related Parameters	
General application	Provide a signal for running status	When executing Base Block, a signal is given for external system or control wiring.	03-00~03-03	

■ Overheat Warning for Heat Sink

Applications	Purpose	Functions	Related Parameters
General application	For safety	When heat sink is overheated, it will send a signal for external system or control wiring.	03-00~03-03

■ Multi-function Analog Output

Applications	Purpose	Functions	Related Parameters
General application	Display running status	The value of frequency, output current/voltage can be read by adding a frequency meter or voltage/current meter.	03-05

5.3 Description of Parameter Settings

Group 0: User Parameters

00 - 00	Identity C	ode of the AC motor drive	
	Settings	Read Only	Factory setting: ##
00 - 01	Rated Cu	rrent Display of the AC motor drive	
	Settings	Read Only	Factory setting: #.#

- Pr. 00-00 displays the identity code of the AC motor drive. The capacity, rated current, rated voltage and the max. carrier frequency relate to the identity code. Users can use the following table to check how the rated current, rated voltage and max. carrier frequency of the AC motor drive correspond to the identity code.
- Pr.00-01 displays the rated current of the AC motor drive. By reading this parameter the user can check if the AC motor drive is correct.

230V Series												
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50
Pr.00-00	04	06	08	10	12	14	16	18	20	22	24	26
Rated Output Current (A)	5.0	7.0	11	17	25	33	49	65	75	90	120	146
Max. Carrier Frequency		15kHz									9 kHz	

460V Series															
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
Pr.00-00	05	07	09	11	13	15	17	19	21	23	25	27	29	31	33
Rated Output Current (A)	2.7	4.2	5.5	8.5	13	18	24	32	38	45	60	73	91	110	150
Max. Carrier Frequency 15 kHz										9 k	Hz		6 k	Hz	

	575V Series														
kW	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
HP	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
Pr.00-00	100	101	102	103	104	105	106	107	108	109	110	111	112	113	114
Rated Output Current (A)	1.7	3.5	4.5	7.5	10	13.5	19	22	27	34	41	52	62	80	100
Max. Carrier Frequency									8 k	Hz			6 k	Hz	

00 - 02Parameter Reset Factory Setting: 00 Settings 08 Keypad Lock 09 All parameters are reset to factory settings (50Hz, 220V/380V/575V) 10 All parameters are reset to factory settings (60Hz, 220V/440V/575V) This parameter allows the user to reset all parameters to the factory settings except the fault records (Pr.06-08 ~ Pr.06-11). 50Hz: Pr.01-01 is set to 50Hz and Pr.01-02 is set to 230V. 400V or 575V. 60Hz: Pr.01-01 is set to 60Hz and Pr.01-02 is set to 230V, 460V or 575V. When Pr.00-02=08, the VFD-PU01 keypad is locked. To unlock the keypad, set Pr.00-02=00. ✓ Start-up Display Selection 00 - 03Factory Setting: 00 Settings 00 Display the frequency command value. (LED F) 01 Display the actual output frequency (LED H) 02 Display the content of user-defined unit (LED U) 03 Multifunction display, see Pr.00-04 04 FWD/RFV command \Box This parameter determines the start-up display page after power is applied to the drive. 00 - 04 ✓ Content of Multi-Function Display Factory Setting: 00 Settings Display the output current in A supplied to the motor Display the counter value which counts the number of 01 pulses on TRG terminal When the PLC function is active, the current step and 02 its remaining operation time in s are shown.

Display the actual DC BUS voltage in VDC of the AC 03 motor drive Display the output voltage in VAC of terminals U, V, W 04 to the motor.

Display the power factor angle in of terminals U, V, W 05 to the motor.

Display the output power in kW of terminals U, V and W 06 to the motor.

00 - 04

✓ Content of Multi-Function Display

	Display the actual motor speed in rpm (enabled in	
07	vector control mode or PG (Encoder) feedback control)	H
	(LED H and LED U).	

Display the estimated value of torque in Nm as it relates to current.



Display PG encoder feedback pulses/10ms.
Display value= (rpm*PPR)/6000 (see note)



10 Display analog feedback signal value in %.



Display the signal of AVI analog input terminal in %. Range 0~10V corresponds to 0~100%. (LED U)



Display the signal of ACI analog input terminal in %. Range 4~20mA corresponds to 0~100%. (LED U)



Display the signal of AUI analog input terminal in %. Range -10V~10V corresponds to 0~100%. (LED U)



14 Display the temperature of heat sink in °C.



- This parameter sets the display when Pr. 00-03 is set to 03.
- Pr.00-04=09. The display value is (((rpm/60)*PPR)/1000ms)*10ms with rpm=motor speed in revs/min and PPR=encoder pulse per revolution
- When the display shows the multi-function display (Pr.00-03=03), the user also can view other information by pressing the "LEFT" key on the VFD-PU01 keypad.

00 - 05	✓ User Der	fined Coefficient K	Unit: 0.01
	Settings	0.01 to d 160.00	Factory Setting: 1.00

The coefficient K determines the multiplying factor for the user-defined unit.

The display value is calculated as follows:

U (User-defined unit) = Frequency Command * K (Pr.00-05)

H (actual output) = Actual output frequency * K (Pr.00-05)

Example:

A conveyor belt runs at 13.6m/s at motor speed 60Hz.

K = 13.6/60 = 0.23 (0.226667 rounded to 2 decimals), therefore Pr.00-05=0.23

With Frequency command 35Hz, display shows LED U and 35*0.23=8.05m/s.

(To increase accuracy, use K=2.27 or K=22.67 and disregard decimal point.)

00 - 06 Software V	/ersion
Settings	Read Only
Display	#.##

00 - 07	Password Ir	nput	Unit: 1
	Settings	00 to 65535	Factory Setting: 00
	Display	00~02 (times of wrong password)	

The function of this parameter is to input the password that is set in Pr.00-08. Input the correct password here to enable changing parameters. You are limited to a maximum of 3 attempts.

After 3 consecutive failed attempts, a blinking "PcodE" will show up to force the user to restart the AC motor drive in order to try again to input the correct password.

00 - 08	Password Set				
	Settings 00 to 65535		5535	Factory Setting: 00	
	Display	y 00 No password set or successful input in Pr.		00-07	
	01 Password has been set				

To set a password to protect your parameter settings.

If the display shows 00, no password is set or password has been correctly entered in Pr.00-

07. All parameters can then be changed, including Pr.00-08.

The first time you can set a password directly. After successful setting of password the display will show 01.

Be sure to record the password for later use.


To cancel the parameter lock, set the parameter to 00 after inputting correct password into Pr. 00-07.

The password consists of min. 2 digits and max. 5 digits.

How to make the password valid again after decoding by Pr.00-07:

Method 1: Re-input original password into Pr.00-08 (Or you can enter a new password if you want to use a changed or new one).

Method 2: After rebooting, password function will be recovered.

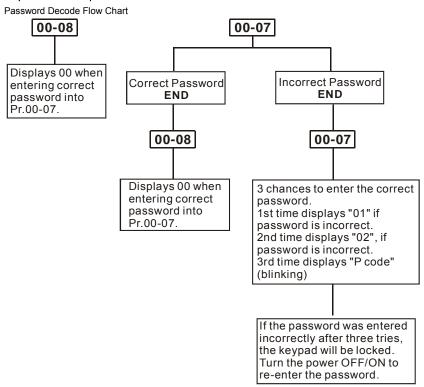

00 - 09 Control method

Factory Setting: 00

Settings 00 V/f control

03

01 V/f + PG Control

02 Vector Control

- Vector + PG Control This parameter determines the control method of the AC motor drive.
- PG is encoder (Pulse Generator) feedback for which an option PG card is required.

00 - 10

Reserved

 \square

Group 1: Basic Parameters

01 - 00	Maximum	Output Frequency (Fmax)	Unit: 0.01
	Settings	50.00 to 400.00 Hz	Factory Setting: 60.00

This parameter determines the AC motor drive's Maximum Output Frequency. All the AC motor drive frequency command sources (analog inputs 0 to +10V, 4 to 20mA and -10V to +10V) are scaled to correspond to the output frequency range.

01 - 01	Maximum \	/oltage Frequency (Fbase)	Unit: 0.01
·	Settings	0.10 to 400.00Hz	Factory Setting: 60.00

This value should be set according to the rated frequency of the motor as indicated on the motor nameplate. Maximum Voltage Frequency determines the v/f curve ratio. For example, if the drive is rated for 460 VAC output and the Maximum Voltage Frequency is set to 60Hz, the drive will maintain a constant ratio of 7.66 V/Hz (460V/60Hz=7.66V/Hz). This parameter value must be equal to or greater than the Mid-Point Frequency (Pr.01-03).

01 - 02 Maximum Output Voltage (Vmax)	Unit: 0.1
Settings 230V series 0.1 to 255.0V	Factory Setting: 220.0
460V series 0.1 to 510.0V	Factory Setting: 440.0
575V series 0.1 to 637.0V	Factory Setting: 575.0

This parameter determines the Maximum Output Voltage of the AC motor drive. The Maximum Output Voltage setting must be smaller than or equal to the rated voltage of the motor as indicated on the motor nameplate. This parameter value must be equal to or greater than the Mid-Point Voltage (Pr.01-04).

01 - 03	01 - 03 Mid-Point Frequency (Fmid)		Unit: 0.01
	Settings	0.10 to 400.00Hz	Factory Setting: 0.50

This parameter sets the Mid-Point Frequency of the V/f curve. With this setting, the V/f ratio between Minimum Frequency and Mid-Point frequency can be determined. This parameter must be equal to or greater than Minimum Output Frequency (Pr.01-05) and equal to or less than Maximum Voltage Frequency (Pr.01-01).

01 - 04	Mid-Point V	oltage (Vmid)	Unit: 0.1	
	Settings	230V series	0.1 to 255.0V	Factory Setting: 1.7
		460V series	0.1 to 510.0V	Factory Setting: 3.4
		575V series	0.1 to 637.0V	Factory Setting: 4.8

- This parameter sets the Mid-Point Voltage of any V/f curve. With this setting, the V/f ratio between Minimum Frequency and Mid-Point Frequency can be determined. This parameter must be equal to or greater than Minimum Output Voltage (Pr.01-06) and equal to or less than Maximum Output Voltage (Pr.01-02).
- This parameter is ineffective when Pr.11-00 is set to 1 to 4.

01 - 05 Minimur	n Output Frequency (Fmin)	Unit: 0.01
Settings	0.10 to 400.00Hz	Factory Setting: 0.50

- This parameter sets the Minimum Output Frequency of the AC motor drive. This parameter must be equal to or less than Mid-Point Frequency (Pr.01-03).
- The settings of 01-03, 01-04, and 01-06 are invalid in Vector Control mode.

01 - 06	Minimum Ou	tput Voltage (Vmin)		Unit: 0.1
	Settings	230V series	0.1 to 255.0V	Factory Setting: 1.7
		460V series	0.1 to 510.0V	Factory Setting: 3.4
		575V series	0.1 to 637.0V	Factory Setting: 4.8


This parameter sets the Minimum Output Voltage of the AC motor drive. This parameter must be equal to or less than Mid-Point Voltage (Pr.01-04).

The settings of Pr.01-01 to Pr.01-06 have to meet the condition of Pr.01-02 ≥ Pr.01-04 ≥ Pr.01-06 and Pr.01-01 > Pr.01-03 > Pr.01-05.

01 - 07	Output Fre	quency Upper Limit	Unit: 1
	Settings	1 to 120%	Factory Setting: 100

- This parameter must be equal to or greater than the Output Frequency Lower Limit (Pr.01-08).

 The Maximum Output Frequency (Pr.01-00) is regarded as 100%.
- Output Frequency Upper Limit value = (Pr.01-00 * Pr.01-07)/100.

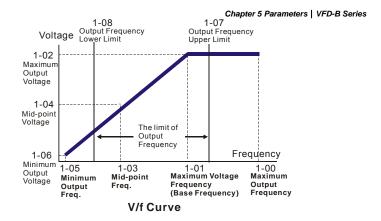

01 - 08	Output Fre	equency Lower Limit	Unit: 1
	Settings	0 to 100%	Factory Setting: 0

- The Upper/Lower Limits are to prevent operation errors and machine damage.
- If the Output Frequency Upper Limit is 50Hz and the Maximum Output Frequency is 60Hz, the Output Frequency will be limited to 50Hz.
- If the Output Frequency Lower Limit is 10Hz, and the Minimum Output Frequency (Pr.01-05) is set to 1.0Hz, then any Command Frequency between 1.0-10Hz will generate a 10Hz output from the drive.
- This parameter must be equal to or less than the Output Frequency Upper Limit (Pr.01-07).
- The Output Frequency Lower Limit value = (Pr.01-00 * Pr.01-08) /100.

01 - 09		Unit: 0.1/0.01
01 - 10		Unit: 0.1/0.01
01 - 11		Unit: 0.1/0.01
01 - 12		Unit: 0.1/0.01
01 - 18		Unit: 0.1/0.01
01 - 19		Unit: 0.1/0.01
01 - 20		Unit: 0.1/0.01
01 - 21		Unit: 0.1/0.01
	Settings 0.01 to 3600.0 sec	Factory Setting: 10.0


Factory setting for models of 30hp (22kW) and above is 60sec.

01 - 23 Accel/Decel Time Unit

Factory Setting: 01


Settings	00	Unit: 1 sec	_
	01	Unit: 0.1 sec	
	02	Unit: 0.01 sec	

- The Acceleration Time is used to determine the time required for the AC motor drive to ramp from 0 Hz to Maximum Output Frequency (Pr.01-00). The rate is linear unless S-Curve is "Enabled", see Pr.01-16.
- The Deceleration Time is used to determine the time required for the AC motor drive to decelerate from the Maximum Output Frequency (Pr.01-00) down to 0 Hz. The rate is linear unless S-Curve is "Enabled.", see Pr.01-17.
- The Acceleration/Deceleration Time 1, 2, 3, 4 are selected according to the Multi-Function Input Terminals Settings. See Pr.04-04 to Pr.04-09 for more details.
- In the diagram shown below, the Acceleration/Deceleration Time of the AC motor drive is the time between 0 Hz to Maximum Output Frequency (Pr.01-00). Suppose the Maximum Output Frequency is 60 Hz, Minimum Output Frequency (Pr.01-05) is 1.0 Hz, and Acceleration/Deceleration Time is 10 seconds. The actual time for the AC motor drive to accelerate from start-up to 60 Hz and to decelerate from 60Hz to 1.0Hz is in this case 9.83 seconds. ((60-1) * 10 /60=9.83secs).

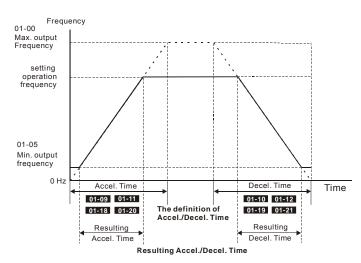

	_		Chapter of arameters VI D D certes
01 - 13	✓ Jog Acce	eleration Time	Unit: 0.1
	Settings	0.1 to 3600.0 sec	Factory Setting: 1.0
01 - 22	⊮ Jog Dece	eleration Time	Unit: 0.1
	Settings	0.1 to 3600.0 sec	Factory Setting: 1.0
01 - 14	✓ Jog Freq	uency	Unit: 0.1
	Settings	0.10 to 400.00Hz	Factory Setting: 1.0

- Both external terminal JOG and key "JOG" on the keypad can be used. When the Jog command is "ON", the AC motor drive will accelerate from Minimum Output Frequency (Pr.01-05) to Jog Frequency (Pr.01-14). When the Jog command is "OFF", the AC motor drive will decelerate from Jog Frequency to zero. The used Accel/Decel time is set by the Jog Accel/Decel time (Pr.01-13, Pr.01-22).
- Before using the JOG command, the drive must be stopped first. And during Jog operation, other operation commands cannot be accepted, except command via the FORWARD, REVERSE and STOP keys on the digital keypad.

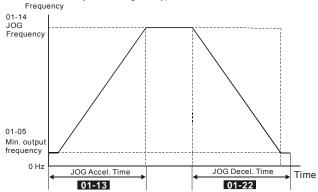

The definition of JOG Accel./Decel. Time

01 – 15 / Auto-A	ccelera	tion / Deceleration
		Factory Setting: 00
Settings	00	Linear acceleration / deceleration
	01	Auto acceleration, linear Deceleration.
	02	Linear acceleration, auto Deceleration.
	03	Auto acceleration / deceleration (set by load)
	04	Auto acceleration / deceleration (set by Accel/Decel Time setting)

With Auto acceleration / deceleration it is possible to reduce vibration and shocks during starting/stopping the load.

During Auto acceleration the torque is automatically measured and the drive will accelerate to the set frequency with the fastest acceleration time and the smoothest start current.

During Auto deceleration, regenerative energy is measured and the motor is smoothly stopped with the fastest deceleration time.

But when this parameter is set to 04, the actual accel/decel time will be equal to or more than parameter Pr.01-09 ~Pr.01-12 and Pr.01-18 to Pr.01-21.

- M Auto acceleration/deceleration makes the complicated processes of tuning unnecessary. It makes operation efficient and saves energy by acceleration without stall and deceleration without braking resistor.
- In applications with brake resistor or brake unit, Auto deceleration shall not be used.

01 – 16 Acceleration S-Curve
01 – 17 Deceleration S-Curve

Settings 00 S-curve disabled 01 to 07 S-curve enabled (07 is smoothest)


Factory Setting: 00

 Ω This parameter is used to ensure smooth acceleration and deceleration via S-curve.

The S-curve is disabled when set to 00 and enabled when set to 01 to 07. Setting 01 gives the guickest and setting 07 the longest and smoothest S-curve.

The AC motor drive will not follow the Accel/Decel Times in Pr.01-09 to Pr.01-12 and Pr.01-18 to Pr 01-21 when S-curve is enabled

Ш The diagram below shows that the original setting of the Accel/Decel Time is only for reference when the S-curve is enabled. The actual Accel/Decel Time depends on the selected S-curve (01 to 07).

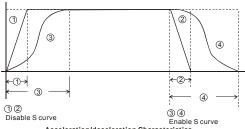

Acceleration/deceleration Characteristics

Group 2: Operation Method Parameters

02 – 00	✓ Source of	First M	aster Frequency Command
			Factory Setting: 00
	Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0~+10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
		05	RS-485 serial communication (RJ-11). Last used frequency not saved.
		06	Combined use of master and auxiliary frequency command See Pr. 02-10 to 02-12
02 – 13	✓ Source of	Secon	d Master Frequency Command
			Factory Setting: 00
	Settings	00	Digital keypad UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
		01	AVI 0~+10VDC
		02	ACI 4 ~ 20mA
		03	AUI -10 ~ +10VDC
		04	RS-485 serial communication (RJ-11). Last used frequency saved.
		05	RS-485 serial communication (RJ-11). Last used frequency not saved.
		06	Combined use of master and auxiliary frequency command See Pr. 02-10 to 02-12
□ Th	nese paramete	ers set t	the Master Frequency Command Source of the AC motor drive.
02 – 01	✓ Source of	First O	peration Command
			Factory Setting: 00
	Settings	00	Digital keypad (PU01)
		01	External terminals. Keypad STOP/RESET enabled.
		02	External terminals. Keypad STOP/RESET disabled.
		03	RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled.

RS-485 serial communication (RJ-11). Keypad STOP/RESET

04

disabled.

02	- 14	✓ Source of	Second	Operation Command
		Settings	00	Digital keynad (PLI01)

		Factory Setting: 00
Settings	00	Digital keypad (PU01)
	01	External terminals. Keypad STOP/RESET enabled.
	02	External terminals. Keypad STOP/RESET disabled.
	03	RS-485 serial communication (RJ-11). Keypad STOP/RESET enabled.
	04	RS-485 serial communication (RJ-11). Keypad STOP/RESET disabled.

- When the AC motor drive is controlled by external terminal, please refer to Pr.02-05 for details.
- ☐ The first /second frequency/operation command is enabled/disabled by Multi Function Input Terminals. Please refer to of Pr.04-04 ~ 04-09.

02 - 10	✓ Source of the second of	✓ Source of the Master Frequency Command				
			Factory Setting: 00			
	Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.			
		01	AVI 0 ~ +10VDC			
		02	ACI 4~20mA			
		03	AUI -10 ~ +10VDC			

02 - 11 ✓ Source of the Auxiliary Frequency Command

04

Factory Setting: 00

Settings	00	Digital keypad (PU01) UP/DOWN keys or Multi-function Inputs UP/DOWN. Last used frequency saved.
	01	AVI 0 ~ +10VDC
	02	ACI 4~20mA
	03	AUI -10 ~ +10VDC
	04	RS-485 serial communication (RJ-11). Last used frequency saved.

RS-485 serial communication (RJ-11). Last used frequency saved.

02 - 12 Combination of the Master and Auxiliary Frequency Command

Factory Setting: 00


Settings	00	Master frequency + Auxiliary frequency
	01	Master frequency - Auxiliary frequency

These three parameters (Pr.02-10~02-12) are enabled when Pr.02-00 or Pr.02-13 are set to 06. If they are enabled, the frequency command will be determined by these parameters.


02 - 02 Stop Method				
			Factory Setting: 00	
Settings	00	STOP: ramp to stop	E.F.: coast to stop	
	01	STOP: coast to stop	E.F.: coast to stop	
	02	STOP: ramp to stop	E.F.: ramp to stop	
	03	STOP: coast to stop	F.F. ramp to stop	

- The parameter determines how the motor is stopped when the AC motor drive receives a valid stop command or detects External Fault.
 - Ramp: the AC motor drive decelerates to Minimum Output Frequency (Pr.01-05) according to the deceleration time and then stops.
 - Coast: the AC motor drive stops the output instantly upon command, and the motor free runs until it comes to a complete standstill.
 - The motor stop method is usually determined by the characteristics of the motor load and how frequently it is stopped.
 - (1) It is recommended to use "ramp to stop" for safety of personnel or to prevent material from being wasted in applications where the motor has to stop after the drive is stopped. The deceleration time has to be set accordingly.
 - (2) If the motor free running is allowed or the load inertia is large, it is recommended to select "coast to stoo".

For example: blowers, punching machines, centrifuges and pumps.

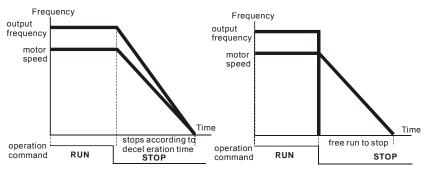

ramp to stop and free run to stop

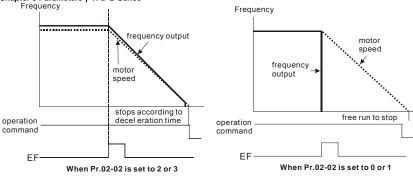


02 - 03 PWM Carrier Frequency Selections

Unit: 1

230V/460V Series					
Power	1-5hp	7.5-25hp	30-60hp	75-100hp	
Fower	0.75-3.7kW	5.5-18.5kW	22-45kW	55-75kW	
Setting Range	01-15 kHz	01-15 kHz	01-09 kHz	01-06 kHz	
Factory Setting	15 kHz	09 kHz	06 kHz	06 kHz	

575V Series				
Power 1-15hp 20-60hp 75-100hp 0.75-11kW 15-45kW 55-75kW				
Setting Range	01-10 kHz	01-08 kHz	01-06 kHz	
Factory Setting	06 kHz	06 kHz	06 kHz	

This parameter determines the PWM carrier frequency of the AC motor drive.

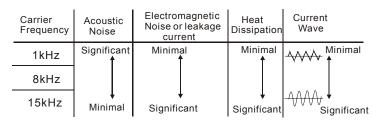


From the table, we see that the PWM carrier frequency has a significant influence on the electromagnetic noise, AC motor drive heat dissipation, and motor acoustic noise.

02 - 04	Motor Direction Control						
				Factory	Setting: 00		
	Settings	00	Enable Forward/Reverse operation				
		01	Disable Reverse operation				
		02	Disabled Forward operation				

The parameter determines the AC motor drive direction of rotation. See Chapter 2 for definition of direction of rotation.

02 - 05 2-wire/ 3-wire Operation Control Modes					
				Factory Setting: 00	
Set	ttings	00	2-wire: FWD/STOP, REV/STOP		
		01	2-wire: FWD/REV, RUN/STOP		
		02	3-wire Operation		

There are three different types of control modes:

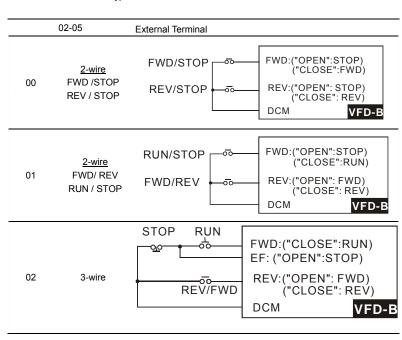


		Factory Setting: 00
Settings	00	Disable. Operation status is not changed even if operation command source Pr.02-01 and/or Pr.02-14 is changed.
	01	Enable. Operation status is not changed even if operation command source Pr.02-01 and/or Pr.02-14 is changed.
	02	Disable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed.
	03	Enable. Operation status will change if operation command source Pr.02-01 and/or Pr.02-14 is changed.

This parameter determines the response of the drive when power on and operation command source is changed.

Pr.02-06	Start lockout (Run when power is ON)	Operation status when operation command source is changed	
0	Disable (AC motor drive will run)	Keep previous status	
1	Enable (AC motor drive won't run)	Keep previous status	
2	Disable (AC motor drive will run)	Change according to the new operation command source	
3	Enable (AC motor drive won't run)	Change according to the new operation command source	


- When the operation command source is from external terminal and operation command is ON (FWD/REV-DCM=close), the AC motor drive will operate according to Pr.02-06 after power is applied. <For terminals FWD and REV only>
 - 1. When Pr.02-06 is set to 0 or 2, AC motor drive will run immediately.
 - When Pr.02-06 is set to 1 or 3, AC motor drive will remain stopped until operation command is received after previous operation command is cancelled.

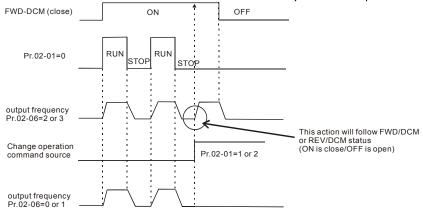

- When the operation command source isn't from the external terminals, independently from whether the AC motor drive runs or stops, the AC motor drive will operate according to Pr.02-06 if the two conditions below are both met.
 - When operation command source is changed to external terminal (Pr.02-01=1 or 2, Pr.02-14=1 or 2)
 - 2. The status of terminal and AC motor drive is different.

And the operation of the AC motor drive will be:

- 1. When setting 0 or 1, the status of AC motor drive is not changed by the terminal status.
- 2. When setting 2 or 3, the status of AC motor drive is changed by the terminal status.

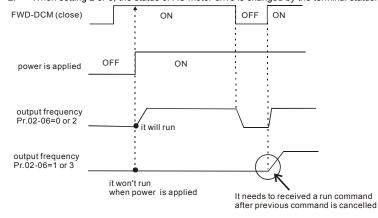

The Line Start Lockout feature does not guarantee that the motor will never start under this condition. It is possible the motor may be set in motion by a malfunctioning switch.

02-	Loss of AC	I Signal	(4-20mA)
			Factory Setting: 00
	Settings	00	Decelerate to 0Hz
		01	Coast to stop and display "EF"
		02	Continue operation by the last frequency command
Ф	This paramete	r determ	nines the behavior when ACI is lost.

When set to 00 or 02, it will display warning message "AnLEr" on the keypad in case of loss of ACI signal and execute the setting. When ACI signal is recovered, the warning message usually disappears automatically. If the warning message is still displayed, please press "MODE" key to make it disappear.

02 - 08	 ✓ Up/Down I	Mode		
				Factory Setting: 00
	Settings	00	Based on Accel/Decel time acc. to Pr.01-0 to 01-21	9 to 01-12 and Pr.01-18
		01	Constant speed (acc. to Pr. 02-09)	
		02	Based on Accel/Decel time acc. to Pr.01-0 to 01-21, but frequency command will be 0	
02 - 09			of Change of UP/DOWN Operation with	Unit: 0.01
	Settings	0.01~	1.00 Hz/ms	Factory Setting: 0.01

 \square These parameters determine the increase/decrease of the master frequency when operated via the Multi-Function Inputs when Pr.04-04~Pr.04-09 are set to 11 (Up command) or 12 (Down command).

02 - 15		Frequency Command	Unit: 0.01
	Settings	0.00 ~ 400.00Hz	Factory Setting: 60.00

 \mathbf{m} This parameter can be used to set frequency command or read keypad frequency command.

Group 3: Output Function Parameters

03 - 00	Multi-function Output Relay (RA1, RB1, RC1)	
		Factory Setting: 08
03 – 01	Multi-function Output Terminal MO1	
		Factory Setting: 01
03 - 02	Multi-function Output Terminal MO2	
		Factory Setting: 02
03 - 03	Multi-function Output Terminal MO3	_
_		Factory Setting: 20


Settings	Function	Description
00	No Function	
01	AC Drive Operational	Active when there is an output from the drive or RUN command is "ON".
02	Master Frequency Attained	Active when the AC motor drive reaches the output frequency setting.
03	Zero Speed	Active when Command Frequency is lower than the Minimum Output Frequency.
04	Over-Torque Detection	Active as long as over-torque is detected. (Refer to Pr.06-03 ~ Pr.06-05)
05	Baseblock (B.B.) Indication	Active when the output of the AC motor drive is shut off during baseblock. Base block can be forced by Multi-function input (setting 9 or 10).
06	Low-Voltage Indication	Active when low voltage(Lv) is detected.
07	Operation Mode Indication	Active when operation command is controlled by external terminal.
08	Fault Indication	Active when faults occur (oc, ov, oH, oL, oL1, EF, cF3, HPF, ocA, ocd, ocn, GFF).
09	Desired Frequency Attained 1	Active when the desired frequency (Pr.03-04) is attained.
10	PLC Program Running	Active when PLC Program is running.
11	PLC Program Step Completed	Active for 0.5 sec each time the multi-step speed is attained.
12	PLC Program Completed	Active for 0.5 sec when the PLC program cycle has completed
13	PLC Operation Paused	Active when PLC operation is paused.

	arameters VFD-B Series	-
Settings	Function	Description
14	Terminal Count Value Attained	Active when the counter reaches Terminal Count Value.
15	Preliminary Count Value Attained	Active when the counter reaches Preliminary Count Value.
16 17 18	Auxiliary Motor 1, 2 and 3	For the fan & pump control applications, one can use the Multi-function Output Terminals (1-3) to define the auxiliary motor. When using with group 10 PID Controls and group 11 Fan and Pump Control, it can control flow of many motors.
19	Heat Sink Overheat Warning (OH1)	When heatsink overheats, it will signal to prevent OH turn off the drive. When it is higher than 85°C (185°F), it will be ON. Or it will be OFF.
20	AC Motor Drive Ready	Active when the drive is on and no abnormality detected.
21	Emergency Stop Indication	Active once the drive's emergency stop function is activated.
22	Desired Frequency Attained 2	Active when the desired frequency (Pr.03-10) is attained.
23	Software Braking Signal	This function is used in conjunction with a VFDB Braking Unit. The output will be activated when the drive needs help braking the load. A smooth deceleration is achieved by using this function.
24	Zero Speed Output Signal	Active unless there is an output frequency present at terminals U/T1, V/T2, and W/T3.
25	Under-current Detection	Active once the drive's current has fallen below its minimum allowable value. (Refer to Pr.06-12, 06-13)
26	Operation Indication (H>=Fmin)	Active when there is output voltage from U, V, W.
27	Feedback Signal Error	Active when the feedback signal is abnormal. (Refer to Pr.10-08, Pr.10-16)
28	User-defined Low- voltage Detection	Active once the DC Bus voltage is too low. (Refer to Pr.06-16, Pr.06-17)
29	Brake Control (Desired Frequency Attained 3)	Active when output frequency ≥Pr.03-13. Deactivated when output frequency ≤Pr.03-14 after STOP command.

03 - 04	Desired Free	quency Attained 1	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

03 - 10 Desired Frequency Attained 2			Unit: 0.01
Settings	0.00 to 400.00 Hz	Factory S	etting: 0.00

If a multi-function output terminal is set to function as Desired Frequency Attained 1 or 2 (Pr.03-00 to Pr.03-03 = 09 or 22), then the output will be activated when the programmed frequency is attained.

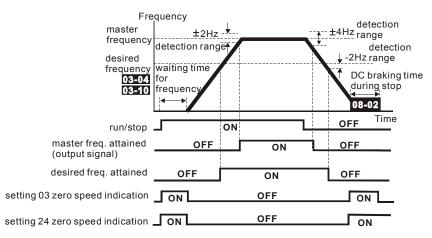

output timing chart of multiple function terminals when setting to frequency attained or zero speed indication

03 - 05 Analog Ou	Analog Output Signal (AFM)				
		Factory Setting: 00			
Settings	00	Analog Frequency Meter (0 to Maximum Output Frequency)			
	01	Analog Current Meter (0 to 250% of rated AC motor drive current)			
	02	Output voltage (0 to Pr.01-02)			
	03	Output frequency command (0 to Maximum Frequency)			
	04	Output motor speed (0 to the Maximum Frequency)			
	05	Load power factor (cos90° to 0°)			

This parameter sets the function of the AFM output 0~+10VDC (ACM is common).

03 - 06	∧ Analog Out	utput Gain	Unit: 1
	Settings	01 to 200%	Factory Setting: 100

This parameter sets the voltage range of the analog output signal.

- When Pr.03-05 is set to 0, the analog output voltage is directly proportional to the output frequency of the AC motor drive. With Pr.03-06 set to 100%, the Maximum Output Frequency (Pr.01-00) of the AC motor drive corresponds to +10VDC on the AFM output.
- Similarly, if Pr.03-05 is set to 1, the analog output voltage is directly proportional to the output current of the AC drive. With Pr.03-06 set to 100%, then 2.5 times the rated current corresponds to +10VDC on the AFM output.



Any type of voltmeter can be used. If the meter reads full scale at a voltage less than 10 volts, the parameter 03-06 should be set using the following formula:

Pr. 03-06 = ((meter full scale voltage)/10) \times 100%

For Example: When using the meter with full scale of 5 volts, adjust Pr.03-06 to 50%. If Pr.03-05 is set to 0, then 5VDC will correspond to Maximum Output Frequency.

03 - 07		tput Multiplying Factor	Unit: 1
	Settings	01 to 20 times	Factory Setting: 01


This parameter determines the multiplying factor for the AC drives digital output frequency at the digital output terminals (DFM-DCM). The pulse frequency is equal to the AC motor drive output frequency multiplied by Pr.03-07. (Pulse frequency = actual output frequency x Pr.03-07)

03 - 08	✓ Terminal (Count Value	Unit: 1
	Settings	00 to 65500	Factory Setting: 00

- This parameter sets the count value of the internal counter. The external terminal TRG increases the internal counter. Upon completion of counting, the specified output terminal will be activated. (Pr.03-00 to Pr.03-03 set to 14).
- When the display shows c5555, the drive has counted 5,555 times. If display shows c5555•, it means that real counter value is between 55,550 to 55,559.

03 - 09	✓ Prelimina	Unit: 1	
	Settings	00 to 65500	Factory Setting: 00

When the counter value reaches this value, the corresponding multi-function output terminal will be activated, provided one of Pr.03-00 to Pr.03-03 set to 15 (Preliminary Count Value Setting). This multi-function output terminal will be deactivated upon completion of Terminal Count Value Attained.

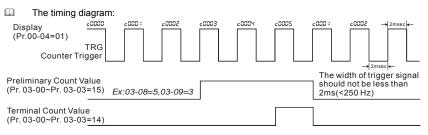

O3 - 11 EF Active when Preliminary Count Value Attained Factory Setting: 00 Settings 00 Preliminary count value attained, no EF display 01 Preliminary count value attained, EF active

If this parameter is set to 01 and the desired value of counter is attained, the AC drive will treat it as a fault. The drive will stop and show the "cEF" message on the display.


03 - 12	Fan Control		
			Factory Setting: 00
	Settings	00	Fan always ON
		01	1 minute after AC motor drive stops, fan will be OFF
		02	AC motor drive runs and fan ON, AC motor drive stops and fan OFF
		03	Fan ON to run when preliminary heatsink temperature attained

This parameter determines the operation mode of cooling fan.

03 - 13 Brake Rele	ease Frequency	Unit: 0.01
Settings	0.00 to 400.00Hz	Factory Setting: 0.00
03 - 14 Brake Eng	age Frequency	Unit: 0.01
Settings	0.00 to 400.00Hz	Factory Setting: 0.00

These two parameters are used to set control of mechanical brake via the output terminals (MO1~MO3) when Pr.03-00~03-03 is set to 29. Refer to the following example for details. Example:

- 1. Case 1: Pr.03-14 ≥ Pr.03-13
- 2. Case 2: Pr.03-14 ≤ Pr.03-13

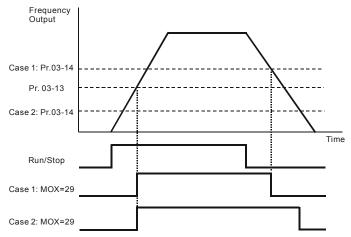

Note: MOX: setting value of Pr.03-00~Pr.03-03

Group 4: Input Function Parameters

•	•				
04 - 00	∧ AVI Anal	log Inpu	t Bias	Unit: 0.01	
	Settings	0.00	to 200.00%		Factory Setting: 0.00
04 - 01	AVI Bias P	olarity			
					Factory Setting: 00
	Settings	00	Positive Bias		
		01	Negative Bias		
04 - 02		t Gain		Unit: 1	
	Settings	1 to 2	200%		Factory Setting: 100
04 - 03	AVI Negati	ve Bias,	Reverse Motion Enable/Disable		
					Factory Setting: 00
	Settings	00	No AVI Negative Bias Command		
		01	Negative Bias: REV Motion Enable	ed	
		02	Negative Bias: REV Motion Disable	t	
04 - 11	∧ACI Ana	log Inpu	t Bias	Unit: 0.01	
	Settings	0.00	to 200.00%		Factory Setting: 0.00
04 - 12	ACI Bias P	olarity			
					Factory Setting: 00
	Settings	00	Positive Bias		
		01	Negative Bias		
04 - 13				Unit: 1	
	Settings	01 to	200%		Factory Setting: 100
04 - 14	ACI Negati	ive Bias,	Reverse Motion Enable/Disable		
					Factory Setting: 00
	Settings	00	No ACI Negative Bias Command		
		01	Negative Bias: REV Motion Enable	ed	
		02	Negative Bias: REV Motion Disable	t	
04 - 15	∧ AUI Ana	log Inpu	t Bias	Unit: 0.01	
	Settings	0.00	to 200.00%		Factory Setting: 0.00
04 - 16	AUI Bias P	olarity			
					Factory Setting: 00
	Settings	00	Positive Bias		
	-	01	Negative Bias		
04 - 17	17 /AUI Input Gain			Unit: 1	
	Settings		to 200%		Factory Setting: 100


04 - 18 AUI Negative Bias, Reverse Motion Enable/Dis
--

			Factory Setting: 00
Settings	00	No AUI Negative Bias Command	
	01	Negative Bias: REV Motion Enabled	
	02	Negative Bias: REV Motion Disabled	

- In a noisy environment, it is advantageous to use negative bias to provide a noise margin.
- Pr.04-00 ~ 04-03, Pr.04-11 ~ 04-18 are used when the source of frequency command is the analog signal. Refer to the following examples.


Example 1: Standard application

This is the most used setting. The user only needs to set Pr.02-00 to 01, 02 or 03. The frequency command comes from external potentiometer/current signal on AVI, ACI or AUI.

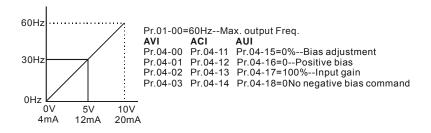


Example 2: Use of bias

This example shows the influence of changing the bias. When the input is 0V (4mA) the output frequency is 10 Hz. At mid-point a potentiometer will give 40 Hz. Once the Maximum Output Frequency is reached, any further increase of the potentiometer or signal will not increase the output frequency. (To use the full potentiometer range, please refer to Example 3.) The value of external input voltage/current 0-8.33V (4-17.33mA) corresponds to the setting frequency 10-60Hz.

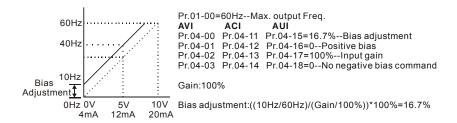


Example 3: Use of bias and gain for use of full range

This example also shows a popular method. The whole scale of the potentiometer can be used as desired. In addition to signals of 0 to 10V and 4 to 20mA, the popular voltage signals also include signals of 0 to 5V, 4 to 20mA or any value under 10V. Regarding the setting, please refer to the following examples.

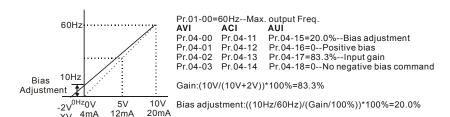

Example 4: Use of 0-5V potentiometer range via gain adjustment

This example shows a potentiometer range of 0 to 5 Volts. Instead of adjusting gain as example below, you can set Pr. 01-00 to 120Hz to achieve the same results.

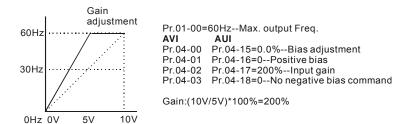

Example 5: Use of negative bias in noisy environment

In this example, a 1V negative bias is used. In noisy environments it is advantageous to use negative bias to provide a noise margin (1V in this example).

Chapter 5 Parameters | VFD-B Series Pr.01-00=60Hz--Max. output Freq. 60Hz AVI AUI 54Hz Pr.04-00 Pr.04-15=10.0%--Bias adjustment Pr.04-01 Pr.04-16=1--Negative bias Pr.04-02 Pr.04-17=100%--Input gain Pr.04-03 Pr.04-18=0--No negative bias command Gain:100% Negative 0Hz


Bias adjustment:((6Hz/60Hz)/(Gain/100%))*100%=10.0%

Example 6: Use of negative bias in noisy environment and gain adjustment to use full potentiometer range

10V


bias 6Hz

In this example, a negative bias is used to provide a noise margin. Also a potentiometer frequency gain is used to allow the Maximum Output Frequency to be reached.

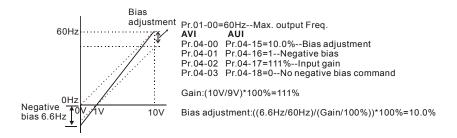


Example 7: Use of 0-10V potentiometer signal to run motor in FWD and REV direction

In this example, the input is programmed to run a motor in both forward and reverse direction. The motor will be idle when the potentiometer position is at mid-point of its scale. Using this example will disable the external FWD and REV controls.

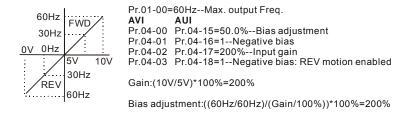

Example 8: Use negative slope

In this example, the use of negative slope is shown. Negative slopes are used in applications for control of pressure, temperature or flow. The sensor that is connected to the input generates a large signal (10V or 20mA) at high pressure or flow. With negative slope settings, the AC motor drive will slow stop the motor. With these settings the AC motor drive will always run in only one direction (reverse). This can only be changed by exchanging 2 wires to the motor.

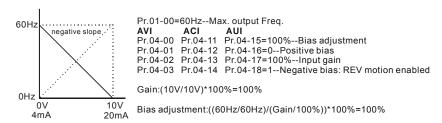

04 - 19 AVI Analog Input Delay	Unit: 0.01
Settings 0.00 to 10.00 sec	Factory Setting: 0.05
04 - 20 ACI Analog Input Delay	Unit: 0.01
Settings 0.00 to 10.00 sec	Factory Setting: 0.05
04 - 21 AUI Analog Input Delay	Unit: 0.01
Settings 0.00 to 10.00 sec	Factory Setting: 0.05

These input delays can be used to filter noisy analog signals.

04 - 22	Analog Inpu	ıt Frequ	ency Resolution	
				Factory Setting: 01
	Settings	00	0.01Hz	
		01	0.1Hz	

It is used to set the unit of the resolution of frequency command when the input source is analog signal.

04 - 04	Multi-function Input Terminal (MI1)	
		Factory Setting: 01
04 - 05	Multi-function Input Terminal (MI2)	
		Factory Setting: 02
04 - 06	Multi-function Input Terminal (MI3)	
		Factory Setting: 03
04 - 07	Multi-function Input Terminal (MI4)	
		Factory Setting: 04
04 - 08	Multi-function Input Terminal (MI5)	
		Factory Setting: 05
04 - 09	Multi-function Input Terminal (MI6)	
		Factory Setting: 06

Settings	Function	Description	
00	No Function	Any unused terminals should be programmed to 0 to insure they have no effect on operation.	
01	Multi-Step Speed Command 1	These four inputs select the multi-speed defined by Pr.05-00 to Pr.05-14 as shown in the diagram at the	
02	Multi-Step Speed Command 2		
03	Multi-Step Speed Command 3	NOTE: Pr.05-00 to Pr.05-14 can also be used to control output speed by programming the AC motor drive's internal PLC function. There are 17 step	
04	Multi-Step Speed Command 4	speed frequencies (including Master Frequency a Jog Frequency) to select for application.	
05	External Reset (N.O.)	The External Reset has the same function as the Reset key on the Digital keypad. After faults such as O.H., O.C. and O.V. are cleared this input can be used to reset the drive.	
06	Accel/Decel Inhibit	When the command is active, acceleration and deceleration is stopped and the AC motor drive maintains a constant speed.	
07	Accel/Decel Time Selection Command 1	Used to select the one of four Accel/Decel Times (Pr.01-09 to Pr.01-12, Pr.01-18 to Pr.01-21). See	
08	Accel/Decel Time Selection Command 2	explanation at the end of this table.	


Settings	Function	Description Chapter 3 Parameters VI D-B Serie
09	External Base Block (N.O.) (Refer to Pr. 08-06)	Parameter values 9, 10 program Multi-Function Input Terminals for external Base Block control. NOTE: When a Base-Block signal is received, the AC motor drive will block all output and the motor
10	External Base Block (N.C.) (Refer to Pr. 08-06)	will free run. When base block control is deactivated, the AC drive will start its speed search function and synchronize with the motor speed, and then accelerate to Master Frequency.
11	UP: Increment Master Frequency	Increment/decrement the Master Frequency each time an input is received or continuously when the input stays active. When both inputs are active at the same
12	DOWN: Decrement Master Frequency	time, the Master Frequency increment/decrement is halted. Please refer to Pr.02-08, 02-09. This function is also called "motor potentiometer".
13	Counter Reset	When active, the counter is reset and inhibited. To enable counting the input should be OFF. Refer to Pr.03-08 and 03-09.
14	Run PLC Program	To run the AC motor drive internal PLC program. NOTE: Pr.05-00 to Pr.05-16 define the PLC program.
15	Pause PLC Program	When the PLC program runs, a Multi-Function Input Terminal, when set to 15, can be used to pause the PLC program.
16	Auxiliary Motor No.1 output disable	Parameter value 16 to 18 program Multi-Function Input Terminal to disable the corresponding auxiliary motor
17	Auxiliary Motor No.2 output disable	via the AC motor drive Multi-function Output Terminals Pr.03-00 to 3-03 (Relay and MO1 to MO3) when set to
18	Auxiliary Motor No.3 output disable	16-18.
19	Emergency Stop (N.O.)	When set to 19 or 20, the Multi-Function Input Terminal can be used to stop the AC motor drive in case of malfunction in the application. It will display "EF1".
20	Emergency Stop (N.C.)	Please "RESET" after the fault has been cleared. Refer to Pr.02-02 for Stop Method.
21	Master Frequency Selection AVI/ACI	ON: ACI OFF: AVI Pr.02-00 and Pr.02-13 are disabled if this parameter value 21 is set. See the explanation below the table.
22	Master Frequency Selection AVI/AUI	ON: AUI OFF: AVI Pr.02-00 and Pr.02-13 are disabled if this parameter value 22 is set. See the explanation below the table.
23	Operation Command Selection (keypad PU01/external terminals)	ON: Operation command via Ext. Terminals OFF: Operation command via Keypad PU01 Pr.02-01 and Pr.02-14 are disabled if this parameter value 23 is set. See the explanation below the table.
24	Auto accel/decel mode disable	ON: Linear accel/decel (Auto accel/decel mode set by Pr.01-15 disabled) OFF: Auto accel/decel mode

Chapter 5 Parameters VFD-B Series				
Settings	Function	Description		
25	Forced Stop (N.C.)	These two parameters have the same function as the "STOP" command with stop method acc. to Pr.02-02.		
26	Forced Stop (N.O.)	No error message is displayed. When parameter value 25 or 26 is enabled, a new RUN command is needed.		
27	Parameter lock enable (N.O.)	When this setting is enabled, all parameters will be locked and write parameters is disabled.		
28	PID function disabled	When input ON with this setting, PID function will be disabled.		
29	Jog FWD/REV command	ON: REV OFF: FWD This command will be effective only when external terminal JOG is active.		
30	External Reset (N.C.)	The function is the same as setting 05 but for use with normally close contact.		
31	Source of second frequency command enabled	Used to select the first/second frequency command source. Refer to Pr.02-00 and 02-13. ON: 2 nd Frequency command source OFF: 1 st Frequency command source		
32	Source of second operation command enabled	Used to select the first/second operation command source. Refer to Pr.02-01 and 02-14. ON: 2 nd Operation command source OFF: 1 st Operation command source		
33	One shot PLC	The function is the same as setting 14 but the trigger signal is a one shot pulse, for example: a push button input. It can be cancelled by a "STOP" command.		
34	Proximity sensor input for simple Index function	This function should be used with Pr.04-23 ~ Pr.04-25.		
35	Output Shutoff Stop (N.O.)	AC motor drive will stop output and the motor free run if one of these settings is enabled. If the status of terminal		
36	Output Shutoff Stop (N.C.)	is changed, AC motor drive will restart from 0Hz.		

N.O.= Normally Open.


N.C.= Normally Closed.

When parameter value 21 and 22 are set and these two terminals are ON, the priority of analog input signals are AVI > ACI > AUI.

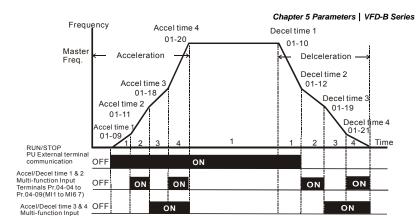

Accel/Decel Time and Multi-function Input Terminals

	MI2=08	MI1=07
Accel/decel time 1	OFF	OFF
Accel/decel time 2	OFF	ON
Accel/decel time 3	ON	OFF
Accel/decel time 4	ON	ON

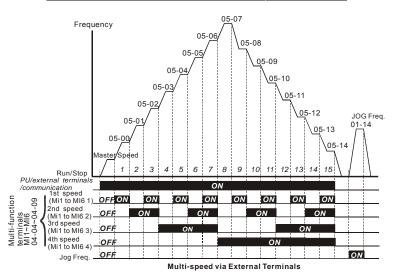


Revision June 2006, BE14, SW V4.08 & V5.00

Terminals Pr.04-04 to Pr.04-09 (MI1 to MI6 8)

	MI4=4	MI3=3	MI2=2	MI1=1
Master frequency	OFF	OFF	OFF	OFF
1 st speed	OFF	OFF	OFF	ON
2 nd speed	OFF	OFF	ON	OFF
3 rd speed	OFF	OFF	ON	ON
4 th speed	OFF	ON	OFF	OFF
5 th speed	OFF	ON	OFF	ON
6 th speed	OFF	ON	ON	OFF
7 th speed	OFF	ON	ON	ON
8 th speed	ON	OFF	OFF	OFF
9 th speed	ON	OFF	OFF	ON
10 th speed	ON	OFF	ON	OFF
11 th speed	ON	OFF	ON	ON
12 th speed	ON	ON	OFF	OFF
13 th speed	ON	ON	OFF	ON
14 th speed	ON	ON	ON	OFF
15 th speed	ON	ON	ON	ON


04 - 10 Digital Termin	Unit: 2	
Settings	1 to 20	Factory Setting: 1

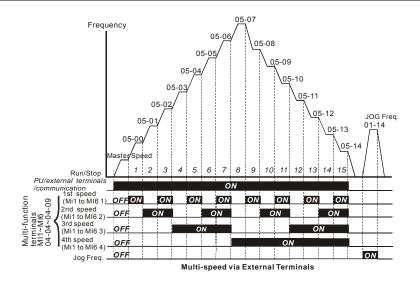

This parameter is to delay the signals on digital input terminals. 1 unit is 2 msec, 2 units are 4 msec, etc. The delay time is to debounce noisy signals that could cause the digital terminals to malfunction.

04 - 23	Gear Ratio f	or Simple Index Function	Unit: 1
	Settings	4 ~ 1000	Factory Setting: 200
04 - 24	Index Angle	for Simple Index Function	Unit: 0.1
	Settings	0.0 ~360.0°	Factory Setting: 180.0
04 - 25	Deceleration	Time for Simple Index Function	Unit: 0.01
	Settings	0.00 ~100.00 sec	Factory Setting: 0.00

- The simple index function is used to position the machine/motor at the same position when it stops. The function should be used with setting 34 for Multi-Function Input Terminals (04-04 to 04-09).
- The function diagram is shown below. The machine is driven by a gear motor or other reduction gearbox. The trigger position of the proximity sensor is used as the starting point of the index angle. When the stop command is initiated, the AC motor drive will not decelerate until the proximity sensor is triggered. After that the AC motor drive begins to decelerate and stop according to the Pr.04-24 and Pr.04-25.

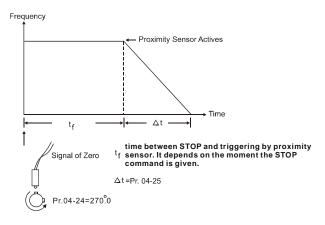

Settings

Group 5: Multi-step speeds and PLC (Process Logic Control) parameters

•		Ū	, ·
05 - 00			Unit: 0.01
05 - 01			Unit: 0.01
05 - 02			Unit: 0.01
05 - 03			Unit: 0.01
05 - 04			Unit: 0.01
05 - 05			Unit: 0.01
05 - 06			Unit: 0.01
05 - 07	₩8th Step Speed Frequency		Unit: 0.01
05 - 08			Unit: 0.01
05 - 09			Unit: 0.01
05 - 10			Unit: 0.01
05 - 11			Unit: 0.01
05 - 12			Unit: 0.01
05 - 13			Unit: 0.01
05 - 14			Unit: 0.01
			Factory Setting: 0.00

The Multi-Function Input Terminals (refer to Pr.04-04 to 04-09) are used to select one of the AC motor drive Multi-step speeds. The speeds (frequencies) are determined by Pr.05-00 to 05-14 as shown above. They are also used in conjunction with Pr.05-15 to 05-31 for PLC programs.


0.00 to 400.00 Hz

05 - 15	PLC Mode		
			Factory Setting: 00
	Settings	00	Disable PLC operation
		01	Execute one program cycle
		02	Continuously execute program cycles
		03	Execute one program cycle step by step
		04	Continuously execute program cycles step by step
□ Th	is parameter :	selects	the mode of PLC operation for the AC motor drive. The AC motor drive

- This parameter selects the mode of PLC operation for the AC motor drive. The AC motor drive will change speeds and directions according to the desired user programming.
- This parameter can be applied in the PLC operation of general small machines, food processing machines and washing equipment.

Example 1 (Pr.05-15 = 1): Execute one cycle of the PLC program. The parameter settings are:

- 1. Pr.05-00 to 05-14: 1st to 15th speed (sets the frequency of each speed)
- 2. Pr.04-04 to 04-09: Multi-Function Input Terminals (set one multi-function terminal as 14 PLC auto-operation).
- Pr.03-00 to 03-03: Multi-Function Output Terminals (set a Multi-Function Terminal as 10-PLC running indication, 11-PLC step completed and/or 12-PLC program completed).
- 4. Pr.05-15: PLC mode setting.
- 5. Pr.05-16: Direction of operation for the 1st to 15th speed.
- 6. Pr.05-17 to 05-31: Operation time setting of the 1st to 15th speed.

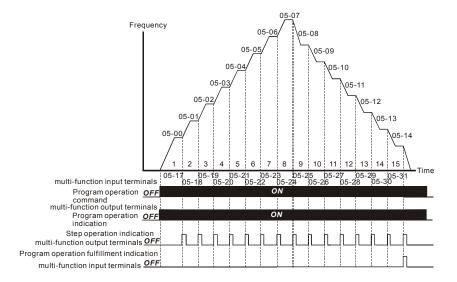




The above diagram shows one complete PLC cycle. To restart the cycle, turn the PLC program off and on again.

Example 2 (Pr.05-15 = 2): Continuously execute program cycles:

The diagram above shows the PLC program stepping through each speed. Setting Pr.05-15 to 2 continuously executes the program. To stop the PLC program, one must either pause the program or turn it off. (Refer to Pr.04-04 to 04-09 values 14 and 15).

Example 3 (Pr.05-15 = 3) Execute one cycle step by step:

The example below shows how the PLC can perform one cycle at a time, within a complete cycle. Each step will use the accel/decel times in Pr.01-09 to Pr.01-12. Note that the actual time each step stays at its intended frequency is reduced, due to the time for accel/decel.

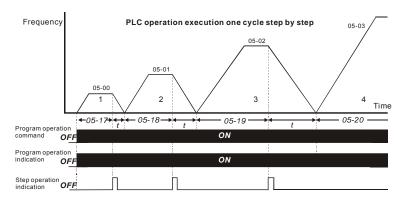


05 - 16	PLC Forwar	d/Reverse Motion	Unit: 1
	Settings	00 to 32767	Factory Setting: 00

This parameter controls the direction of motion for the Multi-Step Speeds Pr.05-00 to Pr.05-14 during PLC mode. All other direction commands are invalid during the PLC mode.



The equivalent 15-bit number is used to program the forward/reverse motion for each of the 15 speed steps. The binary notation for the 15-bit number must be translated into decimal notation and then entered.



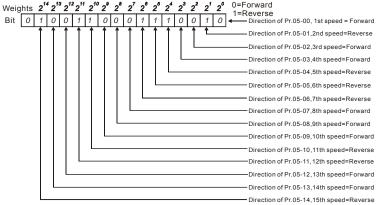

The setting value The setting value = $bit14x2^{14} + bit13x2^{13} + + bit2x2^{2} + bit1x2^{4} + bit10x2^{0}$ = $1x2^{14} + 1x2^{17} + 1x2^{10} + 1x2^{10}$

Setting 05-16

NOTE: 2¹⁴=16384 2¹³=8192 2¹²=4096 2¹¹=2048 2¹⁰=1024 2⁶=64 29=512 28=256 2 = 128 25=32 $2^2 = 4$ 2⁴=16 $2^3 = 8$ 21=2 2°=1

Onapter 5	arameters VI D-D deries	
05 - 17	Time Duration of 1st Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 18	Time Duration of 2nd Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 19	Time Duration of 3rd Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 20	Time Duration of 4th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 21	Time Duration of 5th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 22	Time Duration of 6th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 23	Time Duration of 7th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 24	Time Duration of 8th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 25	Time Duration of 9th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 26	Time Duration of 10th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 27	Time Duration of 11th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 28	Time Duration of 12th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 29	Time Duration of 13th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 30	Time Duration of 14th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
05 - 31	Time Duration of 15th Step Speed	Unit: 1 or 0.1sec (See Pr.05-32)
	Settings 0.0 to 65500	Factory Setting: 0.0

- Pr.05-17 to Pr.05-31 correspond to operation time of each step speed defined by Pr.05-00 to Pr.05-14. The maximum setting of 65500 seconds will be displayed as "t6550•". If display shows "t6550", it means 6550 seconds.
- If a parameter is set to "00" (0 sec), the corresponding step will be skipped. This is commonly used to reduce the number of program steps.

05 - 32 Time Unit Settings

Factory Setting: 00


Settings 00 1 sec 01 0.1 sec

This parameter sets the time unit for Pr.05-17~Pr.05-31.

05 - 33	The Amplitude of Wobble Vibration					
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00			
05 - 34	Wobble Sl	kip Frequency				
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00			

The frequency change will be as shown in the following diagram. These two parameters are specific for textile machinery.

- Frequency of Δ top point F_{up} = master frequency F + Pr.05-33 + Pr.05-34.
- Frequency of Δ down point F_{down}= master frequency F Pr.05-33 Pr.05-34.

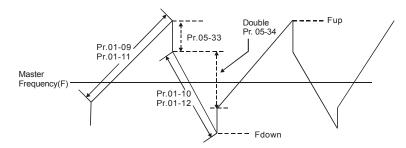


Group 6: Protection Parameters

06 - 00	Over-Vol	tage Stall Pre	Unit: 0.1	
	Settings	230V series	0.1 to 255.0V	Factory Setting: 390.0
		460V series	0.1 to 510.0V	Factory Setting: 780.0
		575V series	0.1 to 1025.0V	Factory Setting: 975.0
	00 Disable Over-voltage Stall Prevention (wit resistor)			brake unit or brake

- During deceleration, the DC bus voltage may exceed its Maximum Allowable Value due to motor regeneration. When this function is enabled, the AC motor drive will not decelerate further and keep the output frequency constant until the voltage drops below the preset value again.
- Over-Voltage Stall Prevention must be disabled (Pr.06-00=00) when a brake unit or brake resistor is used.




With moderate inertia load, over-voltage stall prevention will not occur and the real deceleration time will be equal to the setting of deceleration time. The AC drive will automatically extend the deceleration time with high inertia loads. If the deceleration time is critical for the application, a brake resistor or brake unit should be used.

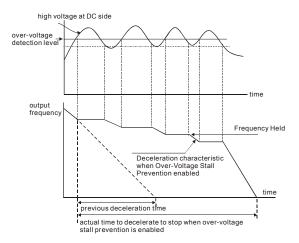


06 - 01 Over-Curr	Unit: 1	
Settings	20 to 250%	Factory Setting: 170

- A setting of 100% is equal to the Rated Output Current of the drive.
- During acceleration, the AC drive output current may increase abruptly and exceed the value specified by Pr.06-01 due to rapid acceleration or excessive load on the motor. When this function is enabled, the AC drive will stop accelerating and keep the output frequency constant until the current drops below the maximum value.

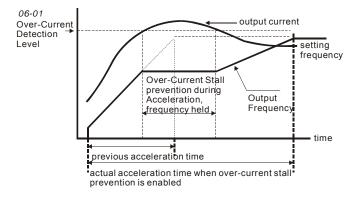

0	6 - 02 Over-curre	Unit: 1	
	Settings	20 to 250%	Factory Setting: 170

If the output current exceeds the setting specified in Pr.06-02 when the drive is operating, the drive will decrease its output frequency to prevent the motor stall. If the output current is lower than the setting specified in Pr.06-02, the drive will accelerate again to catch up with the set frequency command value.

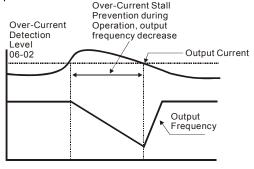

over-current stall prevention during operation

06 - 03	Over-Torqu	ue Detec	ction Mode (OL2)
			Factory Setting: 00
	Settings	00	Over-Torque detection disabled.
		01	Over-Torque detection enabled during constant speed operation. After over-torque is detected, keep running until OL1 or OL occurs.
		02	Over-Torque detection enabled during constant speed operation. After over-torque is detected, stop running.
		03	Over-Torque detection enabled during acceleration. After over- torque is detected, keep running until OL1 or OL occurs.
		04	Over-Torque detection enabled during acceleration. After over- torque is detected, stop running.

This parameter determines the operation mode of the drive after the over-torque (OL2) is detected via the following method: if the output current exceeds the over-torque detection level (Pr.06-04) longer than the setting of Pr.06-05 Over-Torque Detection Time, the warning message "OL2" is displayed. If a Multi-Functional Output Terminal is to over-torque detection (Pr.03-00~03-03=04), the output is on. Please refer to Pr.03-00~03-03 for details.

06 - 04	Over-Torque	Unit: 1	
	Settings	10 to 200%	Factory Setting: 150

This setting is proportional to the Rated Output Current of the drive.

06 - 05	Over-Torque	e Detection Time (OL2)	Unit: 0.1
	Settings	0.1 to 60.0 sec	Factory Setting: 0.1

This parameter sets the time for how long over-torque must be detected before "OL2" is displayed.

06 - 06 Electronic Thermal Overload Relay Selection (OL1)


Factory Setting: 02

Settings	00	Operate with a Standard Motor (self-cooled by fan)
	01	Operate with a Special Motor (forced external cooling)
	02	Operation disabled

This function is used to protect the motor from overloading or overheating.

06 - 07 Electronic	Unit: 1	
Settings	30 to 600 sec	Factory Setting: 60

The parameter determines the time required for activating the I2t electronic thermal protection function. The graph below shows I2t curves for 150% output power for 1 minute.

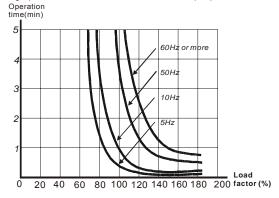

06 -	08 Present Fa	Present Fault Record				
06 -	09 Second Mo	Second Most Recent Fault Record				
06 -	10 Third Most	Third Most Recent Fault Record				
06 -	11 Fourth Rec	ent Fau	ılt Record			
				Factory Setting: 00		
	Readings	00	No fault			
		01	Over-current (oc)			
		02	Over-voltage (ov)			
		03	Overheat (oH)			
		04	Overload (oL)			
		05	Overload1 (oL1)			

External fault (EF)

06

mapici o i didinetero	1 1 2 2 0	31100
	07	IGBT protection (occ)
	80	CPU failure (cF3)
	09	Hardware protection failure (HPF)
	10	Current exceeds 2 times rated current during accel.(ocA)
	11	Current exceeds 2 times rated current during decel.(ocd)
	12	Current exceeds 2 times rated current during steady state operation (ocn)
	13	Ground fault (GFF)
	14	Reserved
	15	CPU READ failure (CF1)
	16	CPU WRITE failure (CF2)
	17	Reserved
	18	Motor over load (oL2)
	19	Auto accel/decel failure (CFA)
	20	Software/password protection (codE)
	21	Emergency stop (EF1)
	22	Phase-Loss (PHL)
	23	Preliminary count value attained, EF active (cEF)
	24	Under-current (Lc)
	25	Analog feedback signal error (AnLEr)
	26	PG feedback signal error (PGErr)
The De OC OO 4-	D= 00 44	the factor and the state of the

In Pr.06-08 to Pr.06-11 the four most recent faults that occurred, are stored. After removing the cause of the fault, use the reset command to reset the drive.

06 - 12	Under-Curr	ent Det	ection Level	Unit: 1
	Settings	00 ~	100%	Factory Setting: 00
		00 [Disabled	
06 - 13	Under-Curr	ent Det	ection Time	Unit: 0.1
	Settings	0.1~	3600.0 sec	Factory Setting: 10.0
06 - 14	Under-Curr	ent Det	ection Mode	
				Factory Setting: 00
	Settings	00	Warn and keep operating	
		01	Warn and ramp to stop	
		02	Warn and coast to stop	
		03	Warn, after coast to stop, restart (de	elay 06-15 setting time)

06 - 15 Under-Cu	Unit: 1	
Settings	1~600 min	Factory Setting: 10

If output current is lower than the setting Pr.06-12 for a time that exceeds Pr.06-13 setting during operation, the AC drive will warn per Pr.06-14 setting. If Pr.06-14 is set to 03, the AC drive will restart after the delay time set by Pr.06-15 is up.

06 - 16	User-Defined	Low-Voltage Detection Level (Lv)	Unit: 1
Settings 00 Disabled			_
		230V series: 220 ~ 300VDC	Factory Setting: 00
		460V series: 440 ~ 600VDC	Factory Setting: 00
		575V series: 520 ~ 780VDC	Factory Setting: 00
06 - 17	User-Defined	Low-Voltage Detection Time	Unit: 0.1
	Settings	0.1~ 3600.0 sec	Factory Setting: 0.5

When the DC BUS voltage is lower than the setting of Pr.06-16 for a time exceeding the setting of Pr.06-17, the AC motor drive will output a signal when Pr.03-00 ~ Pr.03-03 is set to 28.

06 - 18 Reserved

Group 7: Motor Parameters

Settings

07 -	Motor Rated Current	Unit: 1
	Settings 30 to 120% Factory Set	tting: 100
	Use the following formula to calculate the percentage value entered in this parameter	er:
	(Motor Current / AC Drive Current) x 100%	
	with Motor Current=Motor rated current in A on type shield	
	AC Drive Current=Rated current of AC drive in A (see Pr.00-01)	
	Pr.07-00 and Pr.07-01 must be set if the drive is programmed to operate in Vector C	ontrol
	mode (Pr.0-09 = 2 or 3). They also must be set if the "Electronic Thermal Overload F	Relay"
	(Pr.06-06) or "Slip Compensation" functions are selected.	
07 -	✓ Motor No-load Current	Unit: 1

The rated current of the AC drive is regarded as 100%. The setting of the Motor no-load current will affect the slip compensation.

The setting value must be less than Pr.07-00 (Motor Rated Current).

07 - 02 **Torque Compensation		ompensation	Unit: 0.1
	Settings	0.0 to 10.0	Factory Setting: 0.0

This parameter may be set so that the AC drive will increase its voltage output to obtain a higher torque. Only to be used for V/f control mode.

Too high torque compensation can overheat the motor.

01 to 90%

07 - 03		ensation (Used without PG)	Unit: 0.01
	Settings	0.00 to 3.00	Factory Setting: 0.00

While driving an asynchronous motor, increasing the load on the AC motor drive will cause an increase in slip and decrease in speed. This parameter may be used to compensate the slip by increasing the output frequency. When the output current of the AC motor drive is bigger than the motor no-load current (Pr.07-01), the AC drive will adjust its output frequency according to this parameter.

07 - 04 Number of	of Motor Poles	Unit: 2
Settings	02 to 10	Factory Setting: 04

Factory Setting: 40

This parameter sets the number of motor poles (must be an even number).

07 - 05	Motor Para	meters	Auto Tuning	Unit: 1
			Fa	actory Setting: 00
	Settings	00	Disable	
		01	Auto Tuning R1 (motor doesn't run)	
	02 Auto Tuning R1 + No-load Test (with running motor			

Start Auto Tuning by pressing RUN key after this parameter is set to 01 or 02.

When set to 01, it will only auto detect R1 value and Pr.07-01 must be input manually. When set to 02, the AC motor drive should be unloaded and the values of Pr.07-01 and Pr.07-06 will be set automatically.

- The steps to AUTO-Tuning are:
 - Make sure that all the parameters are set to factory settings and the motor wiring is correct.
 - Make sure the motor has no-load before executing auto-tuning and the shaft is not connected to any belt or gear motor.
 - 3. Fill in Pr.01-01, Pr.01-02, Pr.07-00, Pr.07-04 and Pr.07-08 with correct values.
 - 4. After Pr.07-05 is set to 2, the AC motor drive will execute auto-tuning immediately after receiving a "RUN" command. (Note: The motor will run!). The total auto tune time will be 15 seconds + Pr.01-09 + Pr.01-10. Higher power drives need longer Accel/|Decel time (factory setting is recommeded). After executing, Pr.07-05 is set to 0.
 - After executing, please check if there are values filled in Pr.07-01 and Pr.07-06. If not, please press RUN key after setting Pr.07-05 again.
 - Then you can set Pr.00-09 to 02/03 and set other parameters according to your application requirement.



- 1. In vector control mode it is not recommended to have motors run in parallel.
- It is not recommended to use vector control mode if motor rated power exceeds the rated power of the AC motor drive.

07 - 06 Motor Line-to-line Resistance R1		Unit: 1
Settings	00 to 65535 m Ω	Factory Setting: 00

The motor auto tune procedure will set this parameter. The user may also set this parameter without using Pr.07-05.

07 - 07 Reserved

07 - 08	07 - 08 Motor Rated Slip		Unit: 0.01
	Settings	0.00 to 20.00Hz	Factory Setting: 3.00

Refer to the rated rpm and the number of poles on the nameplate of the motor and use the following equation to calculate the rated slip.

Rated Slip (Hz) = F_{base} (Pr.01-01 base frequency) – (rated rpm x motor pole 120)

This parameter is valid only in vector mode.

07 - 09 Slip Compensation Limit

Settings 00 to 250% Factory Setting: 200

This parameter sets the upper limit of the compensation frequency (the percentage of Pr.07-08).

Example: when Pr.07-08=5Hz and Pr.07-09=150%, the upper limit of the compensation frequency is 7.5Hz. Therefore, for a 50Hz motor, the max. output is 57.5Hz.

07 - 10 Reserved

07 - 11 Reserved

07 - 12 Torque Compensation Time Constant Unit: 0.01 Settings 0.01 ~10.00 sec Factory Setting: 0.05 07 - 13 Slip Compensation Time Constant Unit: 0.01 Settings 0.05 ~10.00 sec Factory Setting: 0.10

- Setting Pr.07-12 and Pr.07-13 changes the response time for the compensation.
- When Pr.07-12 and Pr.07-13 are set to 10.00 sec, its response time for the compensation will be the longest. But if the settings are too short, unstable system may occur.

07 -	-14 Accumulati	ve Motor Operation Time (Min.)	Unit: 1
	Settings	00 ~1439	Factory Setting: 00
07 -	Accumulati	ve Motor Operation Time (Day)	Unit: 1
	Settings	00 ~65535	Factory Setting: 00

Unit¹

Pr.07-14 and Pr.07-15 are used to record the motor operation time. They can be cleared by setting to 00 and time is less than 60 seconds is not recorded.

Group 8: Special Parameters

08 - 00	DC Braking (Current Level	Unit: 1
	Settings	00 to 100%	Factory Setting: 00

This parameter sets the level of DC Braking Current output to the motor during start-up and stopping. When setting DC Braking Current, the Rated Current (Pr.00-01) is regarded as 100%. It is recommended to start with a low DC Braking Current Level and then increase until proper holding torque has been attained.

08 - 01	DC Braking	Time during Start-up	Unit: 0.1
	Settings 0.0 to 60.0 sec		Factory Setting: 0.0

This parameter determines the duration of the DC Braking current after a RUN command.


When the time has elapsed, the AC motor drive will start accelerating from the Minimum Frequency (Pr.01-05).

08 - 02	DC Braking	Time during Stopping	Unit: 0.1
	Settings	0.0 to 60.0 sec	Factory Setting: 0.0

This parameter determines the duration of the DC Braking current during stopping. If stopping with DC Braking is desired, Pr.02-02 Stop Method must be set to 00 or 02 for RAMP stop.

08 - 03 Start-Point	t for DC Braking	Unit: 0.01
Settings	0.00 to 400.00Hz	Factory Setting: 0.00

This parameter determines the frequency when DC Braking will begin during deceleration.

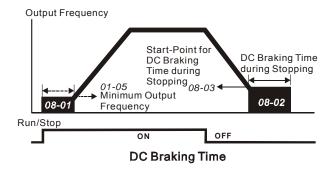

- DC Braking during Start-up is used for loads that may move before the AC drive starts, such as fans and pumps. Under such circumstances, DC Braking can be used to hold the load in position before setting it in motion.
 DC Braking during stopping is used to shorten the stopping time and also to hold a stopped
 - DC Braking during stopping is used to shorten the stopping time and also to hold a stopped load in position. For high inertia loads, a dynamic braking resistor may also be needed for fast decelerations.

08 - 04 Momentary Power Loss Operation Selection

Factory Setting: 00

- Settings 00 Operation stops after momentary power loss.
 - Operation continues after momentary power loss, speed search starts with the Master Frequency reference value.
 - Operation continues after momentary power loss, speed search starts with the minimum frequency.
- This parameter determines the operation mode when the AC motor drive restarts from a momentary power loss.
- When using a PG card with PG (encoder), speed search will begin at the actual PG (encoder) feedback speed and settings 01 and 02 will be invalid.

08 - 05 Maximum Allowable Power Loss Time Unit: 0.1 Settings 0.1 to 5.0 sec Factory Setting: 2.0

- If the duration of a power loss is less than this parameter setting, the AC motor drive will resume operation. If it exceeds the Maximum Allowable Power Loss Time, the AC motor drive output is then turned off (coast stop).
- The selected operation after power loss in Pr.08-04 is only executed when the maximum allowable power loss time is ≤5 seconds and the AC motor drive displays "Lu".


But if the AC motor drive is powered off due to overload, even if the maximum allowable power loss time is \le 5 seconds, the operation mode as set in Pr.08-04 is not executed. In that case it starts up normally.

08 - 06	Baseblock 1	Time for Speed Search (BB)	Unit: 0.1
	Settings	0.1 to 5.0 sec	Factory Setting: 0.5

- When momentary power loss is detected, the AC drive will block its output and then wait for a specified period of time (determined by Pr.08-06, called Base-Block Time) before resuming operation. This parameter should be set at a value to ensure that any residual regeneration voltage from the motor on the output has disappeared before the drive is activated again.
- This parameter also determines the waiting time before resuming operation after External Baseblock and Auto Restart after Fault (Pr.08-14).
- When using a PG card with PG (encoder), speed search will begin at the actual PG (encoder) feedback speed and settings 01 and 02 will be invalid.

08 - 07	Current Limi	t for Speed Search	Unit: 1
	Settings	30 to 200%	Factory Setting: 150


Following a momentary power loss, the AC motor drive will start its speed search operation only if the output current is greater than the value set by Pr.8-07. When the output current is less than the value of Pr.8-07, the AC motor drive output frequency is at "speed synchronization point". The drive will start to accelerate or decelerate back to the operating frequency at which it was running prior to the power loss.

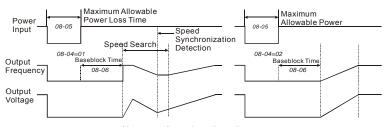

Momentary Power Loss Operation

08 - 08	Skip Frequency 1 Upper Limit	Unit: 0.01				
08 - 09	Skip Frequency 1 Lower Limit	Unit: 0.01				
08 - 10	Skip Frequency 2 Upper Limit	Unit: 0.01				
08 - 11	Skip Frequency 2 Lower Limit	Unit: 0.01				
08 - 12	Skip Frequency 3 Upper Limit					
08 - 13	Skip Frequency 3 Lower Limit	Unit: 0.01				
	Settings 0.00 to 400.00Hz	Factory Setting: 0.00				

- These parameters set the Skip Frequencies. It will cause the AC motor drive never to remain within these frequency ranges with continuous frequency output.
- These six parameters should be set as follows Pr.08-08 ≥ Pr.08-09 ≥ Pr.08-10 ≥ Pr.08-11 ≥ Pr.08-12 ≥ Pr.08-13.

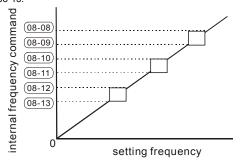

08 - 14 Auto Resta	rt After Fault	Unit: 1
Settings	00 to 10	Factory Setting: 00
	00 Disable	

- Only after an over-current OC or over-voltage OV fault occurs, the AC motor drive can be reset/restarted automatically up to 10 times.
- Setting this parameter to 0 will disable the reset/restart operation after any fault has occurred.

 When enabled, the AC motor drive will restart with speed search, which starts at the frequency before the fault. To set the waiting time before restart after a fault, please set Pr. 08-06 Base Block Time for Speed Search.

08 - 21	Auto Reset	Time at Restart after Fault	Unit: 1
Settings		00 to 60000 sec	Factory Setting: 600


This parameter should be used in conjunction with Pr.08-14.

For example: If Pr.08-14 is set to 10 and Pr.08-21 is set to 600s (10 min), and if there is no fault for over 600 seconds from the restart for the previous fault, the auto reset times for restart

after fault will be reset to 10.

08 - 15 Automatic Energy-saving

Settings 00 Energy-saving operation disabled

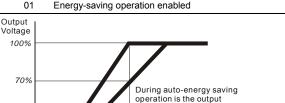

Output Frequency

voltage lowered as much as possible to keep the load. Maximum output voltage is 70% of the normal output voltage.

08 - 16 Automatic Voltage Regulation (AVR)

Factory Setting: 00

Factory Setting: 00

Settings	00	AVR function enabled
	01	AVR function disabled
	02	AVR function disabled for deceleration


- The rated voltage of the motor is usually AC230V/200V 50Hz/60Hz and the input voltage of the AC motor drive may vary between 180V to 264 VAC 50Hz/60Hz. Therefore, when the AC motor drive is used without AVR function, the output voltage will be the same as the input voltage. When the motor runs at voltages exceeding the rated voltage with 12% 20%, its lifetime will be shorter and it can be damaged due to higher temperature, failing insulation and unstable torque output.
- AVR function automatically regulates the AC motor drive output voltage to the Maximum Output Voltage (Pr.01-02). For instance, if Pr.01-02 is set at 200 VAC and the input voltage is at 200V to 264VAC, then the Maximum Output Voltage will automatically be reduced to a maximum of 200 VAC.
- When motor stops with deceleration, it will shorten deceleration time. When setting this parameter to 02 with auto acceleration/deceleration, it will offer a quicker deceleration.


	_		Chapter 5 Farameters	VFD-B Selles
08 - 17	Software E	Braking Level		Unit: 1
00 - 17	(the Action	Level of the Braking Resistor)		
	Settings	230V series: 370 to 430V	Factory	Setting: 380
		460V series: 740 to 860V	Factory	Setting: 760
		575V series: 925 to 1075V	Factory	Setting: 950

- \square This parameter sets the DC-bus voltage at which the brake chopper is activated.
- Ш This parameter will be invalid for models above 15kW/20hp for which VFDB brake unit must be used.

08 - 18	Base Block Speed Search						
			Factory Setting: 00				
	Settings	00	Speed search starts with last frequency command				
	O1 Speed search starts with minimum output frequency (Pr.01-05)						

 \square This parameter determines the AC motor drive restart method after External Base Block is enabled

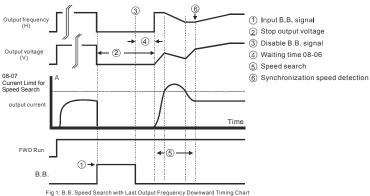

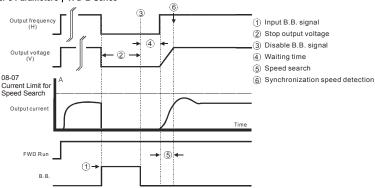

 $Fig\ 2: B.B.\ Speed\ Search\ with\ Last\ Output\ Frequency\ Downward\ Timing\ Chart$

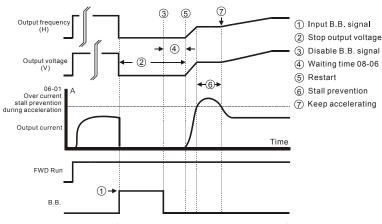


Fig 3: B.B. Speed Search with Minimum Output Frequency Upward Timing Chart

08 - 19	Speed Search during Start-up					
				Factory Setting: 00		
	Settings	00	Speed search disable			
		01	Speed search enable			

This parameter is used for starting and stopping a motor with high inertia. A motor with high inertia will take a long time to stop completely. By setting this parameter, the user does not need to wait for the motor to come to a complete stop before restarting the AC motor drive. If a PG card and encoder is used on the drive and motor, then the speed search will start from the speed that is detected by the encoder and accelerate quickly to the commanded frequency.

Pr.08-04 and Pr.08-06 will be disabled when using this parameter with PG feedback control.




Please make sure Pr.07-04, Pr.10-10, and Pr.10-11 are set correctly. An incorrect setting may cause the motor to exceed its speed limit and permanent damage to the motor and machine can occur.

08 -	08 - 20 ✓ Speed Search Frequency during Start-up							
'				Factory Setting: 00				
	Settings	00	Setting Frequency					
		01	Maximum Operation Frequency (01-00)					
	This paramete	r deteri	mines the start value of the speed search freque	ency.				
08 -	✓ Compen	sation	Coefficient for Motor Instability	Unit: 1				
08 -	Compen Settings		Coefficient for Motor Instability 1000	Unit: 1 Factory Setting: 00				
08	Settings	00~		Factory Setting: 00				
	Settings The drift currer	00~	1000	Factory Setting: 00				
	Settings The drift currer using this para	00~ nt will o	1000 ccur in a specific zone of the motor and it will m	Factory Setting: 00 nake motor instable. By				

Group 9: Communication Parameters

There is a built-in RS-485 serial interface, marked RJ-11 near to the control terminals. The pins are defined below:

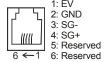

Each VFD-B AC drive has a pre-assigned communication address specified by Pr.09-00. The RS485 master then controls each AC motor drive according to its communication address.

00	00	(0)	Control Address	
09	- 00	∦ Commun	nication Address	
		Settings	01 to 254	Factory Setting: 01
	If t	he AC motor	r drive is controlled	by RS-485 serial communication, the communication
	ad	dress for this	s drive must be set	via this parameter. And the communication address for each
	AC	motor drive	must be different a	nd unique.

09 -	- 01								
		Factory Setting							
	Settings	00	Baud rate 4800 bps (bits / second)						
		01	Baud rate 9600 bps						
		02	Baud rate 19200 bps						
		03	Baud rate 38400 bps						
Ω.	This naramete	r is used	to set the transmission speed between the RS4	185 master (PLC, PC					

This parameter is used to set the transmission speed between the RS485 master (PLC, PC,
etc.) and AC motor drive.

09 - 02	✓ Transmi	ssion Fa	ault Treatment	
				Factory Setting: 03
	Settings	00	Warn and keep operating	
		01	Warn and RAMP to stop	
		02	Warn and COAST to stop	
		03	No warning and keep operating	
m Th		- !4.4	- b t t if t i	

- This parameter is set to how to react if transmission errors occur.
- See list of error messages below (see section 3.6.)

09 - 03 ×T	ime-out Detection	Unit: 0.1	
Sett	ings 0.0	~ 60.0 sec	Factory Setting: 0.0
	0.0	Disable	

If Pr.09-03 is not equal to 0.0, Pr.09-02=00~02, and there is no communication on the bus during the Time Out detection period (set by Pr.09-03), "cE10" will be shown on the keypad.

09 - 04								
				Factory Setting: 00				
	Settings	00	Modbus ASCII mode, protocol <7,N,2>					
		01	Modbus ASCII mode, protocol <7,E,1>					
		02	Modbus ASCII mode, protocol <7,0,1>					
		03	Modbus RTU mode, protocol <8,N,2>					
		04	Modbus RTU mode, protocol <8,E,1>					
		05	Modbus RTU mode, protocol <8,0,1>					

- 1. Control by PC or PLC
 - ★A VFD-B can be set up to communicate on Modbus networks using one of the following modes: ASCII (American Standard Code for Information Interchange) or RTU (Remote Terminal Unit). Users can select the desired mode along with the serial port communication protocol in Pr.09-04.
 - **★**Code Description:

ASCII mode:

Each 8-bit data is the combination of two ASCII characters. For example, a 1-byte data:

64 Hex, shown as '64' in ASCII, consists of '6' (36Hex) and '4' (34Hex).

Character	'0'	'1'	'2'	'3'	'4'	'5'	'6'	'7'
ASCII code	30H	31H	32H	33H	34H	35H	36H	37H

Character	'8'	'9'	'A'	'B'	C'	'D'	'E'	'F'
ASCII code	38H	39H	41H	42H	43H	44H	45H	46H


RTU mode:

Each 8-bit data is the combination of two 4-bit hexadecimal characters. For example, 64 Hex.


2. Data Format

10-bit character frame (For ASCII):

Chapter 5 Parameters | VFD-B Series (7.N.2)

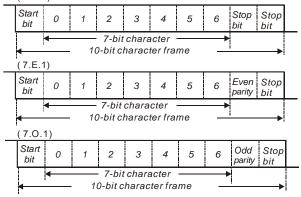

11-bit character frame (For RTU):

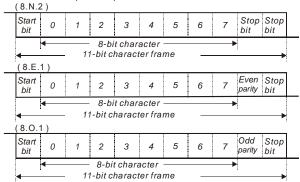

\Box 3. Communication Protocol

3.1 Communication Data Frame:

ASCII mode:

STX	Start character ':' (3AH)
Address Hi	Communication address:
Address Lo	8-bit address consists of 2 ASCII codes
Function Hi	Command code:
Function Lo	8-bit command consists of 2 ASCII codes
DATA (n-1)	Contents of data:
to	Nx8-bit data consist of 2n ASCII codes
DATA 0	n<=20, maximum of 40 ASCII codes
LRC CHK Hi	LRC check sum:
LRC CHK Lo	8-bit check sum consists of 2 ASCII codes
END Hi	End characters:
END Lo	END1= CR (0DH), END0= LF(0AH)

RTU mode:

START	A silent interval of more than 10 ms
Address	Communication address: 8-bit address
Function	Command code: 8-bit command
DATA (n-1) to DATA 0	Contents of data: nx8-bit d ata, n<=40 (20 x 16-bit data)
CRC CHK Low	CRC check sum:
CRC CHK High	16-bit check sum consists of 2 8-bit characters
END	A silent interval of more than 10 ms

3.2 Address (Communication Address)

Valid communication addresses are in the range of 0 to 254. A communication address equal to 0, means broadcast to all AC drives (AMD). In this case, the AMD will not reply any message to the master device.

00H: broadcast to all AC drives

01H: AC drive of address 01

0FH: AC drive of address 15

10H: AC drive of address 16

:

FEH: AC drive of address 254

For example, communication to AMD with address 16 decimal (10H):

ASCII mode: Address='1','0' => '1'=31H, '0'=30H

RTU mode: Address=10H

3.3 Function (Function code) and DATA (data characters)

The format of data characters depends on the function code.

03H: read data from register

06H: write single register

08H: loop detection

10H: write multiple registers

The available function codes and examples for VFD-B are described as follows:

(1) 03H: multi read, read data from registers.

Example: reading continuous 2 data from register address 2102H, AMD address is 01H.

ASCII mode:

Command mossage:

Command message:				
STX	.,			
Address	'0'			
Address	'1'			
E	'0'			
Function	'3'			
	'2'			
Starting data	'1'			
address	'0'			
	'2'			
	'0'			
Number of data	'0'			
(count by word)	'0'			
	'2'			
LRC Check	'D'			
LIVO OHECK	'7'			
END	CR			
LIND	LF			

Response message:

STX '.' Address '0' -11' -11' -12' -13' Number of data (Count by byte) '4' Content of starting address 2102H '0' Content of address 2103H '0' -17' -17' -17' -17' -17' -17' -17' -17		
Address '1' Function '0' Number of data (Count by byte) '4' Content of starting address 2102H '7' Content of address 2103H '0' LRC Check '1' COR	STX	٠.,
Function '0' Function '3' Number of data (Count by byte) '4' Content of starting address 2102H '0' Content of address 2103H '0' LRC Check '7' COP	Addross	'0'
Function '3' Number of data (Count by byte) '4' Content of starting address 2102H '0' Content of address 2103H '0' LRC Check '7' COP	Address	'1'
Number of data (Count by byte) '4' Content of starting address 2102H '0' Content of address 2103H '0' LRC Check '1' COR	- "	
(Count by byte) Content of starting address 2102H Content of address 2103H Content of address	Function	'3'
Content of starting address 2102H '7' Content of address 2103H '0' LRC Check '7' LRC Check CP	Number of data	'0'
Content of starting address 2102H '7' Content of address 2103H '0' LRC Check '7' LRC Check '1' CONTENT OF START OF S	(Count by byte)	'4'
address 2102H	Content of starting	'1'
2102H '7' '0' '0' Content of address 2103H '0' LRC Check '7' CP		'7'
Content of address 2103H '0' LRC Check '7' COP		'7'
Content of address 2103H '0' '0' LRC Check '1' '1'	210211	'0'
2103H '0' '0' LRC Check '7' '1'		
10' LRC Check 7' '1' CR	Content of address	'0'
LRC Check '7'	2103H	'0'
LRC Check '1'		'0'
.1 [']	LPC Chock	'7'
END CR	LIVO OHECK	'1'
LIND IF	END	CR
-	LIND	LF

RTU mode:

Command message:

Address	01H
Function	03H
Starting data	21H
address	02H
Number of data	H00
(count by word)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

Response message:				
Address	01H			
Function	03H			
Number of data (count by byte)	04H			
Content of address	17H			
2102H	70H			
Content of address	00H			
2103H	00H			
CRC CHK Low	FEH			
CRC CHK High	5CH			

(2) 06H: single write, write single data to register.

Example: writing data 6000(1770H) to register 0100H. AMD address is 01H.

ASCII mode:

Command message:

STX	.,,
Address	'0'
Address	'1'
Function	·0'
i unction	·6'
Data address	'0'
	'1'
	'0'
	'0'
Data content	'1'
	'7'
	'7'

Response message:	
STX	٠.,
Address	'0'
Audress	'1'
Function	'0'
1 unction	'6'
	'0'
Data address	'1'
	'0'
	'0'
Data content	'1'
	'7'
	'7'

Command message:

	'0'
LRC Check	'7'
LRC Check	'1'
END	CR
END	1 F

RTU mode:

Command message:

Address	01H
Function	06H
Data address	01H
	00H
Data content	17H
Data Content	70H
CRC CHK Low	86H
CRC CHK High	22H

Chapter 5 Parameters | VFD-B Series Response message:

	'0'
LRC Check	'7'
	'1'
END	CR
END	LF

Response message:

Address	01H
Function	06H
Data address	01H
Data address	00H
Data content	17H
Data Content	70H
CRC CHK Low	86H
CRC CHK High	22H

(3) 10H: write multiple registers (write multiple data to registers)

Example: Set the multi-step speed,

Pr.05-00=50.00 (1388H), Pr.05-01=40.00 (0FA0H). AC drive address is 01H.

ASCII Mode:

Command message:

Command message.		
STX		
Address 1	΄Ο'	
Address 0	'1'	
Function 1	'1'	
Function 0	'0'	
	'0'	
Starting data	'5'	
address	'0'	
	΄Ο'	
	·0'	
Number of data	'0'	
(count by word)	΄Ο'	
	'2'	
Number of data	'0'	
(count by byte)	'4'	
	'1'	
The first data	'3'	
content	'8'	
	'8'	
	'0'	
The second data	'F'	
content	'A'	
	'0'	
LRC Check	'9'	
LKC CHECK	'A'	
END	CR	
LIND	LF	

Pasnonsa massaga

Response message:		
STX	٠.,	
Address 1	'0'	
Address 0	'1'	
Function 1	'1'	
Function 0	'0'	
	,0,	
Starting data	' 5'	
address	'0'	
	,0,	
	'0'	
Number of data (count by word)	,0,	
	,0,	
	'2'	
LRC Check	Έ'	
LRC CHECK	'8'	
END	CR	
END	LF	

RTU mode:

Co	mmar	nd n	nessa	age

Command message.		
Address	01H	
Function	10H	
Starting data	05H	
address	00H	
Number of data	00H'	
(count by word)	02H	
Number of data	04	
(count by byte)		
The first data	13H	
content	88H	
The second data	0FH	
content	A0H	
CRC Check Low	'9'	
CRC Check High	'A'	

Response message:

response message.		
Address	01H	
Function	10H	
Starting data address	05H	
	00H	
Number of data	00H	
(count by word)	02H	
CRC Check Low	41H	
CRC Check High	04H	

3.4 Check sum

ASCII mode:

LRC (Longitudinal Redundancy Check) is calculated by summing up, module 256, the values of the bytes from ADR1 to last data character then calculating the hexadecimal representation of the 2's-complement negation of the sum.

For example, reading 1 word from address 0401H of the AC drive with address 01H.

·.,
'0'
'1'
'0'
'3'
'0'
'4'
'0'
'1'
'0'
'0'
'0'
'1'
'F'
'6'
CR
LF

01H+03H+04H+01H+00H+01H=0AH, the 2's-complement negation of 0AH is $\underline{\textbf{F6}}$ H.

RTU mode:

Address	01H
Function	03H
Starting data address	21H
	02H
Number of data	00H
(count by word)	02H
CRC CHK Low	6FH
CRC CHK High	F7H

CRC (Cyclical Redundancy Check) is calculated by the following steps:

Step 1: Load a 16-bit register (called CRC register) with FFFFH.

Step 2: Exclusive OR the first 8-bit byte of the command message with the low order byte of the 16-bit CRC register, putting the result in the CRC register.

Step 3: Examine the LSB of CRC register.

Step 4: If the LSB of CRC register is 0, shift the CRC register one bit to the right with MSB zero filling, then repeat step 3. If the LSB of CRC register is 1, shift the CRC register one bit to the right with MSB zero filling, Exclusive OR the CRC register with the polynomial value A001H, then repeat step 3.

Step 5: Repeat step 3 and 4 until eight shifts have been performed. When this is done, a complete 8-bit byte will have been processed.

Step 6: Repeat step 2 to 5 for the next 8-bit byte of the command message. Continue doing this until all bytes have been processed. The final contents of the CRC register are the CRC value. When transmitting the CRC value in the message, the upper and lower bytes of the CRC value must be swapped, i.e. the lower order byte will be transmitted first

The following is an example of CRC generation using C language. The function takes two arguments:

Unsigned char* data ← a pointer to the message buffer

Unsigned char length ← the quantity of bytes in the message buffer

The function returns the CRC value as a type of unsigned integer.

```
Unsigned int crc_chk(unsigned char* data, unsigned char length){
int i:
 unsigned int reg crc=0xFFFF;
while(length--){
  red crc ^= *data++:
  for(i=0:i<8:i++){}
   if(reg crc & 0x01){ /* LSB(b0)=1 */
```

```
reg_crc=(reg_crc>>1) ^ 0xA001;
}else{
    reg_crc=reg_crc >>1;
    }
}
return reg_crc;
}
```

3.5 Address list

The contents of available addresses are shown as below:

Content	Address		Function	
AC drive Parameters	GGnnH	GG means parameter group, nn means parameter number, for example, the address of Pr 4-01 is 0401H. Referencing to chapter 5 for the function of each parameter. When reading parameter by command code 03H, only one parameter can be read at one time.		
Command Write only	2000H	00B: No function 01B: Stop 10B: Run 11B: Jog + Run		
		Bit 2-3	Reserved	
		Bit 4-5	00B: No function 01B: FWD 10B: REV 11B: Change direction	
Command Write only	2000H	Bit 6-7	00B: Comm. forced 1st accel/decel 01B: Comm. forced 2nd accel/decel 10B: Comm. forced 3rd accel/decel 11B: Comm. forced 4th accel/decel	
		Bit 8-11	Represented 16 step speeds.	
		Bit 12 0: No comm. multi step speed or accel/dectime 1: Comm. multi step speed or accel/decel time		
		Bit 13-15	Reserved	
	2001H	Frequency	command	
		Bit 0	1: EF (external fault) on	
	2002H	Bit 1	1: Reset	
		Bit 2-15	Reserved	
Status		Error code:		
monitor	2100H	00: No error occurred		
Read only		01: Over-current (oc)		
		02: Over-voltage (ov)		
		03: Overheat (oH)		
		04: Overload (oL) 05: Overload1 (oL1)		
<u> </u>	l	Ub: Overload ((0L1)		

			Chapter 5 Parameters VFD-B Series
Content	Address		Function
			nal fault (EF)
			short circuit protection (occ)
			failure (cF3)
			vare protection failure (HPF)
		10: Currei	nt exceeds 2 times rated current during accel (ocA)
			nt exceeds 2 times rated current during decel (ocd)
		12: Curre	nt exceeds 2 times rated current during steady state
		opera	ation (ocn)
			nd Fault (GFF)
		14: Low v	oltage (Lv)
	2100H		failure 1 (cF1)
			failure 2 (cF2)
		17: Base	
		18: Overlo	oad (oL2)
		19: Auto a	accel/decel failure (cFA)
		20: Softwa	are protection enabled (codE)
		21: EF1 E	Emergency stop
		22: PHL (Phase-Loss)
		23: cEF (F	Preliminary count value attained, EF active)
		24: Lc (Ur	nder-current)
		25: AnLEr (Analog feedback signal error)	
		26: PGErr	r (PG feedback signal error)
		Status of	AC drive
		311	LED: 0: light off, 1: light up
			00: RUN LED
	2101H	D'' 0 :	01: STOP LED
		Bit 0-4	02: JOG LED
			03: FWD LED
			04: REV LED
		Bit 5	0: F light off, 1: F light on
		Bit 6	0: H light off, 1: H light on
		Bit 7	0: "u" light off, 1: "u" light on
			1: Master frequency Controlled by communication
		Bit 8	interface
		Bit 9	Master frequency controlled by analog signal
			Operation command controlled by
		Bit 10	communication interface
		Bit 11	1: Parameters have been locked
		Bit 12	0: AC drive stops, 1: AC drive operates
		Bit 13	1: Jog command
		Bit 14-15	Reserved
	2102H		y command (F)
	2102H 2103H		
1	2103H 2104H		equency (H) Irrent (AXXX.X)
1	2104H 2105H		Voltage (UXXX.X)
1	2105H 2106H		voltage (UXXX.X) Itage (EXXX.X)
1	2106H 2107H		ber of Multi-Step Speed Operation
1			
1	2108H		ber of PLC operation If external TRIGGER
1	2109H		
1	210AH	Power fac	
L	210BH	∟stimated	d torque ratio (XXX.X)

Content	Address	Function
	210CH	Motor speed (rpm)
	210DH	PG pulse (low word) /unit time (Pr.10-15)
	210EH	PG pulse (high word) /unit time (Pr.10-15)
	210FH	Output power (KW)
	2110H	Reserved
	2200H	Feedback Signal (XXX.XX %)
	2201H	User-defined (Low word)
	2202H	User-defined (High word)
	2203H	AVI analog input (XXX.XX %)
	2204H	ACI analog input (XXX.XX %)
	2205H	AUI analog input (XXX.XX %)
	2206H	Display temperature of heatsink (°C)

3.6 Exception response:

The AC motor drive is expected to return a normal response after receiving command messages from the master device. The following depicts the conditions when no normal response is replied to the master device.

The AC motor drive does not receive the messages due to a communication error; thus, the AC motor drive has no response. The master device will eventually process a timeout condition.

The AC motor drive receives the messages without a communication error, but cannot handle them. An exception response will be returned to the master device and an error message "CExx" will be displayed on the keypad of AC motor drive. The xx of "CExx" is a decimal code equal to the exception code that is described below.

In the exception response, the most significant bit of the original command code is set to 1, and an exception code which explains the condition that caused the exception is returned.

Example of an exception response of command code 06H and exception code 02H:

ASCII mode:

, loon mode.				
STX				
Address Low	'0'			
Address High	'1'			
Function Low	'8'			
Function High	'6'			
Exception code	'0'			
Exception code	'2'			
LRC CHK Low	'7'			
LRC CHK High	'7'			
END 1	CR			
END 0	LF			

RTU mode:

01H
86H
02H
C3H
A1H

The explanation of exception codes:

Exception code	Explanation
01	Illegal function code: The function code received in the command message is not available for the AC motor drive.
02	Illegal data address: The data address received in the command message is not available for the AC motor drive.
03	Illegal data value: The data value received in the command message is not available for the AC drive.
04	Slave device failure: The AC motor drive is unable to perform the requested action.
10	Communication time-out: If Pr.09-03 is not equal to 0.0, Pr.09-02=00~02, and there is no communication on the bus during the Time Out detection period (set by Pr.09-03), "cE10" will be shown on the keypad.

3.7 Communication program of PC:

The following is a simple example of how to write a communication program for Modbus ASCII mode on a PC by C language.

#include<stdio h>

#include<dos.h>

#include<conio.h>

#include<process.h>

#define PORT 0x03F8 /* the address of COM1 */

/* the address offset value relative to COM1 */

#define THR 0x0000

#define RDR 0x0000

#define BRDL 0x0000

#define IFR 0x0001

#define BRDH 0x0001

#define LCR_0x0003

#define MCR 0x0004

#define LSR 0x0005

#define MSR 0x0006

unsigned char rdat[60];

/* read 2 data from address 2102H of AC drive with address 1 */

unsigned char tdat[60]={':','0','1','0','3','2','1','0','2', '0','0','0','2','D','7','\r',\\n'};

void main(){

int i:

outportb(PORT+MCR,0x08); /* interrupt enable */

```
outportb(PORT+IER.0x01):
                                /* interrupt as data in */
outportb(PORT+LCR.(inportb(PORT+LCR) | 0x80)):
/* the BRDL/BRDH can be access as LCR.b7==1 */
outportb(PORT+BRDL.12):
                                /* set baudrate=9600. 12=115200/9600*/
outportb(PORT+BRDH,0x00);
outportb(PORT+LCR.0x06):
                               /* set protocol, <7,N,2>=06H, <7,E,1>=1AH,
<7,O,1>=0AH, <8,N,2>=07H, <8,E,1>=1BH, <8,O,1>=0BH */
for(i=0:i<=16:i++){}
while(!(inportb(PORT+LSR) & 0x20)); /* wait until THR empty */
outportb(PORT+THR.tdat[i]): /* send data to THR */ }
i=0:
while(!kbhit()){
if(inportb(PORT+LSR) & 0x01){ /* b0==1, read data ready */
rdat[i++]=inportb(PORT+RDR); /* read data form RDR */
} } }
```

09 - 05 Reserved

09 - 07

 \square


09 - 06 Reserved

Unit: 0.5
Factory Setting: 00

✓ Response Delay TimeSettings 00 ~ 200 msec

as shown in the following.

This parameter is the response delay time after AC drive receives communication command

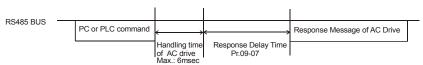

^{*} This parameter is only for firmware version 4.01 and higher.

Group 10: PID Control

10	- 00 Input Term	ninal for	PID Feedback	
	4			Factory Setting: 00
	Settings	00	Inhibit PID operation: external terminals A frequency command if required (Pr.02-00)	
		01	Negative PID feedback from external term	ninal AVI (0 ~ +10VDC).
		02	Negative PID feedback from external term	ninal ACI (4 ~ 20mA).
		03	Positive PID feedback from external term	inal AVI (0 ~ +10VDC).
		04	Positive PID feedback from external term	inal ACI (4 ~ 20mA).
Ш	Note that the r	neasure	d variable (feedback) controls the output fred	quency (Hz). Select input
	terminal accor	dingly. N	Make sure this parameter setting does not co	nflict with the setting for
	Pr.02-00 (Mas	ter Freq	uency).	
	When Pr.02-00	0 is set t	o 01 or 02, the set point (Master Frequency)	for PID control is obtained
	from the AVI/A	CI exte	rnal terminal (0 to +10V or 4-20mA) or from n	nulti-step speed. When
	Pr.02-00 is set	t to 00, t	he set point is obtained from the keypad.	
	Negative feedl	back me	ans: +target value – feedback	
	Positive feedb	ack mea	ans: -target value + feedback.	
10	- 01 Gain Over	the PID	Detection Value	Unit: 0.01
	Settings	0.00	to 10.00	Factory Setting: 1.00

10 - 01	Gain Over	the PID Detection Value	Unit. 0.01
	Settings	0.00 to 10.00	Factory Setting: 1.00

Ш This is the gain adjustment over the feedback detection value. Refer to PID control block diagram in Pr.10-06 for detail.

10 - 02		Unit: 0.01	
	Settings	0.0 to 10.0	Factory Setting: 1.0

Ш This parameter specifies proportional control and associated gain (P). If the other two gains (I and D) are set to zero, proportional control is the only one effective. With 10% deviation (error) and P=1, the output will be P x10% x Master Frequency.



The parameter can be set during operation for easy tuning.

10 - 03	✓ Integral	Gain (I)	Unit: 0.01
	Settings	0.00 to 100.00 sec	Factory Setting: 1.00
		0.00 Disable	

This parameter specifies integral control (continual sum of the deviation) and associated gain (I). When the integral gain is set to 1 and the deviation is fixed, the output is equal to the input

(deviation) once the integral time setting is attained.



The parameter can be set during operation for easy tuning.

10 - 04	✓ Derivative	Control (D)	Unit: 0.01
	Settings	0.00 to 1.00 sec	Factory Setting: 0.00

This parameter specifies derivative control (rate of change of the input) and associated gain (D). With this parameter set to 1, the PID output is equal to differential time x (present deviation – previous deviation). It increases the response speed but it may cause overcompensation.



The parameter can be set during operation for easy tuning.

ı	10 - 05	Upper Bound	Unit: 1	
		Settings	00 to 100 %	Factory Setting: 100
-				


- This parameter defines an upper bound or limit for the integral gain (I) and therefore limits the Master Frequency.
- The formula is: Integral upper bound = Maximum Output Frequency (Pr.01-00) x (Pr.10-05).

 This parameter can limit the Maximum Output Frequency.

10 - 06 Primary Delay Filter Time		ay Filter Time	Unit: 0.1
	Settings	0.0 to 2.5 sec	Factory Setting: 0.0

To avoid amplification of measurement noise in the controller output, a derivative digital filter is inserted. This filter helps to dampen oscillations.

The complete PID diagram is in the following:

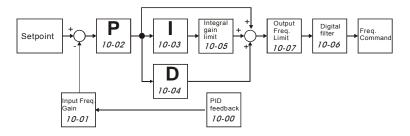

10 - 07	PID Output	Frequency Limit	Unit: 1
	Settings	00 to 110 %	Factory Setting: 100

This parameter defines the percentage of output frequency limit during the PID control. The formula is Output Frequency Limit = Maximum Output Frequency (Pr.01-00) X Pr.10-07 %.

This parameter will limit the Maximum Output Frequency. An overall limit for the output frequency can be set in Pr.01-07.

10 - 08 Feedback Signal Detection Time			Unit: 0.1
	Settings	0.0 to d 3600.0 sec	Factory Setting: 60.0

- This parameter defines the time during which the PID feedback must be abnormal before a warning (see Pr.10-09) is given. It also can be modified according to the system feedback signal time.
- If this parameter is set to 0.0, the system would not detect any abnormality signal.

10 - 09	★ Treatment of the Erroneous Feedback Signals (for PID and PG feedback error)			
				Factory Setting: 00
	Settings	00	Warning and keep operating	
		01	Warning and RAMP to stop	
		02	Warning and COAST to stop	

AC motor drive action when the feedback signals (analog PID feedback or PG (encoder) feedback) are abnormal acc. to Pr.10-16.

10 - 16 Deviation Range of PID Feedback Signal Error		Unit: 0.01
Settings	0.00~100.00%	Factory Setting: 100.00


The base is Pr.01-00. When in PID feedback control, if | Source of PID reference target – feedback | > Pr.10-16 and exceeds Pr.10-08 detection time, the AC drive will operate according to Pr.10-09.

10 - 10 PG Pulse Range		Unit: 1	
	Settings	1 ~ 40000 (Max=20000 for 2-pole motor)	Factory Setting: 600

- A Pulse Generator (PG) or encoder is used as a sensor that provides a feedback signal of the motor speed. This parameter defines the number of pulses for each cycle of the PG control.
- For PG or encoder feedback an option PG-card is needed.

10 - 11 PG Input			
			Factory Setting: 00
Settings	00	Disable PG	
	01	Single phase	
	02	Forward / Counterclockwise rotation	
	03	Reverse / Clockwise rotation	

The relationship between the motor rotation and PG input is illustrated below:

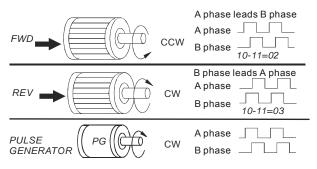

10 - 12	10 - 12 / ASR (Auto Speed Regulation) control (with PG only) (P)		Unit: 0.1
	Settings	0.0 to 10.0	Factory Setting: 1.0

This parameter specifies Proportional control and associated gain (P), and is used for speed control with PG (encoder) feedback.



The parameter can be set during operation for easy tuning.

10 - 13 / ASR (Au	Unit: 0.01	
Settings	0.00 to 100.00	Factory Setting: 1.00
	0.00 disable	

This parameter specifies Integral control and associated gain (I), and is used for speed control with PG (encoder) feedback.



The parameter can be set during operation for easy tuning.


10 - 14 Speed Co	ntrol Output Frequency Limit	Unit: 0.01
Settings	0.00 to 100.00 Hz	Factory Setting: 10.00

This parameter limits the amount of correction by the PI control on the output frequency when controlling speed via PG (encoder) feedback. It can limit the maximum output frequency.

10 - 15	10 - 15 Sample time for refreshing the content of 210DH and 210EH		
	Settings	0.01~1.00 seconds	Factory Setting: 0.10

When the signal source of feedback control is PG (encoder) and it needs to read the pulse numbers from communication, this parameter can be used to set the refresh time of two communication addresses (210D and 210E).


Speed Control Diagram

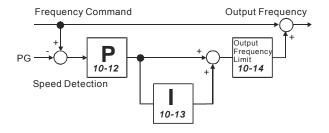

Group 11: Fan and Pump Control Parameters

11 - 00	V/f Curve Selection			
			Factory Setting: 00	
	Settings 00 V/f curve determined by Pr.01-00 to Pr.01-06.		V/f curve determined by Pr.01-00 to Pr.01-06.	
		01	1.5 power curve	
	02 1.7 power curve		1.7 power curve	
		03	Square curve	
		04	Cube curve	

- Confirm the load curve and select the proper V/f curve before use.
- The available V/f curves are shown below:

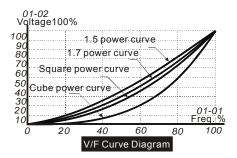

11 - 01	Start-up Free	quency of the Auxiliary Motor	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

This parameter serves as a reference for the startup value of the auxiliary motor. If the setting is 0, the auxiliary motor cannot be activated.

11 - 02	Stop Frequ	ency of the Auxiliary Motor	Unit: 0.01
	Settings	0.00 to 400.00 Hz	Factory Setting: 0.00

When the output frequency reaches this parameter value, the auxiliary motor will be stopped.

There must be a minimum of 5 Hz difference between the start frequency and stop frequency of auxiliary motor. (Pr.11-01-Pr.11-02) > 5 Hz.

11 - 03	Time Delay before Starting the Auxiliary Motor		Unit: 0.1	
	Settings	0.0 to 3600.0 sec	Factory Setting: 0.0	

11 - 04 Time Delay before Stopping the Auxiliary Motor		Unit: 0.1	
	Settings	0.0 to 3600.0 sec	Factory Setting: 0.0

- The number of Multi-function Output terminals set to 16, 17, 18 decides the number of auxiliary motors. The maximum is three.
- The start/stop frequency of the auxiliary motor must have a minimum of 5Hz difference.
- The start/stop delay time can prevent the AC motor drive from overloaded during starting/stopping.
- These parameters determine the starting sequence of auxiliary motors.

The auxiliary motor started first will be stopped first.


Example: Start sequence: motor 1 -> motor 2 -> motor 3

Stop sequence: motor 1 -> motor 2 -> motor 3

The flowchart of auxiliary motor start/stop sequence:

Pr.11-01 Start-up frequency = 50 Hz, Pr.11-02 Stop frequency = 20 Hz


Pr.11-03 Time delay before start up = 10 sec, Pr.11-04 Time delay before stopping = 5 sec

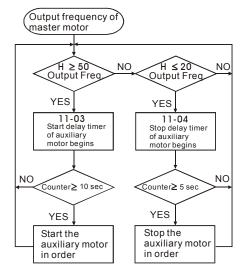

Onapici C	- urumeters	VI D-D Genes	
11 - 05	Sleep/Wal	ke Up Detection Time	Unit: 0.1
	Settings	0.0 to 6550.0 sec	Factory Setting: 0.0
11 - 06	Sleep Free	quency	Unit: 0.01
	Settings	0.00 to Fmax Hz	Factory Setting: 0.00
11 - 07	Wakeup Frequency		Unit: 0.01
	Settings	0.00 to Fmax Hz	Factory Setting: 0.00

- When the actual output frequency ≤ Pr.11-06 and the time exceeds the setting of Pr.11-05, the AC motor drive will be in sleep mode.
- When the actual frequency command > Pr.11-07 and the time exceeds the setting of Pr.11-05, the AC motor drive will restart
- When the AC motor drive is in sleep mode, frequency command is still calculated by PID.

 When frequency reaches wake up frequency, AC motor drive will accelerate from Pr.01-05 min. frequency by V/f curve.
- The wake up frequency must be higher than sleep frequency.

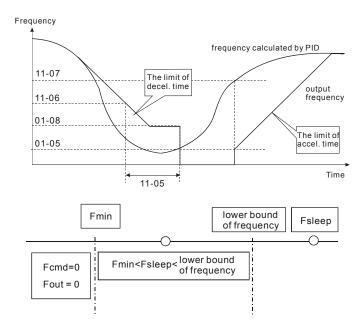

	When output frequency \leq sleep frequency and time > detection time, it will go in sleep mode.
	When min. output frequency \leqq PID frequency \leqq lower bound of frequency and sleep function
	is enabled (output frequency \leqq sleep frequency and time > detection time), frequency will be 0
	(in sleep mode). If sleep function is disabled, frequency command = lower bound frequency.
Ш	When PID frequency < min. output frequency and sleep function is enabled (output frequency
	\leq sleep frequency and time > detection time), output frequency =0 (in sleep mode).
	If output frequency \leq sleep frequency but time < detection time, frequency command = lower
	frequency. If sleep function is disabled, output frequency =0.

This page intentionally left blank.

Chapter 6 Fault Code Information

The AC motor drive has a comprehensive fault diagnostic system that includes several different alarms and fault messages. Once a fault is detected, the corresponding protective functions will be activated. The following faults are displayed as shown on the AC motor drive digital keypad display. The four most recent faults can be read from the digital keypad or communication.



Wait 5 seconds after a fault has been cleared before performing reset via keypad of input terminal.

6.1 Common Problems and Solutions

Fault Name	Fault Descriptions	Corrective Actions		
oc	Over current Abnormal increase in current.	Check if motor power corresponds with the AC motor drive output power. Check the wiring connections to U, V, W for possible short circuits. Check the wiring connections between the AC motor drive and motor for possible short circuits, also to ground.		
occ	IGBT protection (Insulated Gate Bipolar Transistor)	 Check for loose contacts between AC motor drive and motor. Increase the Acceleration Time. Check for possible excessive loading conditions at the motor. If there are still any abnormal conditions when operating the AC motor drive after a short-circuit is removed and the other points above are checked, it should be sent back to manufacturer. 		
ου	Over voltage The DC bus voltage has exceeded its maximum allowable value.	Check if the input voltage falls within the rated AC motor drive input voltage range. Check for possible voltage transients. DC-bus over-voltage may also be caused by motor regeneration. Either increase the Decel. Time or add an optional brake resistor (and brake unit).		

Chapter 6 Fault Code Information | VFD-B Series

Fault Name	Fault Code Information VFD-B Series Fault Descriptions	Corrective Actions
68	Overheating Heat sink temperature too high	Ensure that the ambient temperature falls within the specified temperature range. Make sure that the ventilation holes are not obstructed. Remove any foreign objects from the heatsinks and check for possible dirty heat sink fins. Check the fan and clean it. Provide enough spacing for adequate ventilation.
٤٥	Low voltage The AC motor drive detects that the DC bus voltage has fallen below its minimum value.	 Check whether the input voltage falls within the AC motor drive rated input voltage range. Check whether the motor has sudden load. Check for correct wiring of input power to R-S-T (for 3-phase models) without phase loss.
οL	Overload The AC motor drive detects excessive drive output current. NOTE: The AC motor drive can withstand up to 150% of the rated current for a maximum of 60 seconds.	Check whether the motor is overloaded. Reduce torque compensation setting in Pr.7-02. Take the next higher power AC motor drive model.
ol I	Overload 1 Internal electronic overload trip	Check for possible motor overload. Check electronic thermal overload setting. Use a higher power motor. Reduce the current level so that the drive output current does not exceed the value set by the Motor Rated Current Pr.7-00.
015	Overload 2 Motor overload.	 Reduce the motor load. Adjust the over-torque detection setting to an appropriate setting (Pr.06-03 to Pr.06-05).
HPF. 1	GFF hardware error	
HPF.2	CC (current clamp)	Return to the factory.
HPF.3	OC hardware error	·
HPF,4	OV hardware error	
cE-	Communication Error	 Check the RS485 connection between the AC motor drive and RS485 master for loose wires and wiring to correct pins. Check if the communication protocol, address, transmission speed, etc. are properly set. Use the correct checksum calculation. Please refer to group 9 in the chapter 5 for detail information.

Chapter 6 Fault Code Information | VFD-B Series

Fault Name	Fault Descriptions	Corrective Actions		
oc8	Over-current during acceleration	Short-circuit at motor output: Check for possible poor insulation at the output lines. Torque boost too high: Decrease the torque compensation setting in Pr.7-02. Acceleration Time too short: Increase the Acceleration Time. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.		
ocd	Over-current during deceleration	Short-circuit at motor output: Check for possible poor insulation at the output line. Deceleration Time too short: Increase the Deceleration Time. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.		
ocn	Over-current during steady state operation	Short-circuit at motor output: Check for possible poor insulation at the output line. Sudden increase in motor loading: Check for possible motor stall. AC motor drive output power is too small: Replace the AC motor drive with the next higher power model.		
EF.	External Fault	Input EF (N.O.) on external terminal is closed to GND. Output U, V, W will be turned off. Give RESET command after fault has been cleared.		
EF :	Emergency stop	When the multi-function input terminals MI1 to MI6 are set to emergency stop (setting 19 or 20), the AC motor drive stops output U, V, W and the motor coasts to stop. Press RESET after fault has been cleared.		
cF :	Internal EEPROM can not be programmed.	Return to the factory.		
cF2	Internal EEPROM can not be read.	Return to the factory.		
cF3.5	U-phase error V-phase error W-phase error	Return to the factory.		
cF3.6 cF3.7 cF3.8	Current sensor error OH error			
EcodE	Software protection failure	Return to the factory.		
PcodE	Password is locked.	Keypad will be locked. Turn the power ON after power OFF to re-enter the correct password. See Pr.00-07 and 00-08.		
cFR	Auto accel/decel failure	Check if the motor is suitable for operation by AC motor drive. Check if the regenerative energy is too large. Load may have changed suddenly.		

Chapter 6 Fault Code Information | VFD-B Series

Fault Name	Fault Descriptions	Corrective Actions		
GFF	Ground fault	When (one of) the output terminal(s) is grounded, short circuit current is more than 50% of AC motor drive rated current, the AC motor drive power module may be damaged. NOTE: The short circuit protection is provided for AC motor drive protection, not for protection of the user. 1. Check whether the IGBT power module is damaged. 2. Check for possible poor insulation at the output line.		
88	External Base Block. (Refer to Pr. 08-06)	When the external input terminal (B.B) is active, the AC motor drive output will be turned off. Deactivate the external input terminal (B.B) to operate the AC motor drive again.		
8nLEr	Analog feedback error or ACI open circuit	Check parameter settings and wiring of Analog feedback (Pr.10-00). Check for possible fault between system response time and the feedback signal detection time (Pr.10-08).		
P08	PG feedback signal error	Check parameter settings and signal type of PG feedback (Pr.10-10 and Pr.10-11). Check if the wiring of PG card is correct.		
AUE	Auto Tuning Error	Check cabling between drive and motor Retry again		
cEF	EF when preliminary count value attained	Check counter trigger signal Check Pr.03-09, Pr.03-11setting		
Lc	Under Current	Check Load current Check Pr.06-12 to Pr.06-15 setting		
PHL	Phase Loss	Check Power Source Input if all 3 input phases are connected without loose contacts.		

6.2 Reset

There are three methods to reset the AC motor drive after solving the fault:


- 1. Press STOP key on PU01.
- 2. Set external terminal to "RESET" (set one of Pr.04-04~Pr.04-09 to 05) and then set to be ON.
- 3. Send "RESET" command by communication.




Make sure that RUN command or signal is OFF before executing RESET to prevent damage or personal injury due to immediate operation.

Chapter 7 Troubleshooting


7.1 Over Current (OC)

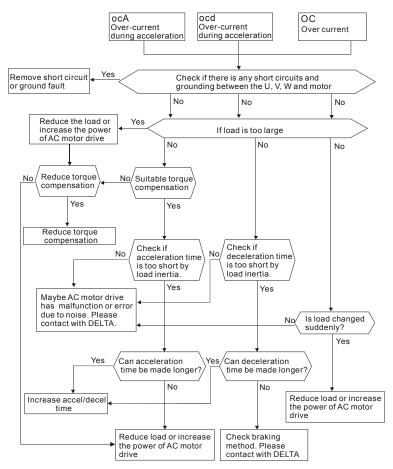


7.2 Ground Fault

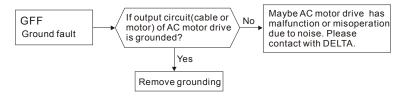


7.3 Over Voltage (OV)

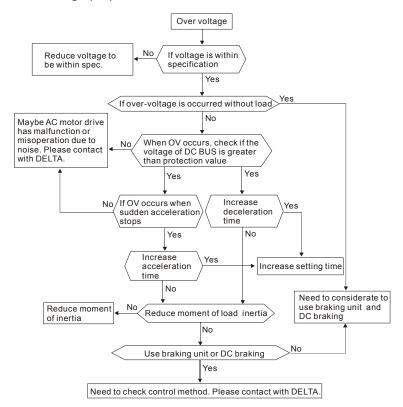


7.4 Low Voltage (Lv)

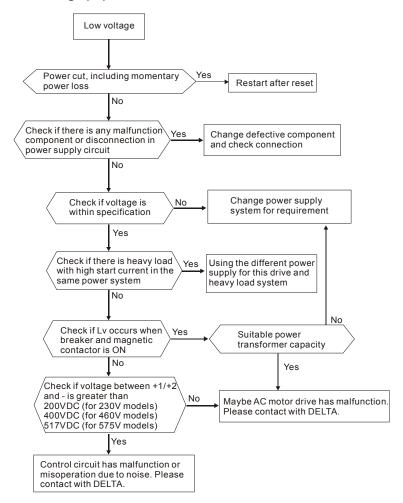


7.5 Over Heat (OH)

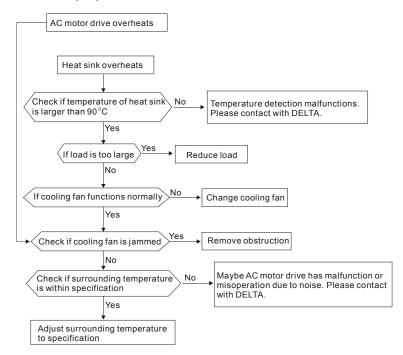


7.6 Overload

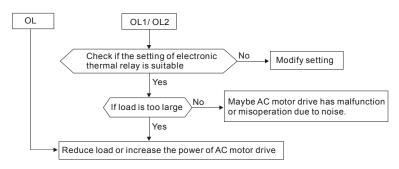


7.7 Display of PU01 is Abnormal

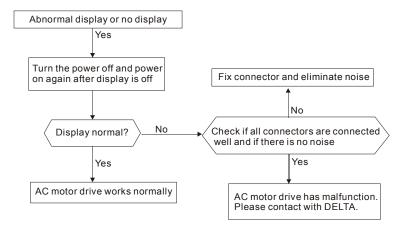


7.8 Phase Loss (PHL)

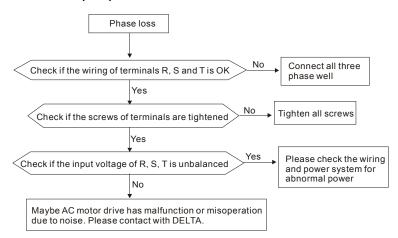


7.9 Motor cannot Run

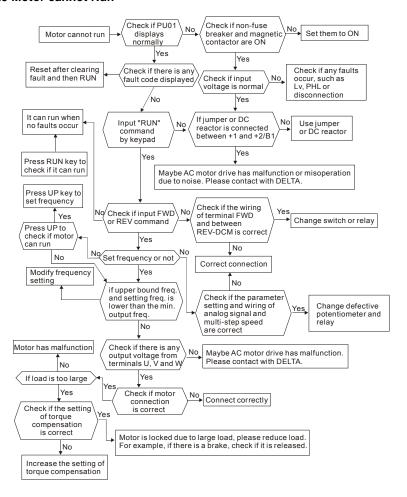


7.10 Motor Speed cannot be Changed

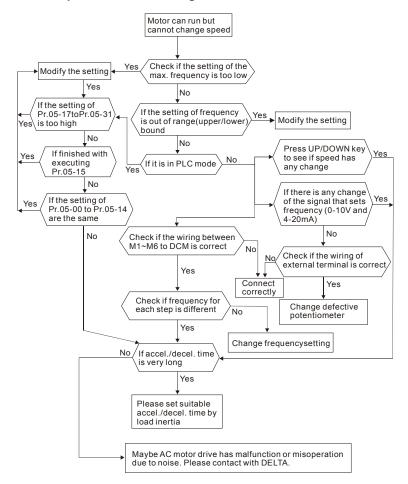

7.11 Motor Stalls during Acceleration

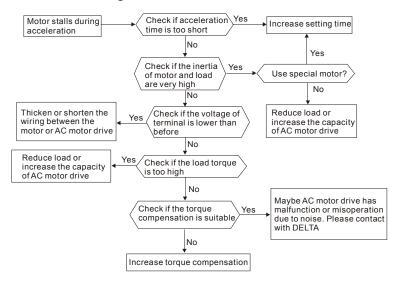

7.12 The Motor does not Run as Expected

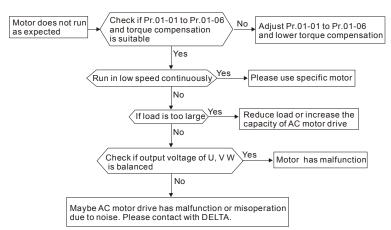

7.13 Electromagnetic/Induction Noise

There are many noises surround the AC motor drives and invade it by radiation or power circuit. It may cause the misoperation of control circuit and even damage the AC motor drive. Of course, that is a solution to increase the noise tolerance of AC motor drive. But it is not the best one due to the limit. Therefore, solve it from the outside as following will be the best.

- Add surge killer on the relay or contact to suppress switching surge between ON/OFF.
- Shorten the wiring length of the control circuit or serial circuit and separate from the main circuit wiring.
- Comply with the wiring regulation for those shielded wire and use isolation amplifier for long wire.
- The grounding terminal should comply with the local regulation and ground independently, i.e. not to have common ground with electric welding machine and power equipment.
- Connect a noise filter at the input terminal of the AC motor drive to prevent noise from power circuit.

In a word, three-level solutions for electromagnetic noise are "no product", "no spread" and "no receive".

7.14 Environmental Condition

Since AC motor drive is an electronic device, you should comply with the environmental condition stated in the appendix A. Following are the remedial measures for necessary.

- To prevent vibration, anti-vibration spacer is the last choice. The vibration tolerance must be within the specification. The vibration effect is equal to the mechanical stress and it cannot occur frequently, continuously or repeatedly to prevent damaging AC motor drive.
- Store in a clean and dry location free from corrosive fumes/dust to prevent rustiness, poor contact. It also may cause short by low insulation in a humid location. The solution is to use both paint and dust-proof. For particular occasion, use the enclosure with whole-seal structure.
- 3. The surrounding temperature should be within the specification. Too high or low temperature will affect the lifetime and reliability. For semiconductor components, damage will occur once any specification is out of range. Therefore, it is necessary to clean and periodical check for the air cleaner and cooling fan besides having cooler and sunshade. In additional, the microcomputer may not work in extreme low temperature and needs to have heater.
- 4. Store within a relative humidity range of 0% to 90% and non-condensing environment. Do not turn off the air conditioner and have exsiccator for it.


7.15 Affecting Other Machines

AC motor drive may affect the operation of other machine due to many reasons. The solutions are as follows.

■ High Harmonic at Power Side

If there is high harmonic at power side during running, the improved methods are:

- 1. Separate power system: use transformer for AC motor drive.
- Use reactor at the power input terminal of AC motor drive or decrease high harmonic by multiple circuit.\
- If there is phase lead capacitor, it should use serial reactor to prevent capacitor damage from high harmonic.

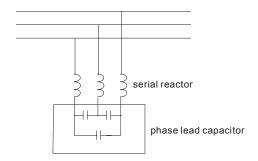

■ Motor Temperature Rises

When the motor is induction motor with ventilation-cooling-type used in variety speed operation, bad cooling will happen in the low speed. Therefore, it may overheat. Besides, high harmonic is in output waveform to increase copper loss and iron loss. Following measures should be used by load situation and operation range when necessary.

- 1. Use the motor with independent power ventilation or increase the horsepower.
- 2. Use inverter duty motor.
- 3. Do NOT run in the low speed.

Chapter 8 Maintenance and Inspections

Modern AC motor drives are based on solid state electronics technology. Preventive maintenance is required to operate this AC motor drive in its optimal condition, and to ensure a long life. It is recommended to have a check-up of the AC motor drive performed by a qualified technician.

Daily Inspection:

Basic check-up items to detect if there were any abnormalities during operation are:

- 1. Whether the motors are operating as expected.
- 2. Whether the installation environment is abnormal.
- 3. Whether the cooling system is operating as expected.
- 4. Whether any irregular vibration or sound occurred during operation.
- 5. Whether the motors are overheating during operation.
- 6. Always check the input voltage of the AC drive with a Voltmeter.

Periodic Inspection:

Before the check-up, always turn off the AC input power and remove the cover. Wait at least 10 minutes after all display lamps have gone out, and then confirm that the capacitors have fully discharged by measuring the voltage between +1/+2 and -. The voltage between +1/+2 and - should be less than 25VDC.



- Disconnect AC power before processing!
- Only qualified personnel can install, wire and maintain AC motor drives. Please take off any metal objects, such as watches and rings, before operation. And only insulated tools are allowed.
- 3. Never reassemble internal components or wiring.
- Prevent electric shocks.

Periodical Maintenance

■ Ambient environment

	Methods and Criterion		Maintenance Period		
Check Items			Half Year	One Year	
Check the ambient temperature, humidity, vibration and see if there are any dust, gas, oil or water drops	Visual inspection and measurement with equipment with standard specification	0			
If there are any dangerous objects	Visual inspection	0			

■ Voltage

Check Items		Mainten Perio		
	Methods and Criterion	Daily	Half Year	One Year
Check if the voltage of main circuit and control circuit is correct	Measure with multimeter with standard specification	0		

■ Keypad

Check Items		Maintena Period			
	Methods and Criterion	Daily	One Year		
Is the display clear for reading	Visual inspection	0			
Any missing characters	Visual inspection	0			

Mechanical parts

Olas I Karas	Made to a 10 % de	Maintena Period			
Check Items	Methods and Criterion	Daily	Half Year	One Year	
If there is any abnormal sound or vibration	Visual and aural inspection		0		
If there are any loose screws	Tighten the screws		0		

Chapter 8 Maintenance and Inspections | VFD-B Series

Charle Hama	W. d l 10 %	Maintenar Period		
Check Items	Methods and Criterion	Daily	Half Year	One Year
If any part is deformed or damaged	Visual inspection		0	
If there is any color change by overheating	Visual inspection		0	
If there is any dust or dirt	Visual inspection		0	

■ Main circuit

Check Home		Ma	nce I	
Check Items	Methods and Criterion	Daily	Half Year	One Year
If there are any loose or missing screws	Tighten or replace the screw		0	
If machine or insulator is deformed, cracked, damaged or with color change due to overheating or ageing	Visual inspection NOTE: Please ignore the color change of copper plate		0	
If there is any dust or dirt	Visual inspection		0	

■ Terminals and wiring of main circuit

Check Items	Methods and Criterion	Maintena Period			
Check items	methods and Criterion	Daily	Half Year	One Year	
If the wiring is color change or deformation due to overheat	Visual inspection		0		
If the insulator of wiring is damaged or color change	Visual inspection		0		
If there is any damage	Visual inspection		0		

Chapter 8 Maintenance and Inspections | VFD-B Series

■ DC capacity of main circuit

Charle Hama			intenar Period	
Check Items	Methods and Criterion	Daily	Half Year	One Year
If there is any leak of liquid, color change, crack or deformation	Visual inspection	0		
Measure static capacity when required	Static capacity ≥ initial value X 0.85		0	

Resistor of main circuit

Oh a shalfarra		Maintena Period		
Check Items	Methods and Criterion	Daily	Half Year	One Year
If there is any peculiar smell or insulator cracks due to overheat	Visual inspection, smell		0	
If there is any disconnection	Visual inspection or measure with multimeter after removing wiring between +1/+2 ~ -		0	
	Resistor value should be within \pm 10%			

■ Transformer and reactor of main circuit

Check Items		Maintena Perio			
	Methods and Criterion	Daily	Daily Half Year		
If there is any abnormal vibration or peculiar smell	Visual, aural inspection and smell		0		

■ Magnetic contactor and relay of main circuit

Check Items		Mainter Perio			
	Methods and Criterion	Daily	Daily Half Year		
If there are any loose screws	Visual and aural inspection	0			
If the contact works correctly	Visual inspection	0			

■ Printed circuit board and connector of main circuit

			intenaı Period		
Check Items	Methods and Criterion	Daily	One Year		
If there are any loose screws and connectors	Tighten the screws and press the connectors firmly in place.		0		
If there is any peculiar smell and color change	Visual inspection		0		
If there is any crack, damage, deformation or corrosion	Visual inspection		0		
If there is any liquid is leaked or deformation in capacity	Visual inspection		0		

■ Cooling fan of cooling system

Oh ash Hama		Ма	nce	
Check Items	Methods and Criterion	Daily	Half Year	One Year
If there is any abnormal sound or vibration	Visual, aural inspection and turn the fan with hand (turn off the power before operation) to see if it rotates smoothly			0
If there is any loose screw	Tighten the screw			0
If there is any color change due to overheat	Change fan			0

■ Ventilation channel of cooling system

Check Items	Methods and Criterion	Maintenance Period		
		Daily	Half Year	One Year
If there is any obstruction in the heat sink, air intake or air outlet	Visual inspection	0		

Chapter 8 Maintenance and Inspections | VFD-B Series

This page intentionally left blank.

Appendix A Specifications

	Voltage Class						230V	Class					
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370
Ma (k)	ax. Applicable Motor Output V)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37
Ma	ax. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50
βL	Rated Output Capacity (kVA)	1.9	2.5	4.2	6.5	9.5	12.5	18.3	24.7	28.6	34.3	45.7	55.0
ating	Rated Output Current (A)	5.0	7.0	11	17	25	33	49	65	75	90	120	145
utput Ra	Maximum Output Voltage (V)				3-Ph	ase Pro	portion	nal to Ir	nput Vo	ltage			
Output Frequency (Hz) 0.1~400 Hz													
0	Carrier Frequency (kHz)					1-15						1-9	
		Sing	Single/3-phase 3-phase										
	Rated Input Current (A)	11.9/ 5.7	15.3/ 7.6	22/ 15.5	20.6	26	34	50	60	75	90	110	142
Input Rating	Input Current for 1-phase models when using 3-phase power	7.0	9.4	14.0									
Indu	Rated Voltage/Frequency	Single/3-phase 3-phase 200-240 V, 50/60Hz 200-240V, 50/60Hz											
	Voltage Tolerance						± 10%	6(180~	264 V)				
	Frequency Tolerance						± 5%	%(47~6	3 Hz)				
	ooling Method	Natural					Fa	n Cool					
W	eight (kg)	2.7	3.2	4.5	6.8	8	10	13	13	13	13	36	36

	Voltage Class							460	OV CI	ass	_	_				
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370	450	550	750
N	Max. Applicable Motor Output (kW)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Ма	x. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
g	Rated Output Capacity (kVA)	2.3	3.2	4.2	6.5	9.9	13.7	18.3	24.4	28.9	34.3	45.7	55.6	69.3	84	114
atin	Rated Output Current (A)	2.7	4.2	5.5	8.5	13	18	24	32	38	45	60	73	91	110	150
Output Rating	Maximum Output Voltage (V)		3-phase Proportional to Input Voltage													
utbı	Output Frequency (Hz)							0.1	~400	Hz						
0	Carrier Frequency (kHz)	1-15 1-9 1-6									-6					
	Rated Input Current (A)	3-phase														
Rating	Rateu input Current (A)	3.2	4.3	5.9	11.2	14	19	25	32	39	49	60	63	90	130	160
Ra	Rated Voltage	3-phase 380 to 480 V														
nput	Voltage Tolerance							± 1	10%(3	42~5	28 V)					
	Frequency Tolerance							±	5%(4	7~63	Hz)					
Co	poling Method	Nat	ural						Fai	n Coc	led					
W	Veight (kg)		3.2	4.5	6.8	8	10	13	13	13	13	36	36	36	50	50

	Voltage Class							575	V Cla	ass						
	Model Number VFD-XXXB	007	015	022	037	055	075	110	150	185	220	300	370	450	550	750
N	lax. Applicable Motor Output (kW)	0.75	1.5	2.2	3.7	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Max	c. Applicable Motor Output (hp)	1.0	2.0	3.0	5.0	7.5	10	15	20	25	30	40	50	60	75	100
g	Rated Output Capacity (kVA)	1.7	3.5	4.5	7.5	10	13.4	18.9	21.9	26.9	33.9	40.8	51.8	61.7	79.7	99.6
tatin	Rated Output Current (A)	1.7	3.5	4.5	7.5	10	13.5	19	22	27	34	41	52	62	80	100
ut F	Maximum Output Voltage (V)		3-phase Proportional to Input Voltage													
Output Rating	Output Frequency (Hz)		0.1~400 Hz													
	Carrier Frequency (kHz)	1-10 1-8									1	-6				
	Rated Input Current (A)	3-phase														
ting	reaced input outrent (A)	1.2	3.1	4.0	8.3	10.3	13.8	18.2	22	27.7	32	41	52	62	74	91
t Ra	Rated Voltage	3-phase 500 to 600 V														
Rated Voltage Voltage Tolerance							-15%	~ +1	0% (4	25~6	60V)					
-	Frequency Tolerance						± 5%	(47~	63Hz)						
Со	oling Method	Nat	ural						Fai	n Coo	led			_		
We	Weight (kg)		3.2	4.5	6.8	8	10	13	13	13	13	36	36	36	50	50

			General Specifications					
	Control Syste	em	SPWM(Sinusoidal Pulse Width Modulation) control (V/f or sensorless vector control)					
	Frequency S Resolution	etting	0.01Hz					
	Output Frequ	ency Resolution	0.01Hz					
Characteristics	Torque Chara	acteristics	Including the auto-torque, auto-slip compensation; starting torque can be 150% at 1.0Hz					
acte	Overload End	durance	150% of rated current for 1 minute					
har	Skip Frequer	псу	Three zones, settings range 0.1-400Hz					
	Accel/Decel	Time	0.1 to 3600 seconds (4 Independent settings for Accel/Decel time)					
Control	Stall Prevention	on Level	20 to 250%, setting of rated current					
Ö	DC Braking		Operation frequency 0.1-400.0Hz, output 0-100% rated current Start time 0-60 seconds, stop time 0-60 seconds					
	Regenerated	Braking Torque	Approx. 20%(up to 125% possible with option braking resistor or braking unit externally mounted, 1-15HP braking transistor built-in)					
	V/f Pattern	_	Adjustable V/f pattern, 1.5 power curve, 1.7 power curve, square and cube curve					
		Keypad	Setting by 🛕 🔻					
Characteristics	Frequency Setting	External Signal	Potentiometer-5kΩ/0.5W, 0 to +10VDC; -10 to +10VDC, 4 to 20mA RS-485 interface; Multi-Function Inputs 1 to 6 (15 steps, Jog, up/down)					
ırac	Operation	Keypad	Set by RUN, STOP and JOG					
	Setting Signal	External Signal	2 wires/3 wires (Fwd, Rev, EF), JOG operation, RS-485 serial interface (MODBUS), process logic control					
Operating	Multi-Function Input Signal		Multi-step selection 0 to 15, Jog, accel/decel inhibit, first to forth accel/decel switches, counter, PLC operation, external Base Block (NC, NO), auxiliary motor control is invalid, ACI/AVI/AUI selections, driver reset, UP/DOWN key settings, sink/source selection					

Appendix A Specifications | VFD-B Series

		Appendix A Specifications VFD-B Series						
L		General Specifications						
	Multi-Function Output Indication	AC drive operating, frequency attained, non-zero, Base Block, fault indication, local/remote indication, PLC operation indication, auxiliary motor output, driver is ready, overheat alarm, emergency stop						
	Analog Output Signal	Output frequency/current/voltage/frequency command/speed/factor						
	Alarm Output Contact	Contact will be On when it malfunctions (1 Form C contact or 3 open collector outputs)						
	Operation Functions	AVR, accel/decel S-Curve, over-voltage/over-current stall prevention, fault records, reverse inhibition, momentary power loss restart, DC braking, auto torque/slip compensation, auto tuning, adjustable carrier frequency, output frequency limits, parameter lock/reset, vector control, counter, PG feedback control, PID control, fan & pump control, external counter, PLC, MODBUS communication, abnormal reset, abnormal re-start, power-saving, sleep/revival function, digital frequency output, fan control, sleep/wake frequency, master/auxiliary frequency, 1st/2nd frequency source selections						
	Protection Functions	Over voltage, over current, under voltage, under current, external fault, overload, ground fault, overheating, electronic thermal, IGBT short circuit						
	Display Keypads	8-key, 7-segment LED with 5-digit, 8 status LEDs, master frequency, output frequency, output current, custom units, parameter values for setup and lock, faults, RUN, STOP, RESET, FWD/REV, JOG						
	Enclosure Rating	IP20						
ions	Pollution Degree	2						
pudit	Installation Location	Altitude 1,000 m or lower, keep from corrosive gasses, liquid and dust						
ia C	Ambient Temperature	-10°C to 40°C Non-Condensing and not frozen						
Enviromental Conditions	Storage/ Transportation Temperature	-20 °C to 60 °C						
ī	Ambient Humidity	Below 90% RH (non-condensing)						
"	Vibration	9.80665m/s2 (1G) less than 20Hz, 5.88m/s2 (0.6G) at 20 to 50Hz						
Арі	provals							

Appendix A Specifications | VFD-B Series

This page intentionally left blank.

Appendix B Accessories

B.1 All Braking Resistors & Braking Units Used in AC Motor Drives

Note: Please only use DELTA resistors and recommended values. Other resistors and values will void Delta's warranty. Please contact your nearest Delta representative for use of special resistors. For instance, in 460V series, 100hp/75kW, the AC motor drive needs 2 braking units with total of 16 braking resistors, so each braking unit uses 8 braking resistors. The braking unit should be at least 10 cm away from AC motor drive to avoid possible interference. Refer to the "Braking Unit Module User Manual" for further details.

Ф		icable	Full	Resistor	Brakin		Braking Resist	tors	Braking	Min. Equivalent
Voltage	М	otor	Load	value spec	Model		Model and No		Torque	Resistor Value
\o	hp	kW	Torque	for each AC	No. of		Units Used		10%ED	for each AC
Ė		0.75	Nm	Motor Drive	Us	ea	DDOOON		405	Motor Drive
	1	0.75	0.427	80W 200Ω			BR080W200	1	125	82Ω
	2	1.5	0.849	300W 100Ω			BR300W100	1	125	82 Ω
	3	2.2	1.262	300W 100 Ω			BR300W100	1	125	82 Ω
	5	3.7	2.080	400W 40 Ω			BR400W040	1	125	33 Ω
Series	7.5	5.5	3.111	500W 30 Ω			BR500W030	1	125	30 Ω
Sel	10	7.5	4.148	1000W 20Ω			BR1K0W020	1	125	20Ω
\geq	15	11	6.186	2400W 13.6Ω			BR1K2W6P8	2	125	13.6Ω
230V	20	15	8.248	3000W 10 Ω	2015	1	BR1K5W005	2	125	10Ω
	25	18.5	10.281	4800W 8Ω	2022	1	BR1K2W008	4	125	8Ω
	30	22	12.338	4800W 6.8Ω	2022	1	BR1K2W6P8	4	125	6.8Ω
	40	30	16.497	6000W 5Ω	2015	2	BR1K5W005	4	125	5Ω
	50	37	20.6	9600W 4Ω	2015	2	BR1K2W008	8	125	4Ω
	1	0.75	0.427	80W 750 Ω			BR080W750	1	125	160 Ω
	2	1.5	0.849	300W 400Ω			BR300W400	1	125	160 Ω
	3	2.2	1.262	300W 250Ω			BR300W250	1	125	160 Ω
	5	3.7	2.080	400W 150Ω			BR400W150	1	125	130 Ω
	7.5	5.5	3.111	500W 100Ω			BR500W100	1	125	91Ω
တ္	10	7.5	4.148	1000W 75Ω			BR1K0W075	1	125	62 Ω
Series	15	11	6.186	1000W 50Ω			BR1K0W050	1	125	39 Ω
Se	20	15	8.248	1500W 40Ω	4030	1	BR1K5W040	1	125	40Ω
460V	25	18.5	10.281	4800W 32Ω	4030	1	BR1K2W008	4	125	32 Ω
4	30	22	12.338	4800W 27.2Ω	4030	1	BR1K2W6P8	4	125	27.2Ω
	40	30	16.497	6000W 20Ω	4030	1	BR1K5W005	4	125	20Ω
	50	37	20.6	9600W 16Ω	4045	1	BR1K2W008	8	125	16 Ω
	60	45	24.745	9600W 13.6Ω	4045	1	BR1K2W6P8	8	125	13.6 Ω
	75	55	31.11	12000W 10 Ω	4030	2	BR1K5W005	8	125	10Ω
	100	75	42.7	19200W 6.8Ω	4045	2	BR1K2W6P8	16	125	6.8Ω

Appendix B Accessories | VFD-B Series

Voltage	Appl M hp	icable otor kW	Full Load Torque Nm	Resistor value spec for each AC Motor Drive	Braking Unit Model VFDB No. of Units Used		Braking Resistors Model and No. of Units Used		Braking Torque 10%ED	Min. Equivalent Resistor Value for each AC Motor Drive
	1	0.75	0.427	300W 400Ω			BR300W400	1	125	200Ω
	2	1.5	0.849	300W 250 Ω			BR300W250	1	125	200Ω
	3	2.2	1.262	400W 150Ω			BR400W150	1	125	130 Ω
	5	3.7	2.080	400W 150Ω			BR400W150	1	125	130Ω
	7.5	5.5	3.111	500W 100 Ω			BR500W100	1	125	82 Ω
	10	7.5	4.148	500W 100 Ω			BR500W100	1	125	82 Ω
Series	15	11	6.186	500W 100 Ω			BR500W100	1	125	82 Ω
	20	15	8.248	3000W 60 Ω	5055	1	BR1K0W020	3	125	60Ω
575V	25	18.5	10.281	4000W 50 Ω	5055	1	BR1K0W050	4	125	50 Ω
57	30	22	12.338	6000W 40Ω	5055	1	BR1K2W008	5	125	40Ω
	40	30	16.497	6000W 34Ω	5055	1	BR1K2W6P8	5	125	34 Ω
	50	37	20.6	7500W 25 Ω	5055	1	BR1K5W005	5	125	25 Ω
	60	45	24.745	12000W 20 Ω	5055	1	BR1K2W008	10	125	20Ω
	75	55	31.11	12000W 17 Ω	5055	1	BR1K2W6P8	10	125	17Ω
	100	75	42.7	15000W 12.5Ω	5055	2	BR1K5W005	10	125	12.5Ω




- Please select the factory setting resistance value (Watt) and the duty-cycle value (ED%).
- If damage to the drive or other equipment are due to the fact that the braking resistors and the braking modules in use are not provided by Delta, the warranty will be void.
- 3. Take into consideration the safety of the environment when installing the braking resistors.
- If the minimum resistance value is to be utilized, consult local dealers for the calculation of the Watt figures.
- Please select thermal relay trip contact to prevent resistor over load. Use the contact to switch power off to the AC motor drive!
- 6. When using more than 2 braking units, equivalent resistor value of parallel braking unit can't be less than the value in the column "Minimum Equivalent Resistor Value for Each AC Drive" (the right-most column in the table). An example of 575V 100HP, the min. equivalent resistor value for each AC motor drive is 12.5Ω with 2 brake units connection. Therefore, the equivalent resistor value for each brake unit should be 25Ω .
- Please read the wiring information in the user manual of braking unit thoroughly prior to taking into operation.

B.1.1 Dimensions and Weights for Braking Resistors


(Dimensions are in millimeter)

Order P/N: BR080W200, BR080W750, BR300W070, BR300W100, BR300W250, BR300W400, BR400W150, BR400W040

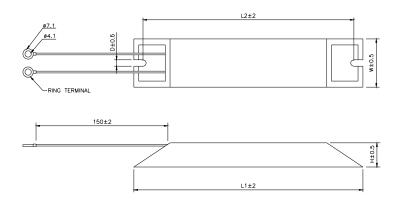


Model no.	L1	L2	Н	D	W	Max. Weight (g)
BR080W200	440	405	00	5.0		400
BR080W750	140	125	20	5.3	60	160
BR300W070						
BR300W100	045	200	20	5.0	00	750
BR300W250	215	200	30	5.3	60	750
BR300W400						
BR400W150	005	050	20	5.0	00	000
BR400W040	265	250	30	5.3	60	930

Order P/N: BR500W030, BR500W100, BR1KW020, BR1KW075

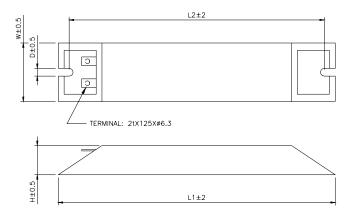

Model no.	L1	L2	Н	D	W	Max. Weight
BR500W030	225	200	20	5.0	00	4400
BR500W100	335	320	30	5.3	60	1100
BR1KW020	400	005	50	5.0	400	0000
BR1KW075	400	385	50	5.3	100	2800

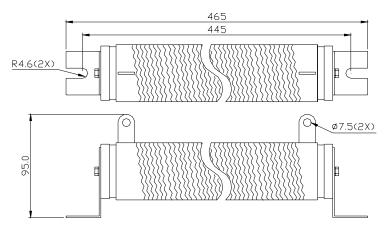



B.1.2 Specifications for Braking Unit

		230V	Series	460V	Series	575V Series			
		2015	2022	4030	4045	5055			
	Max. Motor Power (KW)	15	22	30	45	55			
t J	Max. Peak Discharge Current (A) 10%ED	40	60	40 60		60			
Output Rating	Continuous Discharge Current (A)	15	20	15	18	20			
	Braking Start-up Voltage (DC)		60/380/400 5±3V		'20/760/800 0±6V	950±8V			
Input Rating	DC Voltage	200~400VDC 400~800VDC				607~1000V DC			
Ē	Heat Sink Overheat	Temperature over +95°C (203 °F)							
Protection	Alarm Output	Relay contact 5A 120VAC/28VDC (RA, RB, RC)							
Pro	Power Charge Display	Blackou	t until bus (+~-) voltag	e is below 5	0VDC			
t	Installation Location	e gases, m	etallic dust)						
Environment	Operating Temperature	-10°C ~	+50°C (14°	F to 122°F)				
μu	Storage Temperature	-20°C ~ +60°C (-4°F to 140°F)							
/irc	Humidity		n-condensi						
En	Vibration	9.8m/s ² (1G) under 20Hz 2m/s ² (0.2G) at 20~50Hz							
	Mechanical Configuration	Wall-mounted enclosed type IP50							

B.1.3 Dimensions for Braking Unit

(Dimensions are in millimeter[inch])

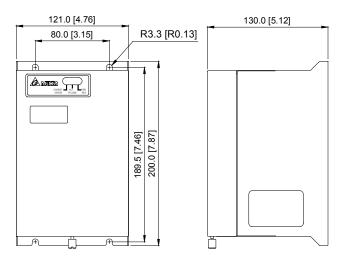

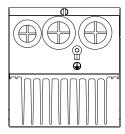

B.2 AMD - EMI Filter Cross Reference

AC Drives	Model Number	FootPrint
VFD007B21A, VFD015B21A	RF015B21AA	Y
VFD022B21A	RF022B21BA	Y
VFD007B43A, VFD015B43A, VFD022B43B	RF022B43AA	Y
VFD037B43A	RF037B43BA	Y
VFD055B43A, VFD075B43A, VFD110B43A	RF110B43CA	Y
VFD007B23A, VFD015B23A	10TDT1W4C	N
VFD022B23A, VFD037B23A	26TDT1W4C	N
VFD055B23A, VFD075B23A, VFD150B43A, VFD185B43A	50TDS4W4C	N
VFD110B23A, VFD150B23A, VFD220B43A, VFD300B43A, VFD370B43A	100TDS84C	N
VFD550B43A, VFD550B43C, VFD750B43A, VFD750B43C	200TDDS84C	N
VFD185B23A, VFD220B23A, VFD300B23A, VFD450B43A	150TDS84C	N
VFD370B23A	180TDS84C	N
VFD022B23B	20TDT1W4D	N
VFD022B21B	35DRT1W3C	N
VFD037B43B, VFD037B23B	26TDT1W4B4	N

Installation

All electrical equipment, including AC motor drives, will generate high-frequency/low-frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMI filter with correct installation, much interference can be eliminated. It is recommended to use DELTA EMI filter to have the best interference elimination performance.

Appendix B Accessories | VFD-B Series

We assure that it can comply with following rules when AC motor drive and EMI filter are installed and wired according to user manual:

- EN61000-6-4
- EN61800-3: 1996 + A11: 2000
- EN55011 (1991) Class A Group 1 (1st Environment, restricted distribution)


General precaution


- 1. EMI filter and AC motor drive should be installed on the same metal plate.
- Please install AC motor drive on footprint EMI filter or install EMI filter as close as possible to the AC motor drive
- 3. Please wire as short as possible.
- 4. Metal plate should be grounded.
- The cover of EMI filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

Choose suitable motor cable and precautions


Improper installation and choice of motor cable will affect the performance of EMI filter. Be sure to observe the following precautions when selecting motor cable.

- 1. Use the cable with shielding (double shielding is the best).
- The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
- 3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

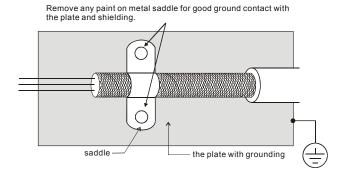

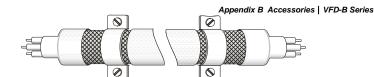

Saddle on both ends

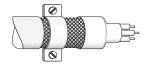

Saddle on one end

The length of motor cable

When motor is driven by an AC motor drive of PWM type, the motor terminals will experience surge voltages easily due to components conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages may reduce insulation quality. To prevent this situation, please follow the rules below:

- Use a motor with enhanced insulation.
- Connect an output reactor (optional) to the output terminals of the AC motor drive
- The length of the cable between AC motor drive and motor should be as short as possible (10 to 20 m or less)
- For models 7.5hp/5.5kW and above:

Insulation level of motor	1000V	1300V	1600V		
460VAC input voltage	66 ft (20m)	328 ft (100m)	1312 ft (400m)		
230VAC input voltage	1312 ft (400m)	1312 ft (400m)	1312 ft (400m)		

For models 5hp/3.7kW and less:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	66 ft (20m)	165 ft (50m)	165 ft (50m)
230VAC input voltage	328 ft (100m)	328 ft (100m)	328 ft (100m)

Appendix B. Accessories | VFD-B Series

When a thermal O/L relay protected by motor is used between AC motor drive and motor, it may malfunction (especially for 460V series), even if the length of motor cable is only 165 ft (50m) or less. To prevent it, please use AC reactor and/or lower the carrier frequency (Pr. 02-03 PWM carrier frequency).




Never connect phase lead capacitors or surge absorbers to the output terminals of the AC motor drive.


- If the length is too long, the stray capacitance between cables will increase and may cause leakage current. It will activate the protection of over current, increase leakage current or not insure the correction of current display. The worst case is that AC motor drive may damage.
- If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.


B.2.1 Dimensions

Dimensions are in millimeter and (inch)


Order P/N: RF015B21AA / RF022B43AA

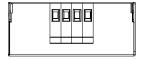


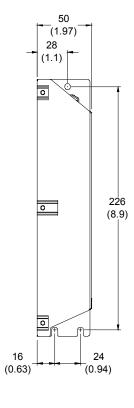


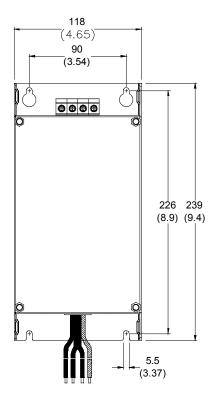


Order P/N: RF022B21BA / RF037B43BA

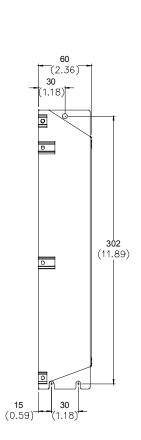


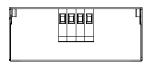

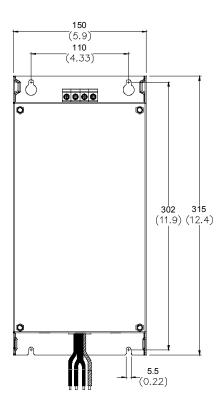




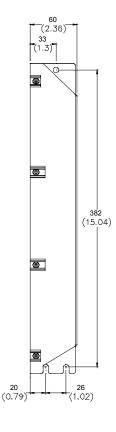


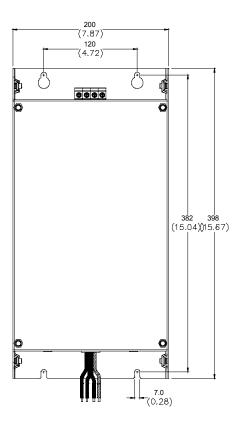


Order P/N: 10TDT1W4C

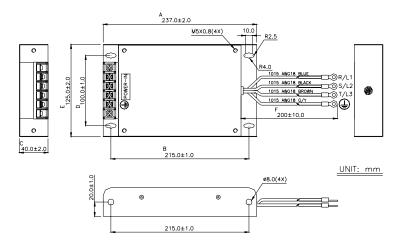


Order P/N: 26TDT1W4C

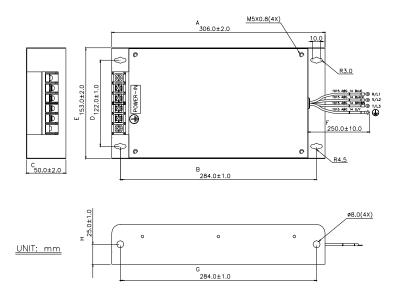


Order P/N: 50TDS4W4C

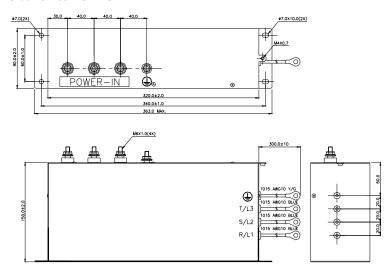


Order P/N: 100TDS84C

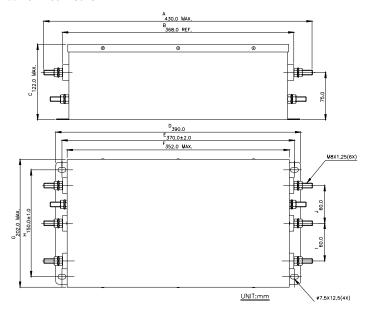


Order P/N: 200TDDS84C

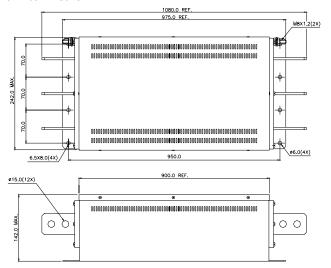


Order P/N: 150TDS84C

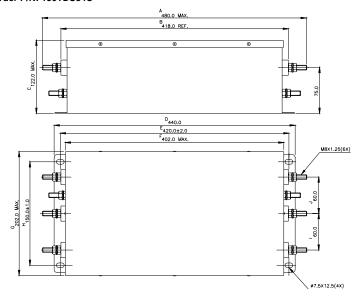

Order P/N: 180TDS84C

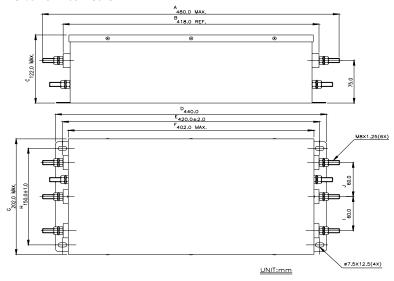


Order P/N: 20TDT1W4D

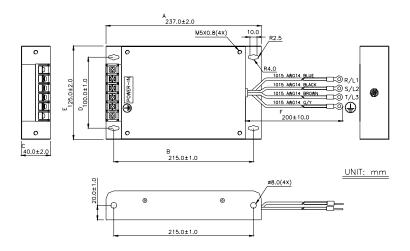

Appendix B Accessories | VFD-B Series

Order P/N: 26TDT1W4B4

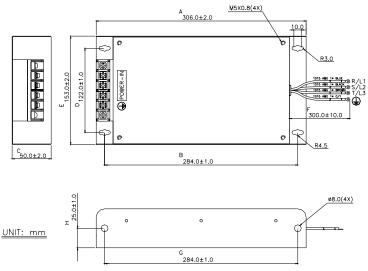


B.3 PG Card (for Encoder)


(Refer to Pr.10-10 to 10-15 of related parameter settings)

B.3.1 PG02 Installation

1. 1-2hp (0.75-1.5kW)

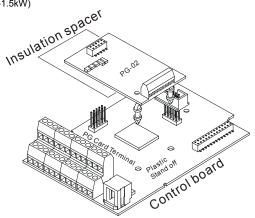


2. 3-5hp (2.2-3.7kW)

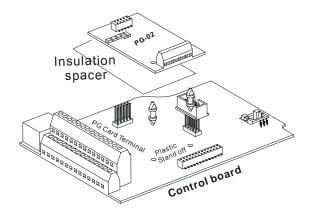


Appendix B Accessories | VFD-B Series

3. 7.5hp (5.5kW) and above

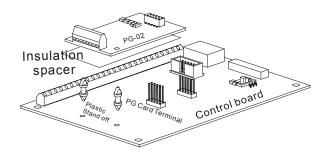


B.3.1.1 PG Card and Pulse Generator (Encoder)

1. Basic Wiring Diagram

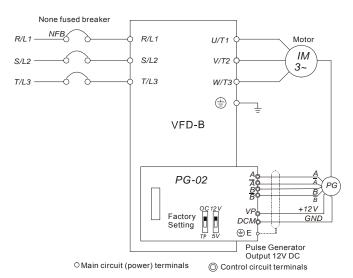


PG-02 and Pulse Generator Connections

2. Basic Wiring Diagram with RPM Meter Attached.

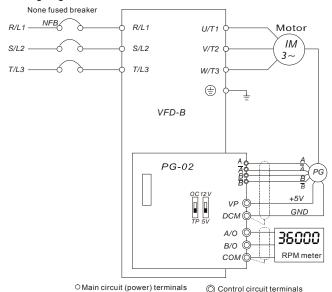

PG-02 and Pulse Generator Connections

3. When Pulse Generator (Encoder) is Open Collector type, please refer to following wiring.

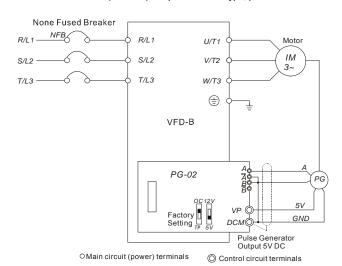

B.3.1.2 PG-02 Terminal Descriptions

1 Terminals

Terminal Symbols	Descriptions
VP	Power source of PG-02 (FSW1 can be switched to 12V or 5V) Output Voltage: (+12VDC ±5% 200mA) or (+5VDC ±2% 400mA)
DCM	Power source (VP) and input signal (A, B) common
$A, \overline{A}, B, \overline{B}$	Input signal from Pulse Generator. Input type is selected by FSW2. Please See section 3.4. Maximum 500KP/sec
A/O, B/O	PG-02 output signal for use with RPM Meter. (Open Collector) Maximum DC24V 100mA
СОМ	PG-02 output signal (A/O, B/O) common.


2. Wiring Notes

The control, power supply and motor leads must be laid separately. They must not be fed through the same cable conduit / trunk.

- a. Please use a shielded cable to prevent interference. Do not run control wires
 parallel to any high voltage AC power line (220 V and above).
- b. Connect shielded wire to DCM only.
- c. Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- d. Wire length:

Types of Pulse Generators	Maximum Wire Length	Wire Gauge
Output Voltage	50m	
Open Collector	50m	1.25mm ² (AWG16) or above
Line Driver	300m	1.23mm (////010) of above
Complementary	70m	

3. Control Terminals Block Designations.

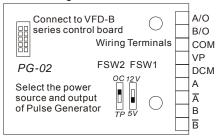


4. Types of Pulse Generators (Encoders)

		FSW1 and FS	W2 Switches
Types of Pulse Generators		5V	12V
Output Voltage	VCC O/PO	FSW2 FSW1 OC 12V TP 5V	FSW2 FSW1 OCIZY TP 5V
Open Collector	OIP	FSW2 FSW1 OCI2V TP 5V	FSW2 FSW1 OC12V TP 5V
Line Driver	Q Q Q	FSW2 FSW1 OC12Y TP 5V	FSW2 FSW1 OC 12V TP 5V
Complimentary	O/P OV	FSW2 FSW1 OC12Y TP 5V	FSW2 FSW1 OC 12Y TP 5V


B.3.2 PG03

B.3.2.1 Installation

1. 1-5hp (0.75-3.7kW)

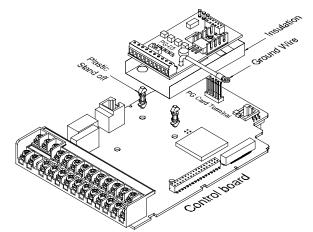


2. 7.5hp (5.5kW) and above

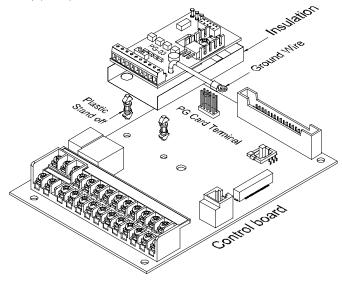


B.3.2.2 PG Card and Pulse Generator (Encoder)

1. Basic wiring diagram

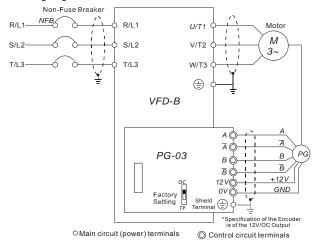

Connection between PG-03 and the Encoder

2. Connect Externally with the Encoder of 12V Power Supply and Output Signals to Additional Tachometer

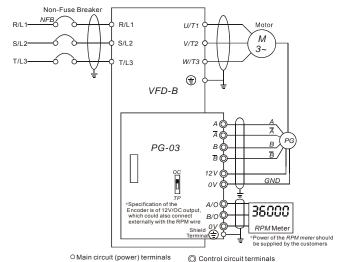

9 ------

Connection between PG-03 and the Encoder

B.3.2.3 PG-03 Terminal Descriptions

1. Terminals


Terminal Symbols	Descriptions
+12V	Power Supply of the Encoder: +12V Output Voltage: +12V±5% 200mA
0V	Common point for the power supply and the signal
$A, \overline{A}, B, \overline{B}$	Encoder signal input (select Encoder output type from FSW2) Both single-phase input and two-phase input available Maximum: 500KP/Sec
A/O, B/O	The Encoder signal output Maximum: DC24V 50mA
	Common point for signal grounding

2. Wiring Notes


- Please use a shield cable to prevent interference. Do not run control wire parallel to any high voltage AC power_line (220V and up).
- b) Connect shielded wire to E only.
- c) Recommended wire size 0.21 to 0.81mm² (AWG24 to AWG18).
- d) Wire length:

The Output Types of the Encoder	Maximum Wire Length	Wire Gauge
Output Voltage	50m	
Open Collector	50m	2
Line Driver	300m	1.25mm ² (AWG16) or above
Complementary	70m	

3. Control Terminals Block Designations.

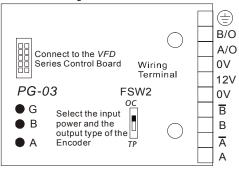


4. Encoder types

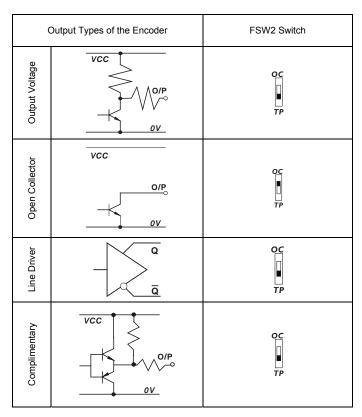

B.4 Remote Controller RC-01

Dimensions are in millimeter

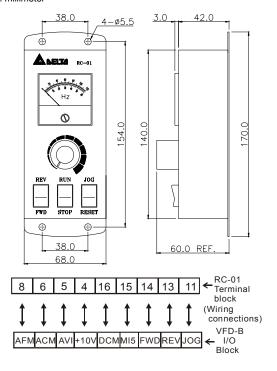

VFD-B Programming:

Pr.02-00 set to 1


Pr.02-01 set to 1 (external controls)

Pr.02-05 set to 1 (setting Run/Stop and Fwd/Rev controls)

Pr.04-08 (MI5) set to 8 (External reset)


B.5 Remote Panel Adapter (RPA 01)

Remote panel adapter for VFDPU01

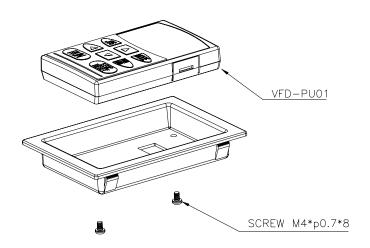

Mounting hole dimensions (Dimensions are in millimeter)

Following is the mounting hole dimension of the plate for RPA01. Please choose the applicable one from below, depending on the plate thickness (t).

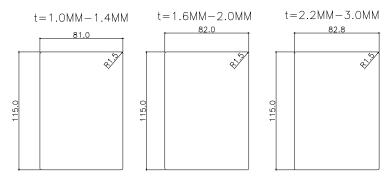

B.6 AC Reactor

B.6.1 AC Input Reactor Recommended Value

230V, 50/60Hz, 1-Phase

134/	kW HP I	Fundamental	Max. continuous	Inductance (mH)
KVV		Amps	Amps	3~5% impedance
0.75	1	8	12	1.5
1.5	2	12	18	1.25
2.2	3	18	27	0.8

460V, 50/60Hz, 3-Phase

114/	p	LID Fundamental	Max.	Inducta	nce (mH)
KVV	kW HP	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	4	6	9	12
1.5	2	4	6	6.5	9
2.2	3	8	12	5	7.5
3.7	5	8	12	3	5
5.5	7.5	12	18	2.5	4.2
7.5	10	18	27	1.5	2.5
11	15	25	37.5	1.2	2
15	20	35	52.5	0.8	1.2
18.5	25	35	52.5	0.8	1.2
22	30	45	67.5	0.7	1.2
30	40	55	82.5	0.5	0.85
37	50	80	120	0.4	0.7
45	60	80	120	0.4	0.7
55	75	100	150	0.3	0.45
75	100	130	195	0.2	0.3

575V, 50/60Hz, 3-Phase

kW	kW HP	LID Fundamental	Max. continuous Amps	Inductance (mH)	
KVV	ПР	Amps		3% impedance	5% impedance
0.75	1	2	3	20	32
1.5	2	4	6	9	12

Appendix B Accessories | VFD-B Series

kW	ЦΒ	HP Fundamental	Max. continuous	Inductance (mH)	
KVV	KW HP	Amps	Amps	3% impedance	5% impedance
2.2	3	4	6	9	12
3.7	5	8	12	5	7.5
5.5	7.5	8	12	3	5
7.5	10	12	18	2.5	4.2
11	15	18	27	1.5	2.5
15	20	25	37.5	1.2	1.8
18.5	25	25	37.5	1.2	1.8
22	30	35	52.5	0.8	1.2
30	40	45	67.5	0.7	1.2
37	50	55	82.5	0.5	0.85
45	60	80	120	0.4	0.7
55	75	80	120	0.4	0.7
75	100	100	150	0.3	0.45

B.6.2 AC Output Reactor Recommended Value

230V, 50/60Hz, 3-Phase

		LID Fundamental	Max.	Inducta	nce (mH)
KVV	kW HP	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	8	12	3	5
1.5	2	8	12	1.5	3
2.2	3	12	18	1.25	2.5
3.7	5	18	27	0.8	1.5
5.5	7.5	25	37.5	0.5	1.2
7.5	10	35	52.5	0.4	0.8
11	15	55	82.5	0.25	0.5
15	20	80	120	0.2	0.4
18.5	25	80	120	0.2	0.4
22	30	100	150	0.15	0.3
30	40	130	195	0.1	0.2
37	50	160	240	0.075	0.15

Appendix B Accessories | VFD-B Series

460V, 50/60Hz, 3-Phase

kW	HP	Fundamental	Max.	Inductar	nce (mH)
KVV	KVV TP	Amps	continuous Amps	3% impedance	5% impedance
0.75	1	4	6	9	12
1.5	2	4	6	6.5	9
2.2	3	8	12	5	7.5
3.7	5	12	18	2.5	4.2
5.5	7.5	18	27	1.5	2.5
7.5	10	18	27	1.5	2.5
11	15	25	37.5	1.2	2
15	20	35	52.5	0.8	1.2
18.5	25	45	67.5	0.7	1.2
22	30	45	67.5	0.7	1.2
30	40	80	120	0.4	0.7
37	50	80	120	0.4	0.7
45	60	100	150	0.3	0.45
55	75	130	195	0.2	0.3
75	100	160	240	0.15	0.23

575V, 50/60Hz, 3-Phase


kW	HP	Fundamental Amps	Max. continuous Amps	Inductance (mH)	
				3% impedance	5% impedance
0.75	1	2	3	20	32
1.5	2	4	6	9	12
2.2	3	4	6	9	12
3.7	5	8	12	5	7.5
5.5	7.5	8	12	3	5
7.5	10	12	18	2.5	4.2
11	15	18	27	1.5	2.5
15	20	25	37.5	1.2	1.8

kW	ЦD	HP Fundamental	Max. continuous Amps	Inductance (mH)		
NVV		Amps		3% impedance	5% impedance	
18.5	25	25	37.5	1.2	1.8	
22	30	35	52.5	0.8	1.2	
30	40	45	67.5	0.7	1.2	
37	50	55	82.5	0.5	0.85	
45	60	80	120	0.4	0.7	
55	75	80	120	0.4	0.7	
75	100	100	150	0.3	0.45	

B.6.3 Applications for AC Reactor


Connected in input circuit

Application 1	Question
When more than one AC motor drive is connected to the same power, one of them is ON during operation.	When applying to one of the AC motor drive, the charge current of capacity may cause voltage ripple. The AC motor drive may damage when over current occurs during operation.

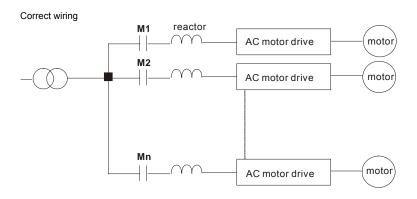


Application 2	Question
	Surges will be generated at the instant of silicon rectifier switching on/off. These surges may damage the mains circuit.

Correct wiring

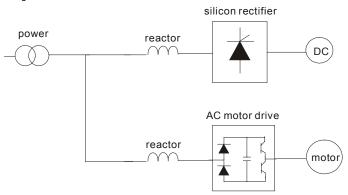


Application 3	Question
Used to improve the input power factor, to reduce harmonics and provide protection from AC line disturbances _₹ (surges, switching spikes, short interruptions, etc.). AC line reactor should be installed when the power supply capacity is 500kVA or more and exceeds 6 times the inverter capacity, or the mains wiring distance ≤ 10m.	When power capacity is too large, line impedance will be small and the charge current will be too large. That may damage AC motor drive due to higher rectifier temperature.


Correct wiring

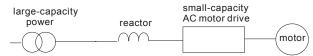


B.7 Zero Phase Reactor (RF220X00A)

Dimensions are in millimeter and (inch)

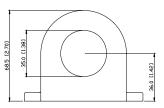

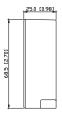

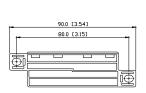

	Мо	Motor		Recommend ed Wire Size	Wiring
	HP	kW	Qty.	(mm ²)	Method
	1/4	0.2			
	1/2	0.5		0.5 - 5.5	
	1	0.75		0.5 - 5.5	Diagram
	2	1.5	1		Ă
က္သ	3	2.2		3.5 - 5.5	
ř	5	3.7		5.5	
230 V Series	7.5	5.5		8	
>	10	7.5	1	0	
530	15	11		22	
`	20	15	4	30	Diagram
	25	18.5	4	30	В
	30	22		38	
	40	30	Į	38 - 100	Diagram A
	50	37		00 100	
	1/4	0.2	1	0.5 - 5.5	
	1/2	0.5			
	1	0.75			
	3	1.5			
		2.2	ļ '		
	5	3.7			
es	7.5	5.5	Į	3.5 - 5.5	
460 V Series	10	7.5		5.5	
>	15	11		8 - 14	
ő	20	15			
46	25	18.5		14	
	30	22		22	Diagram
	40	30	4		В
	50	37	ļ	30	
	60	45		50	
	75	55]	38 - 100	
	100	75		30 100	
L	1	0.75	Į		
5757	3	1.5	1	0.8 – 5.3	Diagram
57		2.2		3.0 0.0	Ā
	5	3.7			

	Мо	Motor		Recommend	Wiring
	HP	kW			
4)	7.5	5.5	1	3.3 - 5.3	Diagram
	10	7.5			
	15	11			
	20	15			
	25	18.5		8.4 - 33.3	
	30	22			
	40	30	4		Diagram
	50	37	4	13.3 - 33.6	В
	60	45			
	75	55		42.4 - 85	
	100	75		42.4 - 00	

Diagram A

Please wind each wire 4 times around the core. The reactor must be put at inverter output as close as possible.


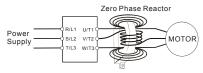


Diagram B

Please put all wires through 4 cores in series without winding.

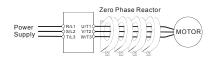

B.8 DC Choke Recommended Values

230V DC Choke

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	9	7.50
	1.5	2	12	4.00
	2.2	3	18	2.75
	3.7	5	25	1.75
	5.5	7.5	32	0.85
230Vac	7.5	10	40	0.75
50/60Hz	11	15	62	0.61
3-Phase	15	20	92	0.60
	18.5	25	110	0.30
	22	30	125	0.22
	30	40	-	Built-in
	37	50	-	Built-in
230Vac	0.75	1	9	12.00
50/60Hz	1.5	2	12	8.00
1-Phase	2.2	3	18	6.00

B-36 Revision June 2006, BE14

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	4	25.00
	1.5	2	9	11.50
	2.2	3	9	11.50
	3.7	5	12	6.00
	5.5	7.5	18	3.75
	7.5	10	25	4.00
460Vac	11	15	32	2.68
50/60Hz	15	20	50	2.00
3-Phase	18.5	25	62	1.20
	22	30	80	1.25
	30	40	92	Built-in
	37	50	110	Built-in
	45	60	125	Built-in
	55	75	200	Built-in
	75	100	240	Built-in

575V DC Choke

Input voltage	kW	HP	DC Amps	Inductance (mh)
	0.75	1	4	25
	1.5	2	9	11.5
	2.2	3	9	11.5
	3.7	5	12	6
	5.5	7.5	18	6
	7.5	10	25	4
575Vac	11	15	32	2.68
50/60Hz	15	20	40	2.5
3-Phase	18.5	25	40	2.5
	22	30	50	2
	30	40		Built-in
	37	50		Built-in
	45	60		Built-in
	55	75		Built-in
	75	100		Built-in

B.9 Non-fuse Circuit Breaker Chart

Per UL 508C, paragraph 45.8.4, part a:

- For 1-phase drives, the current rating of the breaker shall be 4 times maximum input current rating.
- For 3-phase drives, the current rating of the breaker shall be 4 times maximum output current rating.

(Refer to Appendix A for rated input/output current)

1-pha	ise	3-phase				
Model	Recommended non-fuse breaker (A)	Model	Recommended non-fuse breaker (A)	Model	Recommended non-fuse breaker (A)	
VFD007B21A	20	VFD007B23A	10	VFD220B23A	175	
VFD015B21A/B	30	VFD007B43A	5	VFD220B43A	100	
VFD022B21A	50	VFD007B53A	5	VFD220B53A	60	
		VFD015B23A/B	15	VFD300B23A	225	
		VFD015B43A	10	VFD300B43A	125	
		VFD015B53A	5	VFD300B53A	75	
		VFD022B23A	30	VFD370B23A	250	
		VFD022B43B	15	VFD370B43A	150	
		VFD022B53A	10	VFD370B53A	100	
		VFD037B23A	40	VFD450B43A	175	
		VFD037B43A	20	VFD450B53A	125	
		VFD037B53A	15	VFD550B43A/C	250	
		VFD055B23A	50	VFD550B53A	150	
		VFD055B43A	30	VFD750B43A/C	300	
		VFD055B53A	20	VFD750B53A	175	
		VFD075B23A	60			
		VFD075B43A	40			
		VFD075B53A	30			
		VFD110B23A	100			
		VFD110B43A	50			
		VFD110B53A	40			
		VFD150B23A	125			
		VFD150B43A	60			
		VFD150B53A	40			
		VFD185B23A	150			
		VFD185B43A	75			
		VFD185B53A	50	-		

B-38 Revision June 2006, BE14


B.10 Fuse Specification Chart

Smaller fuses than those shown in the table are permitted.

Madal	I (A)	I (A)		Line Fuse
Model	Input	Output	I (A)	Bussmann P/N
VFD007B21A	11.9	5.0	20	JJN-20
VFD007B23A	5.7	5.0	10	JJN-10
VFD007B43A	3.2	2.7	5	JJS-5
VFD007B53A	1.2	1.7	3	JJS-3
VFD015B21A/B	15.3	7.0	30	JJN-30
VFD015B23A/B	7.6	7.0	15	JJN-15
VFD015B43A	4.3	4.2	10	JJS-10
VFD015B53A	3.1	3.5	5	JJS-6
VFD022B21A	22.0	11	50	JJN-50
VFD022B23A	15.5	11	30	JJN-30
VFD022B43B	5.9	5.5	15	JJS-15
VFD022B53A	4.0	4.5	10	JJS-10
VFD037B23A	20.6	17	40	JJN-40
VFD037B43A	11.2	8.5	20	JJS-20
VFD037B53A	8.3	6.7	15	JJS-15
VFD055B23A	26	25	50	JJN-50
VFD055B43A	14	13	30	JJS-30
VFD055B53A	10.3	10	20	JJS-20
VFD075B23A	34	33	60	JJN-60
VFD075B43A	19	18	40	JJS-40
VFD075B53A	13.8	13.5	25	JJS-25
VFD110B23A	50	49	100	JJN-100
VFD110B43A	25	24	50	JJS-50
VFD110B53A	18.2	19	35	JJS-35
VFD150B23A	60	65	125	JJN-125
VFD150B43A	32	32	60	JJS-60
VFD150B53A	22	22	40	JJS-40
VFD185B23A	75	75	150	JJN-150
VFD185B43A	39	38	75	JJS-70
VFD185B53A	27.7	27	50	JJS-50
VFD220B23A	90	90	175	JJN-175
VFD220B43A	49	45	100	JJS-100
VFD220B53A	32	34	60	JJS-60
VFD300B23A	110	120	225	JJN-225
VFD300B43A	60	60 41	125 75	JJS-125
VFD300B53A	41			JJS-70
VFD370B23A VFD370B43A	142 63	145 73	250 150	JJN-250 JJS-150
	52	73 52		JJS-150 JJS-100
VFD370B53A	90	91	100 175	JJS-100 JJS-175
VFD450B43A VFD450B53A	90 62	91 62	175 125	JJS-175 JJS-125
VFD450B53A VFD550B43A/C	130	110	250	JJS-125 JJS-250
VFD550B43A/C VFD550B53A	74	80	150	JJS-250 JJS-150
VFD750B53A VFD750B43A/C	160	150		JJS-150 JJS-300
	91	150	300 175	JJS-300 JJS-175
VFD750B53A	91	100	1/5	JJ2-1/5

B.11 PU06

B.11.1 Description of the Digital keypad VFD-PU06

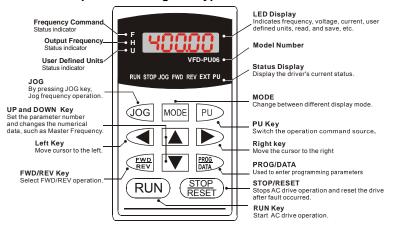

B.11.2 Explanation of Display Message


•	
Display Message	Descriptions
5000	The AC motor drive Master Frequency Command.
* 5888	The Actual Operation Frequency present at terminals U, V, and W.
. :8000	The custom unit (u)
8 5.8	The output current present at terminals U, V, and W.
-6890	Press to change the mode to READ. Press PROG/DATA for about 2 sec or until it's flashing, read the parameters of AC drive to the digital keypad PU06. It can read 4 groups of parameters to PU06. (read 0 – read 3)
58 ₀ E-	Press to change the mode to SAVE. Press PROG/DATA for about 2 sec or until it's flashing, then write the parameters from the digital keypad PU06 to AC drive. If it has saved, it will show the type of AC motor drive.

B-40 Revision June 2006, BE14

Display Message	Descriptions			
08-00	The specified parameter setting.			
10	The actual value stored in the specified parameter.			
E.F.	External Fault			
-End-	"End" displays for approximately 1 second if the entered input data have been accepted. After a parameter value has been set, the new value is automatically stored in memory. To modify an entry, use the or keys.			
-6	"Err" displays if the input is invalid.			
[81-33]	Communication Error. Please check the AC motor drive user manual (Chapter 5, Group 9 Communication Parameter) for more details.			

B.11.3 Operation Flow Chart

VFD-PU06 Operation Flow Chart

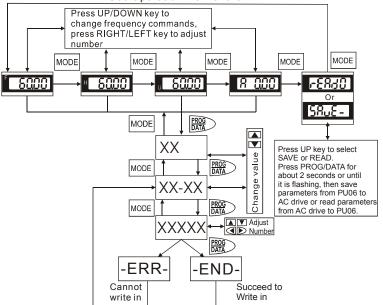

This page intentionally left blank.

B-42 Revision June 2006, BE14

Appendix C How to Select the Right AC Motor Drive

The choice of the right AC motor drive for the application is very important and has great influence on its lifetime. If the capacity of AC motor drive is too large, it cannot offer complete protection to the motor and motor maybe damaged. If the capacity of AC motor drive is too small, it cannot offer the required performance and the AC motor drive maybe damaged due to overloading.

But by simply selecting the AC motor drive of the same capacity as the motor, user application requirements cannot be met completely. Therefore, a designer should consider all the conditions, including load type, load speed, load characteristic, operation method, rated output, rated speed, power and the change of load capacity. The following table lists the factors you need to consider, depending on your requirements.

ltem		Related Specification			
		Speed and torque characteristics	Time ratings	Overload capacity	Starting torque
Load type	Friction load and weight load Liquid (viscous) load Inertia load Load with power transmission	•			•
Load speed and torque characteristics	Constant torque Constant output Decreasing torque Decreasing output	•	•		
Load characteristics	Constant load Shock load Repetitive load High starting torque Low starting torque	•	•	•	•
Continuous operation, Short-time operation Long-time operation at medium/low speeds			•	•	
Maximum output current (instantaneous) Constant output current (continuous)		•		•	
Maximum frequency, Base frequency		•			
Power supply transformer capacity or percentage impedance Voltage fluctuations and unbalance Number of phases, single phase protection Frequency				•	•
Mechanical friction, losses in wiring				•	•
Duty cycle modification			•		

C.1 Capacity Formulas

1. When one AC motor drive operates one motor

The starting capacity should be less than 1.5x rated capacity of AC motor drive

The starting capacity=

$$\frac{k \times N}{973 \times \eta \times \cos \varphi} \left(T_L + \frac{GD^2}{375} \times \frac{N}{t_A} \right) \leq 1.5 \times the \ _capacity \ _of \ _AC \ _motor \ _drive(kVA)$$

2. When one AC motor drive operates more than one motor

- 2.1 The starting capacity should be less than the rated capacity of AC motor drive
 - Acceleration time ≤60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_r + n_s (k_{s-1}) \right] = P_{Cl} \left[1 + \frac{n_s}{n_r} (k_{s-1}) \right] \le 1.5 \times the _capacity_of_AC_motor_drive(kVA)$$

■ Acceleration time ≥60 seconds

The starting capacity=

$$\frac{k \times N}{\eta \times \cos \varphi} \left[n_r + n_s \left(k_{s-1} \right) \right] = Pc_1 \left[1 + \frac{n_s}{n_r} \left(k_{s-1} \right) \right] \le the _capacity_of_AC_motor_drive(kVA)$$

- 2.2 The current should be less than the rated current of AC motor drive(A)
 - Acceleration time ≤60 seconds

$$n_{r} + I_{M} \left[1 + \frac{n_{s}}{n_{r}} (k_{s} - 1) \right] \leq 1.5 \times the _rated _current _of _AC _motor _drive(A)$$

■ Acceleration time ≥60 seconds

$$n_T + I_M \Big[1 + \frac{n_S}{n_T} (k_S - 1) \Big] \le the _rated _current _of _AC _motor _drive(A)$$

2.3 When it is running continuously

 The requirement of load capacity should be less than the capacity of AC motor drive(kVA)

The requirement of load capacity=

$$\frac{k \times P_{M}}{\eta \times \cos \varphi} \le the _capacity_of _AC_motor_drive(kVA)$$

■ The motor capacity should be less than the capacity of AC motor drive

$$k \times \sqrt{3} \times V_M \times I_M \times 10^{-3} \le the_capacity_of_AC_motor_drive(kVA)$$

■ The current should be less than the rated current of AC motor drive(A)

$$k \times I_M \leq the_rated_current_of_AC_motor_drive(A)$$

Symbol explanation

 P_M : Motor shaft output for load (kW)

 η : Motor efficiency (normally, approx. 0.85)

 $\cos \varphi$: Motor power factor (normally, approx. 0.75)

 V_M : Motor rated voltage(V)

 I_M : Motor rated current(A), for commercial power

k : Correction factor calculated from current distortion factor (1.05 - 1.1, depending

on PWM method)

 P_{C1} : Continuous motor capacity (kVA)

: Starting current/rated current of motor

 n_T : Number of motors in parallel

 n_s : Number of simultaneously started motors

GD² : Total inertia (GD²) calculated back to motor shaft (kg m²)

 T_L : Load torque

t_A: Motor acceleration time

N : Motor speed

C.2 General Precaution

Selection Note

- 1. When the AC Motor Drive is connected directly to a large-capacity power transformer (600kVA or above) or when a phase lead capacitor is switched, excess peak currents may occur in the power input circuit and the converter section may be damaged. To avoid this, use an AC input reactor (optional) before AC Motor Drive mains input to reduce the current and improve the input power efficiency.
- When a special motor is used or more than one motor is driven in parallel with a single AC Motor Drive, select the AC Motor Drive current ≥1.25x(Sum of the motor rated currents).
- 3. The starting and accel./decel. characteristics of a motor are limited by the rated current and the overload protection of the AC Motor Drive. Compared to running the motor D.O.L. (Direct On-Line), a lower starting torque output with AC Motor Drive can be expected. If higher starting torque is required (such as for elevators, mixers, tooling machines, etc.) use an AC Motor Drive of higher capacity or increase the capacities for both the motor and the AC Motor Drive.
- 4. When an error occurs on the drive, a protective circuit will be activated and the AC Motor Drive output is turned off. Then the motor will coast to stop. For an emergency stop, an external mechanical brake is needed to quickly stop the motor.

Parameter Settings Note

- The AC Motor Drive can be driven at an output frequency up to 400Hz (less for some models) with the digital keypad. Setting errors may create a dangerous situation. For safety, the use of the upper limit frequency function is strongly recommended.
- High DC braking operating voltages and long operation time (at low frequencies) may cause overheating of the motor. In that case, forced external motor cooling is recommended.
- Motor accel./decel. time is determined by motor rated torque, load torque, and load inertia.


4. If the stall prevention function is activated, the accel./decel. time is automatically extended to a length that the AC Motor Drive can handle. If the motor needs to decelerate within a certain time with high load inertia that can't be handled by the AC Motor Drive in the required time, either use an external braking resistor and/or brake unit, depending on the model, (to shorten deceleration time only) or increase the capacity for both the motor and the AC Motor Drive

C.3 How to Choose a Suitable Motor

Standard motor

When using the AC Motor Drive to operate a standard 3-phase induction motor, take the following precautions:

- 1. The energy loss is greater than for an inverter duty motor.
- Avoid running motor at low speed for a long time. Under this condition, the motor temperature may rise above the motor rating due to limited airflow produced by the motor's fan. Consider external forced motor cooling.
- When the standard motor operates at low speed for long time, the output load must be decreased.
- 4. The load tolerance of a standard motor is as follows:

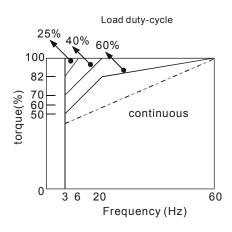

Appendix C How to Select the Right AC Motor Drive | VFD-B Series

- If 100% continuous torque is required at low speed, it may be necessary to use a special inverter duty motor.
- Motor dynamic balance and rotor endurance should be considered once the operating speed exceeds the rated speed (60Hz) of a standard motor.
- Motor torque characteristics vary when an AC Motor Drive instead of commercial power supply drives the motor. Check the load torque characteristics of the machine to be connected
- 8. Because of the high carrier frequency PWM control of the VFD series, pay attention to the following motor vibration problems:
 - Resonant mechanical vibration: anti-vibration (damping) rubbers should be used to mount equipment that runs at varying speed.
 - Motor imbalance: special care is required for operation at 50 or 60 Hz and higher frequency.
 - To avoid resonances, use the Skip frequencies.
- 9. The motor fan will be very noisy when the motor speed exceeds 50 or 60Hz.

Special motors:

1. Pole-changing (Dahlander) motor:

The rated current is differs from that of a standard motor. Please check before operation and select the capacity of the AC motor drive carefully. When changing the pole number the motor needs to be stopped first. If over current occurs during operation or regenerative voltage is too high, please let the motor free run to stop (coast).

2. Submersible motor:

The rated current is higher than that of a standard motor. Please check before operation and choose the capacity of the AC motor drive carefully. With long motor cable between AC motor drive and motor, available motor torque is reduced.

3. Explosion-proof (Ex) motor:

Needs to be installed in a safe place and the wiring should comply with the (Ex) requirements. Delta AC Motor Drives are not suitable for (Ex) areas with special precautions.

4. Gear reduction motor:

The lubricating method of reduction gearbox and speed range for continuous operation will be different and depending on brand. The lubricating function for operating long time at low speed and for high-speed operation needs to be considered carefully.

5. Synchronous motor:

The rated current and starting current are higher than for standard motors. Please check before operation and choose the capacity of the AC motor drive carefully. When the AC motor drive operates more than one motor, please pay attention to starting and changing the motor.

Power Transmission Mechanism

Pay attention to reduced lubrication when operating gear reduction motors, gearboxes, belts and chains, etc. over longer periods at low speeds. At high speeds of 50/60Hz and above, lifetime reducing noises and vibrations may occur.

Motor torque

The torque characteristics of a motor operated by an AC motor drive and commercial mains power are different.

Below you'll find the torque-speed characteristics of a standard motor (4-pole, 15kW):

Appendix C How to Select the Right AC Motor Drive | VFD-B Series

