


## Replacement for old style Pneumatic Boosting Cylinder

There are three solenoid valves installed on the column. The middle one is used for Pneumatic Boosting Cylinder, and the two  $\phi 10$  PU conveying hoses connect to new Pneumatic Boosting Cylinder (up with down) stud fitting.

The left solenoid valve is used for Pneumatic Boosting Blowing,  $\phi 8$  PU conveying hoses connects to new Pneumatic Boosting Cylinder below.

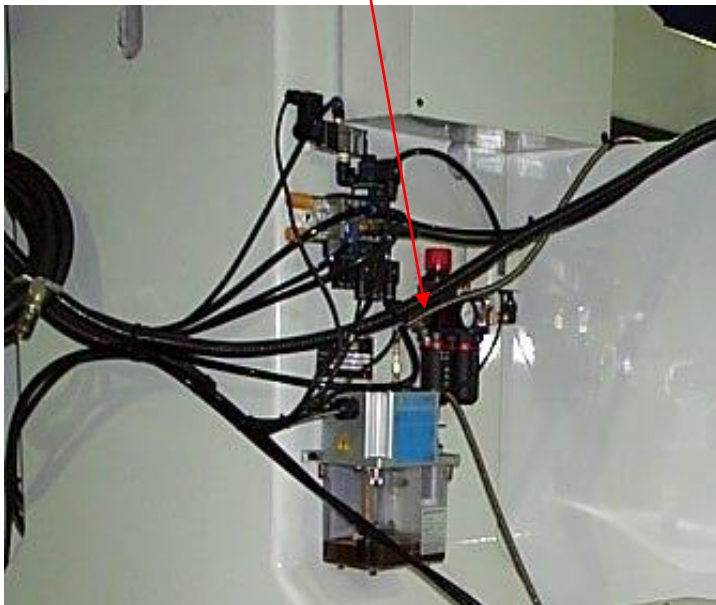

New Pneumatic Boosting Cylinder stud fitting assemble  
1/4"PTx  $\phi 8$  - 90° brass adapter Pneumatic Boosting Blowing  
1/4"PTx  $\phi 10$  - 90° brass adapter (2 PCE)

