
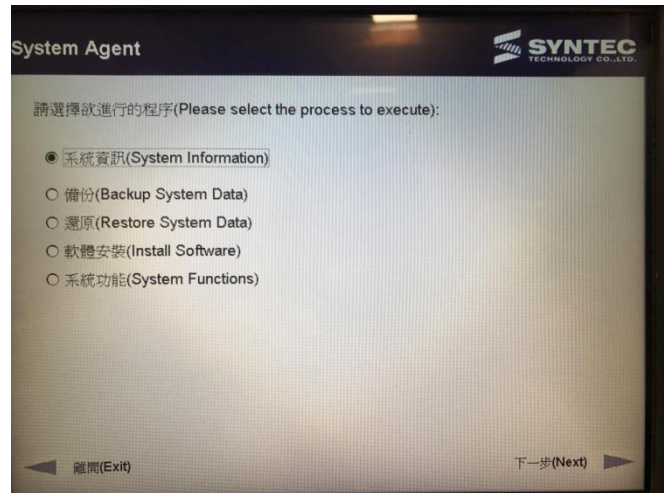



## Format DiskA processing step

**Attention: Before you format DiskA, you need to backup all program file and MB file.**


1. Use USB device to connect keyboard to Syntec controller.
2. Turning on the power and keep pressing left and right key until enter into the System Agent page.

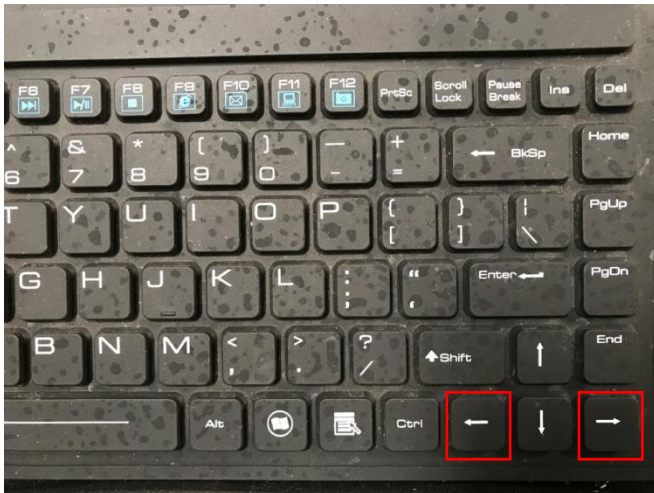


3. move to System Function and then press Next into next page.

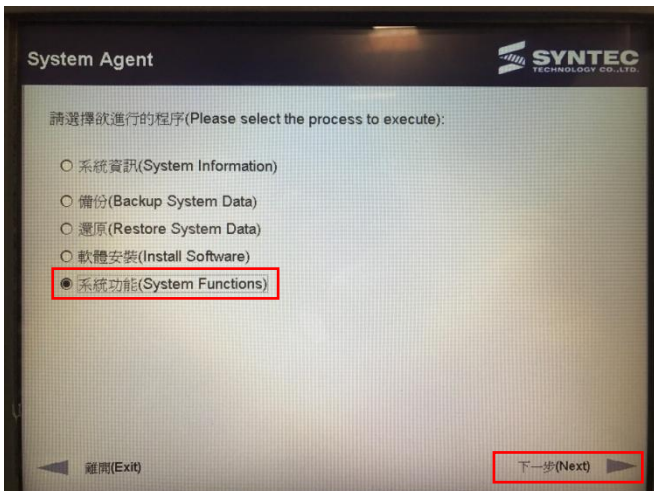


4. Press Next into next page.

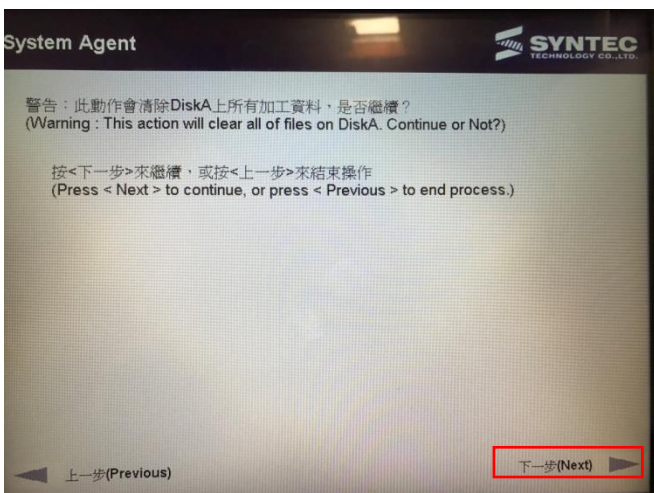

5. Press Next into next page.

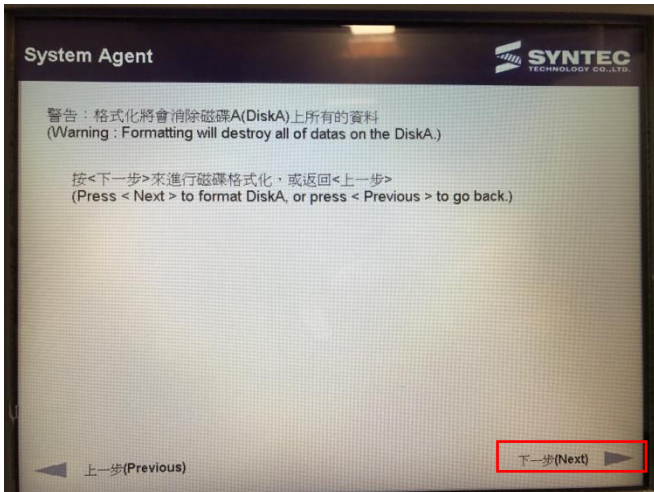

6. Now DiskA format completely and then press next.

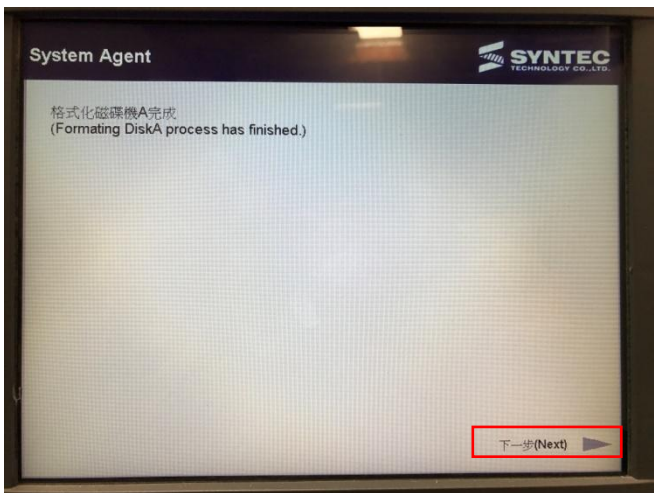


7. Press Exit to leave system.



8. Reboot the system.

9. There are some alarms because system in DiskA has removed. Please Restore MB file to clear these alarms.

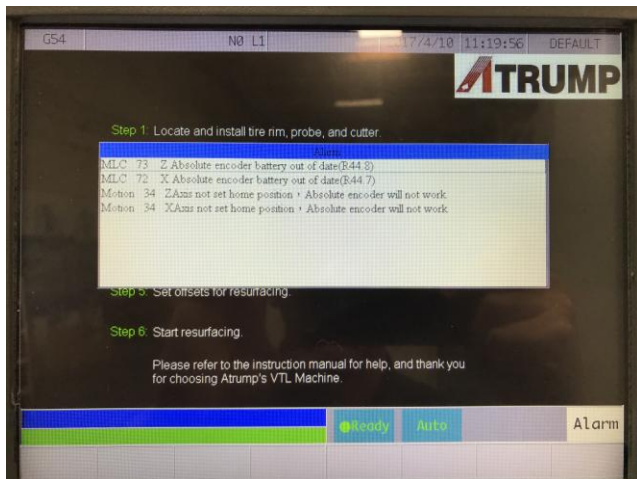

10. Insert all program file to system.

10. Please reset the probe touch point and Cutter touch point.